

GARMIN®



DRAFT

Quick Start Manual	2
Manuel de démarrage rapide	8
Manuale di avvio rapido	15
Schnellstartanleitung	22
Guía de inicio rápido	30
Manual de Início Rápido	37

Quick Start Manual

Introduction

WARNING

Read all instructions carefully before installing and using the system. Improper use could result in serious injury.

See the *Important Safety and Product Information* guide in the product box for product warnings and other important information.

NOTICE

Go to www.garmin.com/ for the latest information including compatibility, software updates, and video tutorials.

Tools Included

- 15mm crowfoot adapter for torque wrench
- 2.5 mm hex key

Tools Needed

- 15 mm pedal wrench
- Bike grease
- 3 mm hex key
- 4 mm hex key

Installing Components

Preparing

- 1 Confirm the compatibility at www.garmin.com/.
- 2 Remove the existing parts.
- 3 Clean the threads, and remove old grease.

NOTICE

Pairing with Your Edge®

Before you can view data on the Edge device, you must pair the devices.

Pairing is the connecting of ANT+® wireless sensors. This procedure contains instructions for the Edge. If you have another compatible device, see your owner's manual, or go to www.garmin.com/.

- 1 Bring the Edge device within range (3 m) of the sensor.

NOTE: Stay 10 m away from other ANT+ sensors while pairing.

- 2 Turn on the Edge device.
- 3 From the home screen, select **Sensors** > **Add Sensor** > **Power**.
- 4 Activate the device a few times.

When the sensor is paired with your Edge device, the sensor status is Connected. You



can customize a data field to display data.

Status LED

Multiple LED flashes indicate a system status that requires your attention. The red LED indicates the battery is low.



LED Activity	Status
1 green flash every 30 seconds.	The system is working properly.
2 flashes every 10 seconds.	The device is not connected.
3 flashes every 10 seconds.	The device is connected, but it cannot communicate with the Edge device.
4 flashes every 10 seconds.	The device is searching for the other device. NOTE: For information about upgrading, see the owner's manual.
5 flashes every 10 seconds.	The installation angle is not set or cannot be detected.
6 flashes every 10 seconds.	There is a hardware installation error.
1 red flash every 30 seconds.	The battery is low.

Troubleshooting

Getting the Owner's Manual

You can get the latest owner's manual from the web.

- 1 Go to www.garmin.com/support.
- 2 Select **Manuals**.
- 3 Follow the on-screen instructions to select your product.

Storage

If you are transporting your device or not using for an extended period of time, Garmin recommends removing and storing it in the product box.



Garmin®, the Garmin logo, ANT+®, and Edge® are trademarks of Garmin Ltd. or its subsidiaries, registered in the USA and other countries.

These trademarks may not be used without the express permission of Garmin.

This product is ANT+® certified. Visit www.thisisant.com/directory for a list of compatible products and apps.

The FCC ID is located in the battery compartment.

FCC ID: IPH-02767 M/N: A02767

El número de registro COFETEL/IFETEL puede ser revisado en el manual a través de la siguiente página de internet.

DRAFT



© 2015 Garmin Ltd. or its subsidiaries

www.garmin.com/support

Printed in Taiwan

January 2015

190-01867-91_01

