



Instructions	2
Instructions	12
Istruzioni	23
Anweisungen	33
Instrucciones	44
Instruções	54

Instructions

Introduction

WARNING

See the *Important Safety and Product Information* guide in the product box for product warnings and other important information.

The device can improve situational awareness. It is not a replacement for attentiveness and good judgement. Always use your best judgment, and operate in a safe manner.

Getting Started

You can use the rear device with the display unit or with your compatible [®] device. This list provides an overview of the installation and setup tasks.

- Charge the device (page 11).
- Install the rear device using one of the included mounts:
 - Install the universal mount (page 3).
 - Install the post mount (page 4).
- If you are using the display, install it on your product (page 6).

NOTE: When you purchase the rear and display devices together, they are already paired.

- If you are using a compatible device, pair the devices (page 9).

The rear LEDs ② fill horizontally to indicate the battery level. The status LED ③ indicates additional device information.

Status LED

LED Activity	Status
Flashing green	The device is charging.
Solid green	Charging is complete.
Flashing red	The battery is low.
Solid red	An error occurred while charging.
8 rapid purple flashes	The device is uploading a software update from Garmin Express™.

Installing the display Device

NOTE: If you do not have a display device, you can skip this task and use a compatible device (page 9).

You can install the device on your product

- 1 Select a secure location to mount the device where it does not interfere with the safe operation of your product.

Display *Device Overview*

①	Device key	Turns the device on and off.
②	Ambient light sensor	Detects available light and automatically adjusts the brightness of the display.
③	Connection status LED	Appears solid blue when the device is paired with the rear unit. Flashes blue when the device is searching for the rear unit.
④	FRONT and REAR device status LEDs	Appears solid white when the device battery is charged and the device is operating normally. Flashes white when the battery is low.

⑤	Threat level LED Charging status LED (page 11)	Changes color based on the potential level of threat.
⑥	position LEDs	Moves up the column as the position gets closer to you.

Turning On the display Device

Hold the device key for 1 second to turn on the device.


The LEDs fill the column to indicate the battery level.

Pairing the rear with Your Compatible Device

Before you can pair the devices, you must update the software.

- 1 Bring the compatible device within range (3 m) of the sensor.

NOTE: Stay 10 m away from other sensors while pairing.

- 2 Turn on the device.
- 3 From the home screen, select  > **Sensors > Add Sensor > .**
- 4 Turn on the rear unit.
- 5 Select your sensor.

Device Information

Charging the Device

NOTICE

To prevent corrosion, thoroughly dry the USB port, the weather cap, and the surrounding area before charging or connecting to a computer.

The device is powered by a built-in lithium-ion battery that you can charge using a standard wall outlet or a USB port on your computer.

NOTE: The device does not charge when outside the approved temperature range (page 11).

- 1 Pull up the weather cap from the USB port.
- 2 Plug the small end of the USB cable into the USB port on the device.
- 3 Plug the large end of the USB cable into an AC adapter or a computer USB port.
- 4 Plug the AC adapter into a standard wall outlet.
- 5 Charge the device completely.

The status LED flashes green while charging. The status LED is solid green when charging is complete.

Specifications

Operating temperature range	From -20° to 60°C (from -4° to 140°F)
Charging temperature range	From 0° to 45°C (from 32° to 113°F)

Support and Updates

Garmin Express provides easy access to these services for Garmin devices.

- Product registration
- Product manuals
- Software updates

Getting the Owner's Manual

You can get the most recent owner's manual from the web.

- 1 Go to www.garmin.com/manuals/.
- 2 View or download the full owner's manual in your preferred format.

Instructions

Introduction

WARNING

Consultez le guide *Informations importantes sur le produit et la sécurité* inclus dans l'emballage du produit pour prendre connaissance des avertissements et autres informations importantes sur le produit.

Garmin®, the Garmin logo, are trademarks of Garmin Ltd. or its subsidiaries, registered in the USA and other countries. Garmin Express™ are trademarks of Garmin Ltd. or its subsidiaries. These trademarks may not be used without the express permission of Garmin.

M/N: A02806

M/N: A02807

El número de registro COFETEL/IFETEL puede ser revisado en el manual a través de la siguiente página de internet.

DRAFT



© 2015 Garmin Ltd. or its subsidiaries

www.garmin.com/support

Printed in Taiwan

May 2015

190-01906-90_0A

