

A02849 Owner's Manual



All rights reserved. Under the copyright laws, this manual may not be copied, in whole or in part, without the written consent of Garmin. Garmin reserves the right to change or improve its products and to make changes in the content of this manual without obligation to notify any person or organization of such changes or improvements. Go to www.garmin.com for current updates and supplemental information concerning the use of this product.



Introduction

△ WARNING

See the *Important Safety and Product Information* guide in the product box for product warnings and other important information.

Device Information

Specifications

Camera input voltage	From 4.75 Vdc to 5.25 Vdc
Battery type	Two AA batteries (NiMH, alkaline, or lithium)
Camera temperature range	From -20° to 70°C (from -4° to 158°F)
Receiver cable temperature range	From -20° to 70°C (from -4° to 158°F)
Receiver cable input voltage	From 10 to 24 V
Receiver cable fuse	2 A, 250 V fast-blow

Symbol DefinitionsThese symbols may appear on the device or accessory labels.

\sim	Alternating current. The device is suitable for alternating current.
	Direct current. The device is suitable for direct current only.
	Fuse. Indicates a fuse specification or location.
<u>R</u>	WEEE disposal and recycling symbol. The WEEE symbol is attached to the product in compliance with the EU directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE). It is intended to deter the improper disposal of this product and to promote reuse and recycling.





+ 46 7744 52020

913-397-8200 1-800-800-1020

0808 238 0000 +44 (0) 870 8501242 +886 2 2642-9199 ext 2

+49 (0)180 6 427646 20 ct./Anruf. a. d. deutschen Festnetz,

Mobilfunk max. 60 ct./Anruf

