



A03610 Sensor and A03650 Sensor	
Instructions .....	2

## Sensor Instructions

### WARNING

See the *Important Safety and Product Information* guide in the product box for product warnings and other important information.

### Installing the A03610 Sensor

**NOTE:** If you do not have this sensor, you can skip this task.

**TIP:** Garmin® recommends you secure your device while installing the sensor.

- 1 Place and hold the sensor
- 2 Pull the strap ① around the device, and attach it to the hook ② on the sensor.

The sensor may be tilted when installed on asymmetrically. This does not affect operation.

- 3 Rotate the to check for clearance.

The sensor should not contact other parts of your device.

**NOTE:** The LED flashes green for five seconds to indicate activity.

## Installing the A03650 Sensor

**NOTE:** If you do not have this sensor, you can skip this task.

**TIP:** Garmin recommends you secure your device while installing the sensor.

- 1 Select the band size that fits your device **①** securely.

The band you select should be the smallest one that stretches across.

- 2 On the other side, place and hold the flat side of the sensor on the inside.
- 3 Pull the bands **②** around and attach them to the hooks **③** on the sensor.

- 4 Rotate to check for clearance.  
The sensor and bands should not contact any part of your device.

**NOTE:** The LED flashes green for five seconds to indicate activity.

- 5 Take a 15 minute device test and inspect the sensor and bands to ensure there is no evidence of damage.

## Pairing the Sensors with Your Garmin Device

The first time you connect a wireless sensor to your device, you must pair the device and sensor. After they are paired, the device connects to the sensor automatically when you start an activity and the sensor is active and within range.

**NOTE:** The pairing instructions differ for each Garmin compatible device. See your owner's manual.


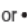
- Bring the Garmin compatible device within 3 m (10 ft.) of the sensor.
- Stay 10 m (33 ft.) away from other wireless sensors while pairing.

After you pair the first time, your Garmin compatible device automatically recognizes the wireless sensor each time it is activated.

## Pairing the Sensor With Your Smartphone

The sensor must be paired directly through the Garmin Connect™ app, instead of

from the settings on your smartphone.

- 1 From the app store on your smartphone,  
  
install and open the Garmin Connect app.
- 2 Bring your smartphone within 3 m (10 ft.) of the sensor.  
**NOTE:** Stay 10 m (33 ft.) away from other wireless sensors while pairing.
- 3 Select an option to add your device to your Garmin Connect account:
  - If this is the first device you have paired with the Garmin Connect app, follow the on-screen instructions.
  - If you have already paired another device with the Garmin Connect app, from the  or  menu, select **Garmin Devices > Add Device**, and follow the on-screen instructions.


## User Replaceable Batteries

### WARNING

See the *Important Safety and Product Information* guide in the product box for product warnings and other important information.

### Replacing the A03610 Sensor Battery

The LED flashes red to indicate a low battery level after activity.

- 1 Locate the circular battery cover  on the front of the sensor.

**2** Twist the cover counter-clockwise until the cover is loose enough to remove.

**3** Remove the cover and the battery ②.

**4** Wait 30 seconds.

**5** Insert the new battery into the cover, observing polarity.

**NOTE:** Do not damage or lose the O-ring gasket.

**6** Twist the cover clockwise so that the marker on the cover aligns with the marker on the case.

**NOTE:** The LED flashes red and green for a few seconds after battery replacement. When the LED flashes green and then stops flashing, the device is active and ready to send data.

## **Replacing the A03650 Sensor Battery**

The LED flashes red to indicate a low battery level after two revolutions.

- 1 Locate the circular battery cover ① on the back of the sensor.

- 2 Twist the cover counter-clockwise until the marker points to unlocked and the cover is loose enough to remove.

- 3 Remove the cover and the battery ②.

- 4 Wait 30 seconds.

- 5 Insert the new battery into the cover, observing polarity.

**NOTE:** Do not damage or lose the O-ring gasket.

- 6 Twist the cover clockwise until the marker points to locked.

**NOTE:** The LED flashes red and green for a few seconds after battery replacement. When the LED flashes green and then stops flashing, the device is active and ready to send data.

## Sensor Specifications

Battery type	User-replaceable CR2032, 3 V
Battery life	Approximately 12 mo. at 1 hr./day
Operating temperature range	From -20° to 60°C (from -4° to 140°F)
Wireless frequency/ protocol	2.4 GHz @ 0 dBm nominal
Water rating	1 ATM*

\*The device withstands pressure equivalent to a depth of 10 m. For more information, go to [www.garmin.com/waterrating](http://www.garmin.com/waterrating).

### Limited Warranty

The Garmin standard limited warranty applies to this accessory. For more information, go to [www.garmin.com/support/warranty.html](http://www.garmin.com/support/warranty.html).



**support.garmin.com**

© 2018 Garmin Ltd. or its subsidiaries  
Garmin®, the Garmin logo, and ANT+® are trademarks of Garmin Ltd. or its subsidiaries, registered in the USA and other countries. Garmin Connect™ is a trademark of Garmin Ltd. or its subsidiaries. These trademarks may not be used without the express permission of Garmin.

This product is ANT+® certified. Visit [www.thisisant.com/directory](http://www.thisisant.com/directory) for a list of compatible products and apps.

El número de registro COFETEL/ FETEL puede ser revisado en el manual a través de la siguiente página de internet.

Printed in Taiwan  
December 2018  
190-02490-90\_01

