




FIND IT AND GO!


Use the Garmin® StreetPilot® 7200 to find your destination and go to it.

Finding a Restaurant

1 Touch **Where To?**

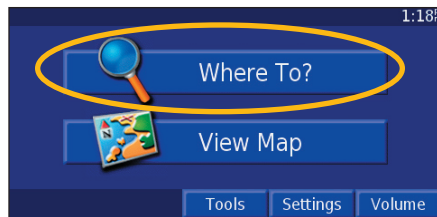


2 Touch **Food, Hotel...**

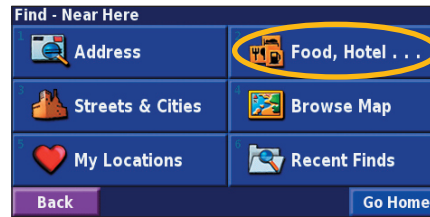

3 Touch **Food & Drink.**




4 Touch a food category.

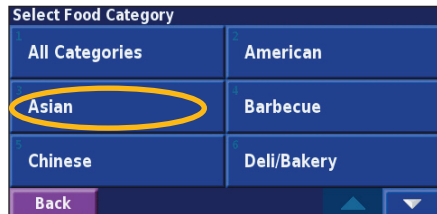

5 Touch the place.



6 Touch **Go To.**

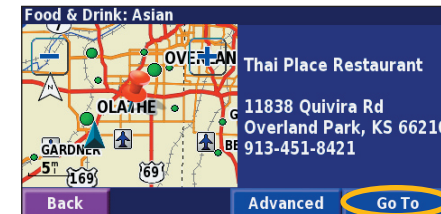




FIND IT AND GO!

Following Your Route

Follow the route to your destination using the map. As you travel, your StreetPilot guides you to your destination with voice prompts, arrows, and directions along the top of the map. If you depart from the original route, your StreetPilot recalculates the route and provides new route instructions.

For more information about using the map, see [pages 8–10](#).

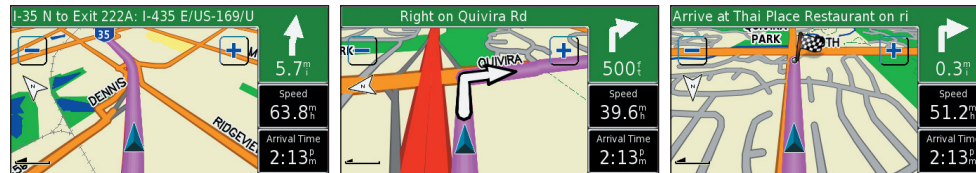

Your route is marked with a magenta line.

Follow the arrows.

A checked flag marks your destination.




WHERE TO?




Finding an Address


1 From the Menu page, touch **Where To?**. Touch **Address**.

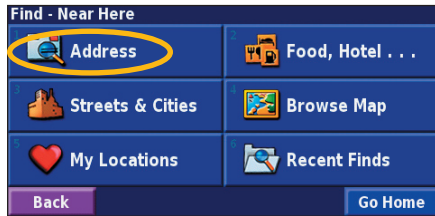

2 Touch a state.

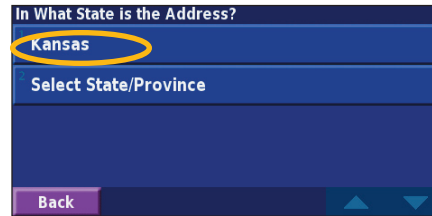


3 Enter the address number and touch **Done**.

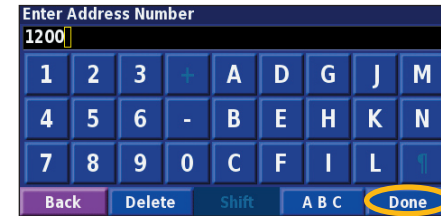


4 Enter the street name and touch **Done**.



5 Select the street and then select the city.

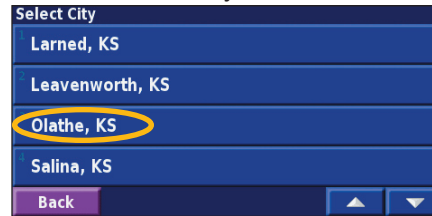

6 Select the address, if necessary. Touch **Go To**.

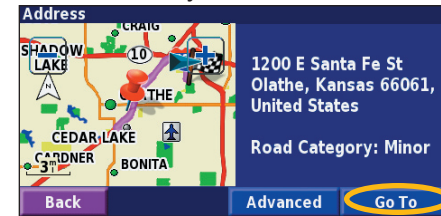




WHERE TO?

Finding a Place by Browsing the Map



From the Menu page, touch **Browse Map** to view different parts of the map. Touch and drag the map to move it. Touch **+** and **-** to zoom in and out.

2 Touch **Go To**, or touch **Advanced** for more

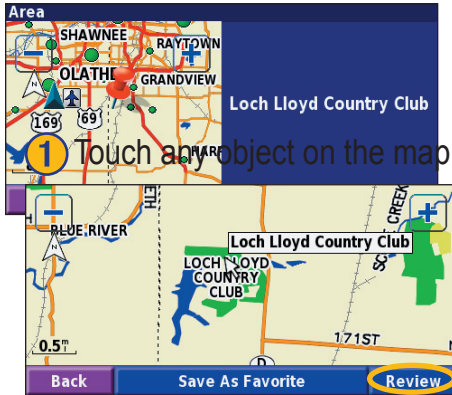

1 Touch any object on the map. Touch **Review**.

Finding Streets and Cities



From the Menu page, touch **Streets & Cities** to search for a city, street, intersection, or exit. Finding Streets & Cities is very similar to finding an address.


Finding Recently Found Places



Your StreetPilot stores the last 50 places you have found in Recent Finds. The most recently

options and places appear at the top.

1 From the Find menu, touch **Recent**

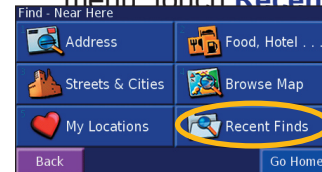

2 Select an item from **Go To**, or touch **Advanced** from the list




Touch **Category** to display recent finds of a certain category, such as **Food, Hotel...**



Changing Your Search Area

You can change the search parameters to find places in a different area.

- 1 Touch any object on the map. Touch **Review**.

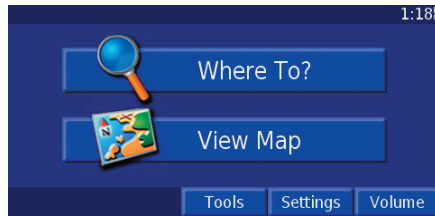


Finding a Place Near Another Place

After you find a place, press the Find key. The Find menu opens and searches for items around the place you just found.


Narrowing Your Search

You can spell the item's name to narrow your search results list.

- 1 Touch any object on the map. Touch **Review**.

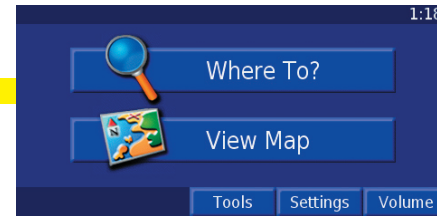


To, or touch **Advanced** for more

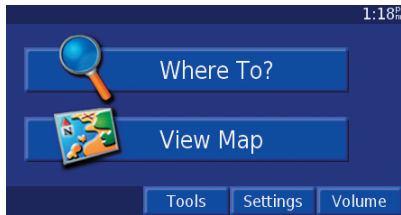

options.


- 1 From the search

- 2 Select one of the

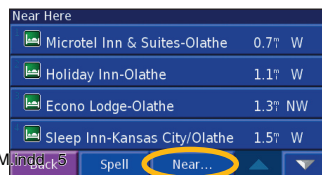

results list, touch **Near...**

 
search options.





WHERE TO?


② Touch **Go To**, or touch **Advanced** for more

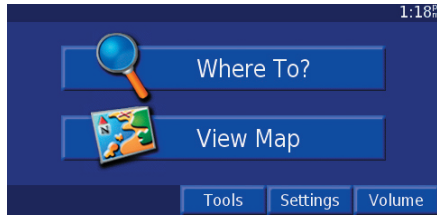

options.

① From the search

② Enter the name.

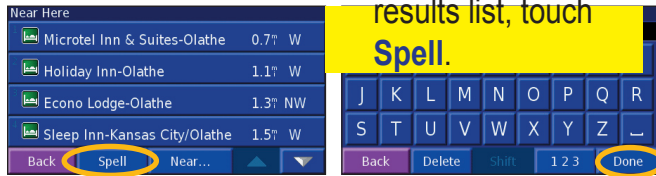

results list, touch **Spell**.

Touch **Done**.




My LOCATIONS

Saving Places You Find

After you have found a place you want to save, select it on the results list. The information page opens, as shown below.

1 From the

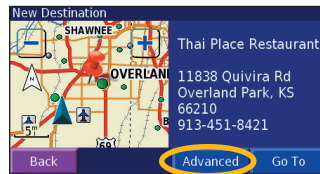


2 Touch **Add As** information page, touch **Advanced**.


Editing Saved Places

From the Menu page, touch **Tools** > **My Data** > **Favorites**.

1 Touch **Edit/Review**

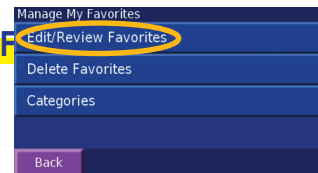

Favorites

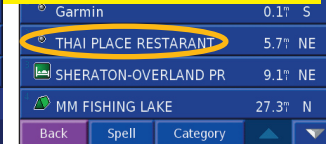


2 Touch the loc to edit.

Finding Saved Places

Your saved places are stored in the Favorites category in My Locations. From the Find Menu, touch **My Locations** > **Favorites**.

3 Touch **Edit**.

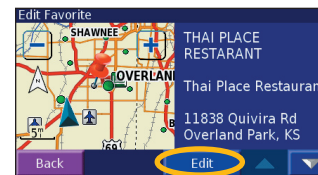

4 Touch an iter edit it.





MY LOCATIONS

Deleting a Saved Place

From the Menu page, touch **Tools > My Data > Favorites > Delete Favorites**.

1 Delete Favorites

- By Selection
- By Category
- Delete All
- Back

2 Select Favorite To Delete All Categories

- HOME 0.07 NE
- Garmin 0.17 S
- THAI PLACE RESTARANT 5.77 NE
- SHERATON-OVERLAND PR 9.27 NE
- Back Spell Category

3 Delete Favorite

THAI PLACE RESTARANT
Thai Place Restaurant
11838 Quivira Rd
Overland Park, KS

Back Delete

3 Touch Delete.

Setting a Home Location

You can set a Home Location for the place you return to most often. Open the Find Menu.

1 Find - Near Here

- Address
- Food, Hotel . . .
- Streets & Cities
- Browse Map
- My Locations
- Recent Finds
- Back Go Home

2 Set Home Location

- From Find Menu
- Find On Map
- Use Current Location
- Back

3 Set Home Location

1200 E 151st St
Olathe, Kansas 66062,
United States
Road Category: Minor

Back Save Home

3 Touch Save Home.

Going Home
After you set your Home Location,

open the Find Menu and touch **Go Home**.





VIEWING THE MAP AND OTHER PAGES

Viewing the Map Page



View Map

From the Menu page, touch **View Map** to open the map. Touch an area of the map to see additional information, as shown below. The position icon ▲ shows your current location.

While navigating a route, touch the green text bar to open the Turn List. See [page 9](#).

Touch **−** to zoom out.

Touch the map to view and browse a 2-D map.

Touch **+** to zoom in.

Touch the **Speed** or **Arrival** data field to open the Trip Computer.

Map Page while Navigating a

Route

[See page 9.](#)

Find
and touch
me.






VIEWING THE MAP AND OTHER PAGES

Trip Computer

The Trip Computer indicates your current speed and provides helpful statistics about your trip.

To view the Trip Computer, select **Speed** or **Arrival** on the map. Or, from the Menu page, touch **Tools > Trip Computer**.

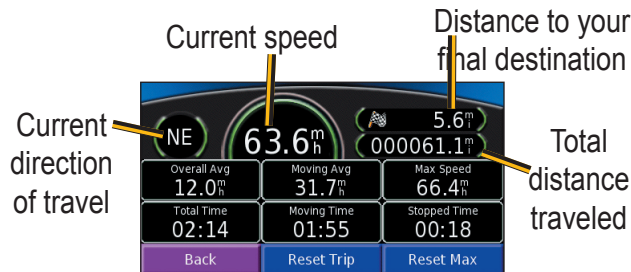


Touch **Reset Trip** to reset all information on the Trip Computer. To reset the Maximum Speed, touch **Reset Max**.

Turn List

The Turn List displays a list of turn-by-turn instructions for your entire route as well as arrival information.

While navigating a route, touch the green text bar to open the Turn List. Or, from the Menu page, touch **Tools > Turn List**.

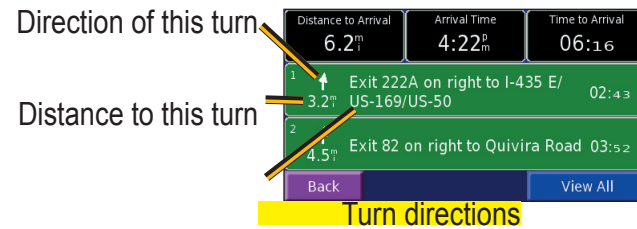

Touch a turn to see the turn on a map (the Next Turn page).
(odometer)

Voice Directions

Press the Speak key while navigating to hear the voice directions.

