 




GPS Info

The GPS Info page displays the GPS receiver status, including current satellite coverage, receiver status, and position accuracy. To access this page, open the Menu page and touch **Tools** > **GPS Info**. From the map, you can touch the signal strength bars while the receiver is establishing a fix to view the GPS Info page.

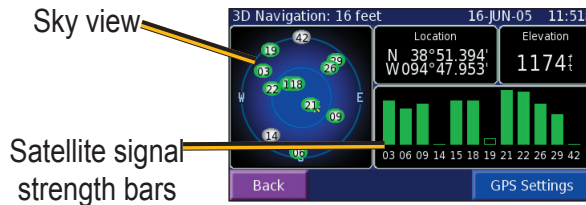

The sky view provides an overhead view of each satellite position relative to your unit's last known location. The outer circle represents the horizon. The inner circle represents an elevation of 45° above the horizon. Any satellite depicted near the center is directly overhead.

A signal strength bar appears for each satellite in view. A hollow bar indicates the GPS receiver has found the satellite and is collecting data. A solid bar indicates the GPS receiver has collected the necessary data, and the satellite is ready for use.

GPS Settings

From the Menu page, touch **Tools** > **GPS Info** > **GPS Settings**. You can also access the GPS Settings by touching the **GPS Settings** button on the GPS Info page.

Use Indoors—touch **Yes** to turn the GPS receiver off and use the unit indoors.

Set Position—if the GPS receiver has not established a fix on your location, you can enter your current location. From the GPS Settings page, touch **Set Position**. Select your location using the map and touch **OK**.

WAAS—

 


CREATING AND EDITING ROUTES


Creating a New Route

From the Menu page, touch **Tools > My Data > Routes**.


1 Touch **Create New**

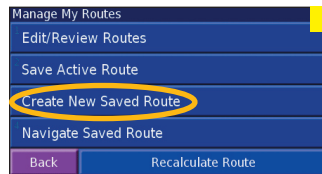

2 Select a starting

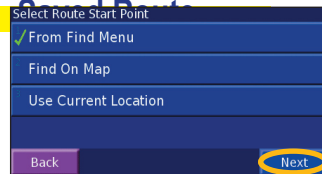 

3 Select an ending

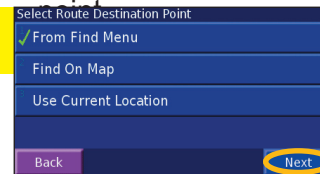 

4 To add a point,



select **Yes** and touch

 
5 Select a midpoint




6 Select an option



7 Select your

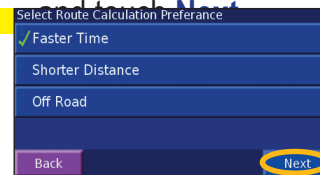

8 Touch **Finish**.

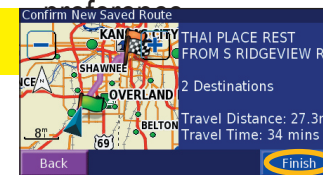 




Editing a Saved Route

From the Menu page, touch **Tools > My Data > Routes**,

- 1 Touch **Edit/Review**
- 2 Touch the route you **want to edit.**

 select
Yes and touch

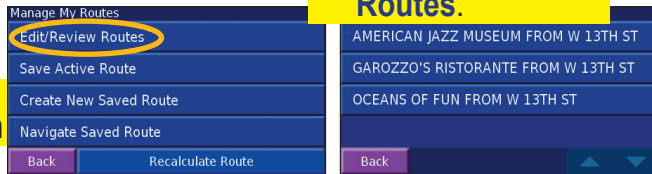

Saving the Active Route

From the Menu page, touch **Tools > My Data > Routes > Save Active Route**.

Touch **Finish**.

Navigating a Saved Route

From the Menu page, touch **Tools > My Data > Routes > Navigate Saved Route**. Touch the route you want to navigate.

 
Recalculating the Route

StreetPilot 7200 Owner's Manual

From the Menu page, touch **Tools > My Data > Routes > Recalculate Route**.

Adding a Detour to a Route

If you need to take a detour from your current route, open the Menu page and touch **Detour**. Select a detour distance or a road to detour around. The unit calculates a new route.

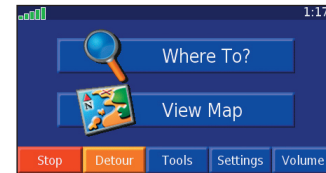


Stopping Your Route

From the Menu page, touch **Stop**.




Adding Avoidances

 
1 From the Menu

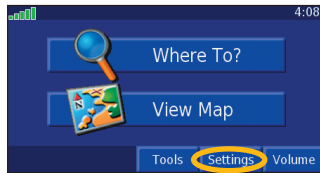


2 Touch **Navigation**.

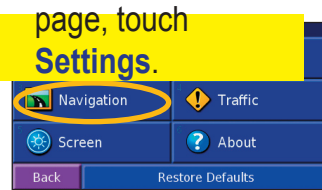 

3 Touch the down arrow and touch

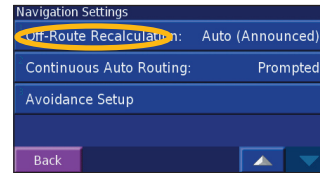 

4 Select the road types

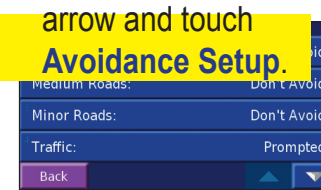 


you want to a


Creating Custom Avoids

You can enter specific areas and roads to avoid in your routes. From the Avoidance Setup menu, touch **Custom Avoids**.

 
1 Touch **Add New**

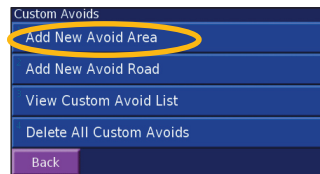


2 Touch the first

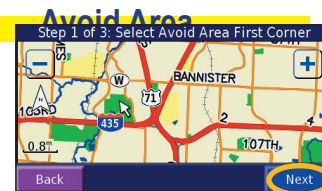 

3 Touch the second

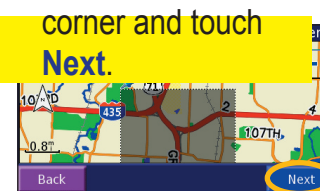 

4 Touch **Finish**.

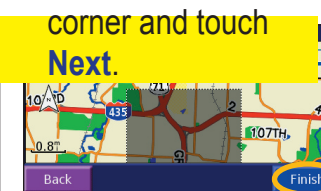 




USING THE LOGS

Adjusting the Track Log

you want to avoid

 As you travel, the StreetPilot creates a bread crumb trail (track log) of your movement. From the Menu page, touch **Tools > My Data > Track Log**.

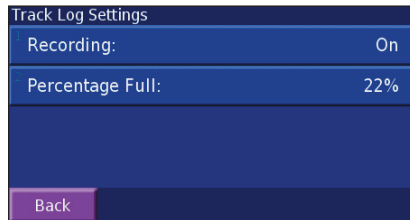

Recording—turn off or on the track log recorder.

Percentage Full—displays the current percentage capacity of the track log. To clear the track log, touch **Percentage Full > Yes > OK**.



LISTENING TO MUSIC

With your 7200, you can listen to XM Radio, MP3 files, and music played over an external device, such as a CD player or MP3 player. You can then broadcast music (and all of the 7200's audio output) over your vehicle's speakers.

 
XM Radio

The GXM™ 30 Smart Antenna enables the 7200 to receive XM signals. You must have a GXM 30 connected to your 7200 and have activated the service to listen to XM Radio. See page XX for information about connecting your GXM 30 and activating service.


Opening XM Radio

After you have connected the GXM 30 and activated your XM Radio service, you can listen to XM Radio.

1 From the Menu page, touch **Tools**.

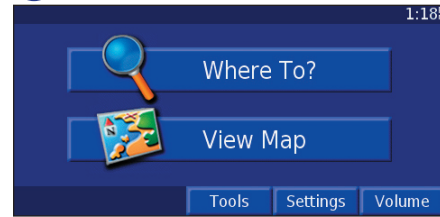

2 Touch **Music**.

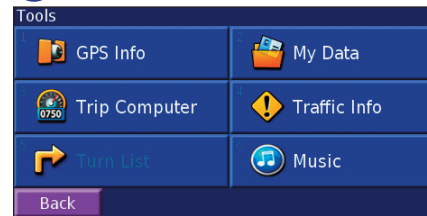 





Listening to XM Radio







XM Radio page

If necessary, touch **Input** to put the unit in XM mode.

Touch  to adjust the volume.

Touch  and  to change Categories. The Category name is listed above the buttons.

Touch  and  to change the Channel within the  Category.

Touch **Browse** to select a Category and then a  Channel.

Saving and Using Presets

Save your favorite channels as presets.

From the XM Radio page, touch **My XM**.

Touch **Add Preset**.

Touch the **Current Channel** to add the channel you are listening to your presets. You can also touch **Browse by Category** to select a different channel.

Touch the preset you want to assign to this channel.

To play a preset channel, touch a preset button along the bottom of the XM Radio page. Also, you can touch **Browse > Presets**.





LISTENING TO MUSIC

Saving Your Favorite Artists

From the XM Radio page, touch **My XM**.

Touch **Add Artist**.

Touch the **Current Artist** to save the artist you are listening to. You can also touch **Browse by Category** to select a different artist.

After you have saved several artists, you can touch the Scan button to scan the XM Radio for those artists. Your 7200 will automatically play a song by an artist in your list. When that song is over, it searches for another artist in your list.

Scanning

From the XM Radio page, touch **Scan**.

Touch Artists to scan your saved artists. You can also select a category to scan. Your 7200 plays a few seconds of each channel in the selected category.

To stop scanning, press **Scanning**.

XM1, 2, and 3

Three sets of presets and artists are provided for you. XM1 can contain a completely different set of presets and artists. For example, XM1 contains Mom's favorites while XM2 contains Dad's favorites.

From the XM Radio page, touch My XM. Touch Change XM1, XM2, XM3. Touch the desired XM.

Subscriptions





Listening to Music over the Vehicle's Speakers

You can listen to the music played by the 7200, such as XM Radio, over your vehicle's speakers! Plug in the 12-Volt adapter to an available outlet in your vehicle.



 


LISTENING TO MUSIC


1 From the Music page, touch the volume button.




2 Touch **Advanced**.

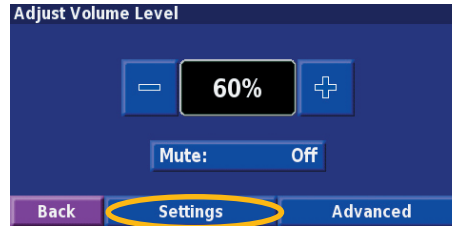


3 Touch **Audio Output**.

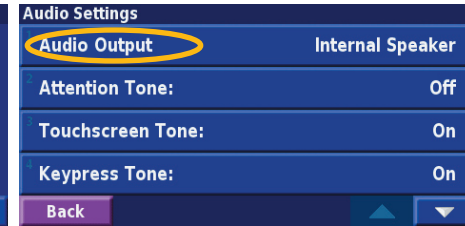 

 4 Touch **FM Transmitter** and then **Next**.

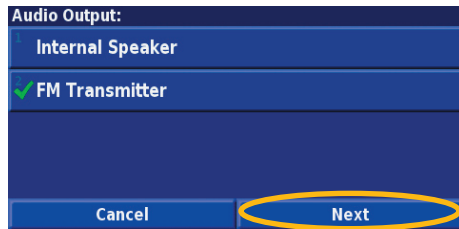

 5 Use the + and - to select a frequency and touch **Done**.

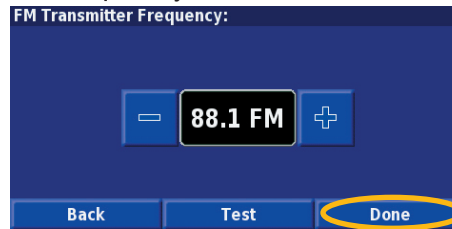

6 Turn on your vehicle's radio and tune it to the frequency you selected in the previous step. The 7200's audio output is broadcast over your vehicle's speakers.

