

DRAFT

Quick Start Manual

Table of Contents

Quick Start Manual	3	Mise sous tension de l'appareil	9
Getting Started	3	Retrait de la batterie	9
Contact Information	3	Installation de l'appareil sur le support moto	10
Installing the Battery	3	Entrée en mode veille	10
Turning On the Device	4	Sortie du mode veille	10
Removing the Battery	4	A propos du support pour moto	10
Installing Your Device in the Mount	4	Réglage du volume	11
Entering Sleep Mode	5	Recherche de positions	11
Exiting Sleep Mode	5	Recherche de concessionnaires	11
About the Mount	5	Recherche d'une position par catégorie	11
Adjusting the Volume	5	A propos des services à proximité des sorties	11
Finding Locations	6	Services Live Garmin	12
Finding Dealers	6	Smartphone Link	12
Finding a Location by Category	6	A propos des fonctions mains libres	12
About Exit Services	6	Activation de la technologie sans fil	13
Garmin Live Services	6	A propos des casques sans fil	13
Smartphone Link	6	Couplage d'un casque sans fil	13
About Hands-Free Features	7	Assistance et mises à jour	13
Enabling Wireless Technology	7	Configuration de Garmin Express	13
About Wireless Headsets	7	Activation des cartes à vie	13
Pairing a Wireless Headset	7	Utilisation de l'aide	14
Support and Updates	7	Guía de inicio rápido	14
Setting Up Garmin Express	7	Inicio	14
Activating Lifetime Maps	8	Información de contacto	14
Using Help	8	Instalación de la batería	14
Manuel de démarrage rapide	8	Encendido del dispositivo	15
Mise en route	8	Extracción de la batería	15
Informations de contact	8	Instalación del dispositivo en el soporte para motocicleta	15
Mise en place de la batterie	8	Acceso al modo de suspensión	16
		Salida del modo de suspensión	16
		Acerca del soporte para motocicleta	16

Ajuste del volumen	16
Búsqueda de ubicaciones	17
Búsqueda de concesionarios	17
Búsqueda de una ubicación por categoría	17
Acerca de los servicios de salida	17
Servicios en directo de Garmin	17
Smartphone Link	17
Acerca de las funciones telefónicas de manos libres	18
Activación de la tecnología inalámbrica	18
Acerca de los auriculares inalámbricos	18
Vinculación de auriculares inalámbricos	18
Asistencia técnica y actualizaciones	18
Configuración de Garmin Express	19
Activación de mapas de por vida	19
Uso de la ayuda	19

DRRAFT

Getting Started

WARNING

See the *Important Safety and Product Information* guide in the product box for product warnings and other important information.


Contact Information

If you encounter any difficulty while using your device, or if you have any questions, contact your dealer.

Installing the Battery

- 1 Locate the screwdriver  that came in the product box.



- 2 Locate the lithium-ion battery in the product box.
- 3 Loosen the screws and remove the battery compartment cover.
- 4 If necessary, insert a microSD™ card  into the device.



- 5 Insert the battery with its cable on top.
- 6 Insert the battery connector into the battery port.



- 7 Replace the battery cover and tighten the screws.

NOTE: Do not over-tighten the screws.

Turning On the Device

NOTE: The device turns on automatically if it is in the optional mount or automotive mount and external power is connected and turned on.

Press the power key.

Removing the Battery

You can remove the battery if you do not plan on using the device for an extended period of time.

- 1 Loosen the screws and remove the battery compartment cover.
- 2 Press and hold the release tab on the battery connector while gently pulling the connector away from the device.



Installing Your Device in the Mount

⚠ CAUTION

Before driving, ensure that the top of the latch is flat and even with the top of the device and the mount.

NOTE: The mount is not included in all kits.

- 1 Fit the bottom of your device into the cradle.

- 2 Tilt your device back until it snaps into place and the latch top is completely flat.

Removing Your Device from the Mount

- 1 Press the release button on the side of the mount.
- 2 Lift out the device.

Entering Sleep Mode

Press the **Power** key.

Exiting Sleep Mode

While the device is in sleep mode, press the **Power** key.

About the Mount

You can access specific device features using the buttons on the mount.

①	Select to zoom in and out on the map. Select to use functionality marked with a + or - .
②	Select to view the map, compass, trip computer, and media player. Hold to open the brightness settings.
③	Select to hear the current prompt when you have a headset connected. Hold to open the volume settings.

Adjusting the Volume

- 1 Select **Volume**.
- 2 Select an option:
 - Select ▲ or ▼ to adjust the volume.
 - Select 🔇 to mute the device.
 - Select 🗨️ for additional options.

Finding Locations

Finding Dealers

You can find a dealer closest to your location.

Select **Where To?** > .

Contact Information

If you encounter any difficulty while using your device, or if you have any questions, contact your dealer.

Finding a Location by Category

- 1 Select **Where To?**.
- 2 Select a category, or select **Categories**.
- 3 If necessary, select a subcategory.
- 4 Select a location.

Searching Within a Category

After you have performed a search for a point of interest, certain categories may display a Quick Search list that shows the last three destinations you selected.

- 1 Select **Where To?**.
- 2 Select a category, or select **Categories**.
- 3 Select a category.
- 4 If applicable, select a destination from the Quick Search list.
- 5 If necessary, select the appropriate destination.

About Exit Services

While you navigate a route, you can find gas, food, lodging, and restrooms near upcoming exits.

Services are listed under tabs by category.

	Gas
	Food

	Lodging
	Restrooms

Garmin Live Services

Before you can use Garmin® Live Services, your device must be connected to a supported phone running Smartphone Link.

Connecting to Smartphone Link provides access to Garmin Live Services. Garmin Live Services provides free and subscription-based plans to view live data on your device, such as traffic conditions and weather.

Some services, like weather, are available as separate apps on your device. Other services, like traffic, enhance the existing navigation features on your device. Features that require access to Garmin Live Services display the Smartphone Link symbol and appear only when the device is connected to Smartphone Link.

Smartphone Link

Smartphone Link is a phone application that allows you to synchronize location data with your phone and access live information using your phone data connection. Your device transfers data from Smartphone Link using wireless technology. Live information is available through free and subscription-based plans from Garmin Live Services.

Saved locations and recently found locations are synchronized with your phone each time your device connects to Smartphone Link.

Downloading Smartphone Link

Smartphone Link is available for some smartphones. See the application store for your phone for compatibility and availability information.

Download Smartphone Link from the application store on your supported phone.

See your phone owner's manual for information on downloading and installing applications.

Connecting to Smartphone Link

Before you can connect to Smartphone Link, you must download and install the Smartphone Link app on your phone.

See your phone owner's manual for more information.

- 1 Start Smartphone Link on your phone.
- 2 From your device, select **Settings** > Transceiver
- 3 Select the Transceiver check box.
- 4 Select the **Discoverable** check box.
- 5 From your phone, select Transceiver.
- 6 From your phone, enable wireless technology, and scan for nearby devices.
- 7 From your phone, select your device from the list of nearby devices.
- 8 Follow the on-screen instructions on your phone and on your device to confirm the pairing request.

✱ appears in the status bar on your device when Smartphone Link is connected.

About Hands-Free Features

NOTE: The device supports most mobile phones and wireless headsets or helmets, although some devices are not compatible. Hands-free or music features may not be available for your phone, headset, or helmet.

Using wireless technology, your device can connect to your mobile phone and wireless headset or helmet to become a hands-free device. To determine whether your device with technology is compatible with your device, go to www.garmin.com/.

Enabling Wireless Technology

- 1 Select **Settings** > Transceiver.
- 2 Select Transceiver.

About Wireless Headsets

NOTE: To listen to high-quality audio wirelessly, you can connect to a headset that supports the required profile.

Using wireless technology, your device can send audio navigation prompts to a wireless headset.

Pairing a Wireless Headset

NOTE: Only one headset can be active at a time.

Before you can receive navigation prompts through your headset, you must pair your device with a compatible mobile headset.

- 1 Place your headset and your device within 33 ft. (10 m) of each other.
- 2 On your device, enable wireless technology.
- 3 On your headset, enable wireless technology.
- 4 Select **Settings** > Transceiver > **Scan for Devices**.
A list of nearby devices appears.
- 5 Select your headset from the list.
- 6 Select **OK**.

Your device sends navigation prompts to your headset as you navigate a route.

Support and Updates

Garmin Express provides easy access to these services for your device.

- Product registration
- Software and map updates
- Product manuals
- Vehicles, voices, and other extras

Setting Up Garmin Express

- 1 Plug the small end of the USB cable into the port on the device.

- 2 Plug the larger end of the USB cable into an available USB port on your computer.
- 3 Go to www.garmin.com/express.
- 4 Follow the on-screen instructions.

Activating Lifetime Maps

NOTE: Lifetime Maps are not applicable to products that do not have pre-loaded maps.

NOTE: Lifetime Maps entitle you to receive map updates when and as such updates are made available by Garmin during the useful life of one compatible Garmin product or as long as Garmin receives map data from a third party supplier, whichever is shorter. For the meaning of a product's "useful life" and for other important terms and conditions, go to www.garmin.com/numapslifetime.

- 1 Go to www.garmin.com/express.
- 2 Follow the on-screen instructions.

NOTE: If you register the device, you can receive e-mail notifications when a map update is available.

Using Help

Select **Apps > Help** to view information about using the device.

Searching Help Topics

Select **Apps > Help > Q**.

Mise en route

AVERTISSEMENT


Consultez le guide *Informations importantes sur le produit et la sécurité* inclus dans l'emballage du produit pour prendre connaissance des avertissements et autres informations importantes sur le produit.

Informations de contact

Si vous rencontrez des difficultés d'utilisation avec l'appareil ou si vous avez des questions, contactez votre concessionnaire

Mise en place de la batterie

- 1 Localisez le tournevis ① fourni avec le produit.

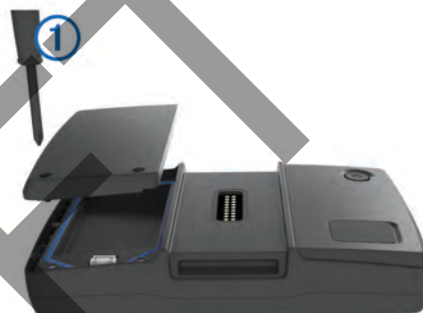

- 2 Localisez la batterie lithium-ion fournie avec le produit.
- 3 Desserrez les vis et ôtez le couvercle du compartiment de la batterie.
- 4 Si besoin, insérez une carte microSD ② dans l'appareil.



© 2013 Garmin Ltd. or its subsidiaries

Garmin®, and the Garmin logo are trademarks of Garmin Ltd. or its subsidiaries, registered in the USA and other countries. nuMaps Lifetime is a trademark of Garmin Ltd. or its subsidiaries. These trademarks may not be used without the express permission of Garmin. microSD™ is a trademark of SD-3C.

Garmin International, Inc.
1200 East 151st Street, Olathe, Kansas 66062, USA

Garmin (Europe) Ltd.
Liberty House, Hounsdown Business Park, Southampton, Hampshire, SO40 9LR, Great Britain

Garmin Corporation
No. 68, Zhangshu 2nd Road, Xizhi Dist. New Taipei City, 221, Taiwan (R.O.C.)

www.garmin.com

This Class III product shall be powered by a LPS power supply.