

F4ECNA00 and F4ECNA01

Instructions

WARNING

See the *Important Safety and Product Information* guide in the product box for product warnings and other important information.

Installing the Device

NOTE: If you do not have this device, you can skip this task.

TIP: Garmin® recommends you secure your product while installing the device.

- 1 Place and hold the device on top of the product.
- 2 Pull the strap ① around, and attach it to the hook ② on the device.

The device may be tilted when installed on an asymmetrical assembly. This does not affect operation.

- 3 Rotate the product to check for clearance.
-

The device should not contact other parts of your product.

NOTE: The LED flashes green for five seconds to indicate activity after two revolutions.

Installing the Device

NOTE: If you do not have this device, you can skip this task.

TIP: Garmin recommends you secure your product while installing the device.

- 1 Select the band size that fits your product securely.

The band you select should be the smallest one that stretches across the product.

- 2 On the non-drive side, place and hold the flat side of the device on the inside of the product.

- 3 Pull the bands ① around the product, and attach them to the hooks ② on the device.

- 4 Rotate the product to check for clearance.

The device should not contact the other parts of your product, or you.

NOTE: The LED flashes green for five seconds to indicate activity after two revolutions.

Pairing the Sensors with Your Device

Pairing is the process of connecting an ANT+™ wireless sensor, with a Garmin ANT+ compatible device.

NOTE: The pairing instructions differ for each Garmin compatible device. See your owner's manual.

- Bring the Garmin compatible device within 3 m of the ANT+ sensor.
- Stay 10 m away from other ANT+ sensors while pairing.

After you pair the first time, your Garmin compatible device automatically recognizes the ANT+ sensor each time it is activated.

Batteries

WARNING

Do not use a sharp object to remove user-replaceable batteries.

Contact your local waste disposal department to properly recycle the batteries. Perchlorate Material – special handling may apply. Go to www.dtsc.ca.gov/hazardouswaste/perchlorate.

Replacing the Battery

The LED flashes red to indicate a low battery level after two revolutions.

- 1 Locate the circular battery cover ① on the back of the sensor.

- 2 Twist the cover counter-clockwise until the marker points to unlocked and the cover is loose enough to remove.

- 3 Remove the cover and the battery ②.

- 4 Wait 30 seconds.

- 5 Insert the new battery with the positive side facing up.

NOTE: Do not damage or lose the O-ring gasket.

- 6 Twist the cover clockwise until the marker points to locked.

NOTE: The LED flashes red and green for a few seconds after battery replacement. When the LED flashes green and then stops flashing, the device is active and ready to send data.

Specifications

Battery type	User-replaceable CR2032, 3 volts
Battery life	Approximately 12 months (1 hour per day)
Water resistance	32.9 ft. (10 m)
Operating temperature range	From -4° to 140°F (from -20° to 60°C)
Radio frequency/ protocol	2.4 GHz ANT+ wireless communications protocol

Limited Warranty

The Garmin standard limited warranty applies to this accessory. For more information, go to www.garmin.com/support/warranty.html.

