



K-9800 CartKey2 User Manual

*Unit 2318-2319, Level 23, Tower 1, Metroplaza
NO. 223 Hing Fong Road, Kwai Fong, N.T., Hong Kong
Tel: + (852) 2413 3050
Fax: + (852) 2413 3051*

INSTRUCTION TO THE USER

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a typical installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna on the device experiencing the interference
- Increase the separation between the Receiver and the equipment experiencing the interference.
- Connect the equipment into an outlet on a circuit different from that to which the Receiver is connected
- Consult the dealer or experienced technician for the device experiencing the interference

In order to maintain compliance with FCC regulations, no changes can be made to this equipment without the approval of Gatekeeper Systems, Inc. The user is cautioned that any changes or modifications made to the equipment without the approval of Gatekeeper Systems, Inc. could void the user's authority to operate this equipment.

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

This Class B digital apparatus complies with Canadian ICES-003.
Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

The ambient temperature is 0°C to 50°C

C €0700

CartKey2 Instructions

The CartKey2 is a handheld device used by store employees to lock or unlock Gatekeeper wheels. The touch pad on the front of the CartKey2 has two buttons labeled “Lock” and “Unlock”. Use the “Unlock” button to unlock carts that have locked wheels. The “Lock” button can be used for different purposes, such as locking carts stored overnight in outdoor cart corrals, as well as to test wheels for operation. If the battery in the CartKey2 runs low, the low-battery indicator light (found in the upper left-hand corner on the front panel of the CartKey2) will remain lit. Care should always be taken not to drop or otherwise damage the CartKey2s. Gatekeeper recommends that you keep at least one CartKey2 in a secure location at all times in order to avoid losing or temporarily misplacing all CartKey2s.



CartKey2 Features Lock/Unlock Signals

UNLOCKING CARTS

1. Hold the CartKey2 12 feet / 4 meters away from the Gatekeeper Smartwheel wheel and hold the CartKey2 3 feet/ 1 meter away from the Gatekeeper GS2 wheel. For best results, angle the bottom of the CartKey2 so it is oriented towards the Gatekeeper wheel (Figure 1).
2. Point the CartKey2 at the Gatekeeper wheel and depress the "Unlock" button. Once unlocked, the Gatekeeper wheel will remain unlocked for ten (10) seconds even if left at the perimeter boundary.

LOCKING CARTS

1. Hold the CartKey2 3 feet / 1 meter away from the Gatekeeper wheel. For best results, angle the bottom of the CartKey2 so it is oriented towards the Gatekeeper wheel (Figure 1),
2. Point the CartKey2 at the Gatekeeper wheel and depress the "Lock" button. This will reset the Gatekeeper wheel to accept the unlock signal.




Figure 1

CHANGING CARTKEY2 BATTERY

CartKey2 batteries will need to be replaced from time to time during the life of the system. If you are having difficulty unlocking or locking the Gatekeeper wheel you may need to replace the battery. In order to replace your CartKey2 battery, perform the following steps. You will need a replacement CR123A 3V lithium battery. These are standard lithium batteries like the kind used in most digital cameras. You will also need a coin in order to open the battery cover (a quarter works best).

STEPS

1. Turn the CartKey2 over so you are looking at the side opposite the front panel. You will see a circular cover with a slot. Place the CartKey2 on a flat surface.
2. Insert your coin into the slot and turn counterclockwise until the battery cover pops up.
3. Remove the battery cover and set aside.
4. Inside the CartKey2, you will see a nylon strap holding the battery in place. Pull up on the nylon strap until the battery pops out.
5. Insert the new battery so it lies on top of the nylon strap (this will ensure easy removal the next time you need to change the battery). Make sure to align the “+” and “—” connectors on the battery with the “+” and “—” indicators inside the CartKey2. Insert the “—” end first and then push down on the battery until it snaps into place.
6. Once the new battery is in place, fold the remaining end of the nylon strap back over the battery.
7. Take the battery cover and place it back on the CartKey2, making sure to line up the notches on the battery cover with the notches on the CartKey2 opening. Push down on the battery cover until it is level with the surface of the CartKey2. Turn the battery cover clockwise.
8. Insert your coin into the slot and turn clockwise until the battery cover clicks into place.

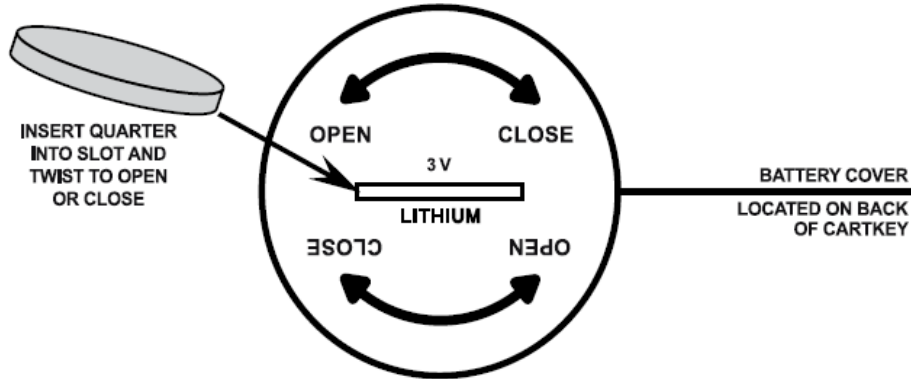

CONTACTING GATEKEEPER SYSTEMS

For more information about the Purchek Door Manager and troubleshooting, to order parts or report an issue, contact the Gatekeeper Systems Inc. regional Customer Support office nearest to your location.

Hong Kong

Gatekeeper Systems (HK), Ltd.
Unit 2318~2319, Level 23, Tower 1, Metroplaza
NO. 223 Hing Fong Road, Kwai Fong, N.T.,
HONG KONG
(852) 2413 3050

USA

Gatekeeper Systems, Inc.
8 Studebaker
Irvine, CA 92618
(888) 808-9433

Canada

Gatekeeper Systems Canada, Ltd.
272 Galaxy Boulevard
Etobicoke, Ontario
Canada
M9W 5R8
(888) 525-3564