

Direct Wire Push Button

Replaces existing doorbell button

Note: This button is not recommended for use on systems which exceed 16 volts.

Installation

Push buttons are typically mounted at the same height above the door sill as the door knob or handle between 36" and 44" above the sill. Locate the two door chime wires emanating from the existing door

chime circuit. Test the door chime by touching the two

wires together,

completing the

circuit. If door

chime does not

sound, check

transformer or

chime. Turn off

power. Attach one

wire to each of the

screw terminals on

the back of the

button. Mount

button in desired

location with two

screws provided.

Install according to

applicable local

electrical codes.

