

Table Of Contents

| | |
|-----------------------------------|-----|
| Button Description | 2-3 |
| Battery Installation | 3 |
| Programming Your Universal Remote | |
| TV | 4 |
| TV Codes | 4-5 |
| VCR | 6 |
| VCR Codes | 6-7 |
| Cable Box | 8 |
| Cable Box Codes | 9 |
| Aux..... | 10 |
| Code Search | 11 |
| Code Retrieval | 11 |
| Sleep Feature | 12 |
| Trouble Shooting | 13 |

Button Description

INDICATOR LIGHT

The Indicator Light flashes to show that the remote is working.

POWER

The POWER button operates the same as your original remote (note: some RCA, GE and ProScan models require you to press the device key to turn the device on and the power key to turn the device off).

CODE SEARCH

Used to program the remote or to search through codes.

TV, VCR, CABLE, AUX

The TV, VCR, CABLE and AUX buttons are used to select the device you want to control.

REW, PLAY, FWD, REC, STOP, PAUSE

The REW (Rewind), PLAY, FWD (Fast Forward), REC (Record), STOP, and PAUSE buttons operate the same as on your original VCR remote. You must press the REC button twice to begin recording.

TV•VCR

The TV•VCR button operates the TV•VCR function of your VCR.

ENTER

The ENTER button operates the same as on your original remote.

VOL & CHAN

The VOL (Volume) and CHAN (Channel) arrows increase or decrease the channel numbers or volume controls.

MUTE

The MUTE button operates the same as on your original remote.

PREV CH

The PREV CH (Previous Channel) button operates the same as on your original remote.

0-9

The number buttons operate the same as on your original remote, and are used for entering device codes.

A•B

The A•B button operates the A•B switch if your cable box has one.

SLEEP

The SLEEP button allows you to set a time to turn off the TV automatically.

Battery Installation

Your Universal Remote requires two (2) new AAA alkaline batteries. To install the batteries:

 
 
1. On the back of the remote, push down on the tab and lift the cover off.
2. Match the batteries to the + and - marks inside the battery case, then insert the batteries.
3. Press the battery cover back into place.

Button Description



Programming For TV

1. Manually turn on the TV.
2. Press and hold the **CODE SEARCH** button until the **INDICATOR LIGHT** lights, then release the **CODE SEARCH** button.
3. Press and release the **TV** button (the **INDICATOR LIGHT** will blink then remain lit).
4. Find the three digit code for your TV in the code list starting below and enter it using the Number Buttons.

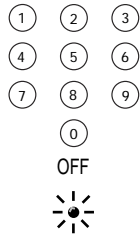


After your code is entered, the **INDICATOR LIGHT** will turn off.

5. Aim the remote at your TV and press the **POWER** button. Your TV should turn off.



Note: If your TV does not respond, try all the codes for your brand. If the codes do not work, or your brand is not listed, try the Code Search method on page 11.

 6. With your TV on, press **CHANNEL UP**. If the TV responds, no further programming is required.
7. Enter your code here for easy reference.

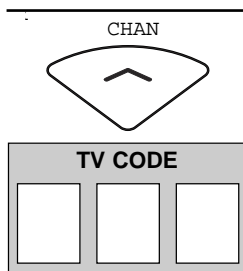

TV Code List






| | | | |
|---------------------|-------------------------|---------------------|------------------------------|
| Abex | 172 | Craig | 038 |
| Admiral..... | 001, 173 | Crown | 038, 171 |
| Adventura | 174 | Curtis Mathes | 000, 004, 006 |
| Aiko | 016 | | 015, 105, 162, 171 |
| Alleron | 046 | CXC | 038 |
| Amtron | 038 | Daewoo..... | 004, 005, 006, 016 |
| Akai..... | 002 | | 017, 018, 127, 171 |
| Anam National | 003, 038 | Daytron..... | 004, 006, 171 |
| AOC | 004, 005, 006 | Dimensia..... | 000 |
| | 007, 175, 176 | Dumont..... | 004, 151 |
| Audiovox | 038 | Dynatech..... | 178 |
| Belcor..... | 004 | Electroband | 002, 176 |
| Bell & Howell | 001, 083, 162 | Electrohome | 003, 004, 006 |
| Bradford | 038 | | 019, 022 |
| Brokwood | 004 | Emerson | 004, 006, 012, 014 |
| Candle..... | 004, 006, 008, 174 | | 023, 024, 025, 026, 027, 028 |
| Capehart | 175 | | 029, 030, 031, 032, 033, 034 |
| Celebrity | 002 | | 035, 036, 037, 038, 039 |
| Centurion | 009 | | 041, 042, 043, 044, 046 |
| Citizen..... | 004, 006, 008, 016 | | 047, 123, 124, 162, 171 |
| | 038, 105, 171, 174, 177 | | 176, 177, 179, 191 |
| Clairtone..... | 176 | Envision | 004, 006 |
| Colortyme..... | 004, 006 | Fisher | 048, 049, 050 |
| Concerto | 004, 006 | | 051, 162, 180 |
| Contec/Cony | 012, 013 | Fujitsu | 046 |
| | 014, 038, 176 | Funai | 038, 046 |

TV Code List Continued

| | | | |
|-----------------------|------------------------------|-----------------------------|-------------------------|
| Futuretec..... | 038 | Pioneer | 004, 006, 090 |
| GE | 000, 003, 004, 006 | | 091, 092, 179, 185 |
| | 022, 052, 054, 055 | Portland | 004, 005, 006, 016, 171 |
| | 087, 164, 165, 166 | Price Club..... | 105 |
| | 167, 168, 181 | Prism | 054 |
| Gibraltar | 004, 151 | ProScan | 000, 181 |
| Goldstar | 004, 005, 006, 012 | Proton | 004, 006, 012 |
| | 019, 056, 057, 058 | | 093, 175 |
| | 155, 156, 171, 172 | Pulsar | 151 |
| Grundy | 038, 046, 171 | Pulser | 004 |
| Hallmark..... | 004, 006 | Quasar | 003, 054, 070, 094 |
| Harvard | 038 | Radio Shack/Realistic | 000, 004 |
| Hitachi | 004, 006, 012 | | 006, 012, 038 |
| | 013, 059, 060 | | 049, 095, 162, 171, 172 |
| | 061, 135, 136, 137 | RCA..... | 000, 003, 004, 005 |
| | 138, 139, 140, 141 | | 006, 007, 019, 096 |
| | 142, 143, 144, 145 | | 098, 099, 100, 101 |
| | 146, 148, 150, 179 | | 102, 103, 129, 179 |
| IMA | 038 | | 181, 187, 188, 190 |
| Infinity | 062 | Rhapsody | 176 |
| Janeil | 174 | Runco | 151 |
| JBL | 062 | Sampo..... | 004, 006, 171, 172, 175 |
| JCB..... | 002 | Samsung | 004, 005, 006 |
| JC Penny..... | 000, 004, 005, 006 | | 012, 015, 017, 019 |
| | 008, 022, 052, 054 | | 104, 105, 106, 171, 172 |
| | 058, 063, 064, 072 | Sansui | 191 |
| | 087, 105, 128, 171 | Samsux | 171 |
| | 172, 181 | Sanyo | 004, 048, 049, 050 |
| Jensen | 004, 006 | | 080, 107, 108, 162 |
| JVC | 012, 013, 054, 060 | | 169, 180 |
| | 065, 066, 067, 089 | Scotch | 006 |
| | 157, 158, 159, 182 | Scott..... | 004, 006, 012, 024 |
| Kawasho..... | 002, 004, 006 | | 035, 038, 046 |
| Kaypani..... | 175 | Sears | 000, 004, 006, 013 |
| Kenwood | 004, 006, 019 | | 019, 046, 048, 049 |
| Kloss Novabeam | 068, 069 | | 050, 051, 066, 071 |
| | 174, 183 | | 072, 109, 110, 162 |
| KTV | 038, 070, 171, 176, 177 | | 180, 181, 189 |
| Loewe | 062 | Sharp..... | 004, 006, 012, 029 |
| Logik | 083 | | 095, 111, 112, 113 |
| Luxman..... | 004, 006 | | 122, 171, 173 |
| LXI..... | 000, 006, 049, 062, 071 | Shogun | 004 |
| | 072, 073, 162, 181 | Signature..... | 001, 083, 115 |
| Megatron | 006, 059 | Simpson | 008 |
| Magnavox..... | 004, 006, 008 | Sonic | 176 |
| | 019, 062, 068, 069, 074 | Sony | 002 |
| | 075, 076, 077, 088, 089 | Soundesign..... | 004, 006, 008 |
| | 130, 131, 132, 133, 134 | | 038, 046 |
| | 183, 184 | Squareview | 189 |
| Majestic | 083 | SSS | 004, 038 |
| Marantz | 004, 006, 062, 078 | Starlite | 038 |
| MEI | 176 | Supre-Macy | 174 |
| Memorex | 001, 006, 082 | Supreme | 002 |
| | 083, 162 | Sylvania | 004, 006, 008, 019 |
| MGA | 004, 005, 006, 019 | | 062, 068, 069, 074 |
| | 022, 051 | | 075, 076, 077, 088 |
| | 079, 080, 082 | | 116, 161, 183, 184 |
| Midland | 054, 151, 171 | Symphonic | 033, 038, 189 |
| | 172, 181 | Tandy..... | 173 |
| Minutz..... | 052 | Tatung | 003, 178 |
| Mitsubishi | 004, 005, 006, 019 | Technics..... | 054 |
| | 022, 051, 079, 080 | Techwood | 004, 006, 054 |
| | 081, 082, 082, 125 | Teknika | 004, 005, 006 |
| Montgomery Ward | 083 | | 008, 012, 013, 016 |
| Motorola | 003, 173 | | 038, 046, 076, 082 |
| MTC | 004, 005, 006 | | 083, 105, 170, 171 |
| | 105, 176, 178 | Telecaption | 117 |
| Multitech | 038, 178 | TMK | 004, 006 |
| Multivision | 084 | Toshiba | 049, 071, 072 |
| NAD | 006, 071, 072, 185 | | 089, 105, 109, 117 |
| NEC | 003, 004, 005, 006, 089 | | 118, 160, 162 |
| Nikko | 006, 016 | Totevision | 171 |
| NTC | 016 | Universal | 052, 087 |
| Onwa | 038 | Victor | 066, 182 |
| Optimus | 185 | Vidtech | 004, 005, 006 |
| Optonica | 095, 173 | Viking | 174 |
| Orion | 035, 191 | Wards | 000, 001, 004 |
| Panasonic | 003, 054, 062, 170 | | 005, 006, 019, 024 |
| Philco | 003, 004, 005, 006, 008 | | 033, 046, 052, 062 |
| | 012, 019, 062, 068, 069 | | 068, 069, 074, 075 |
| | 074, 075, 077, 183, 184 | | 076, 083, 087, 088 |
| Philips..... | 003, 004, 008, 012, 019 | | 095, 119, 120, 184 |
| | 046, 047, 062, 068, 069, 074 | Yamaha | 004, 005, 006, 019 |
| | 075, 076, 086, 087, 088, 089 | Zenith | 083, 151, 152 |
| Pilot | 004, 171 | | 153, 154 |

Programming For VCR

     1. Manually turn on the VCR.
2. Press and hold the **CODE SEARCH** button until the **INDICATOR LIGHT** lights, then release the **CODE SEARCH** button.
3. Press and release the **VCR** button (the **INDICATOR LIGHT** will blink then remain lit).
4. Find the three digit code for your VCR in the code list starting below and enter it using the Number Buttons.

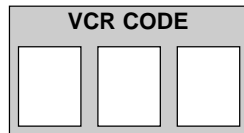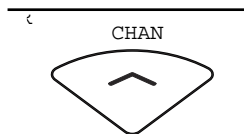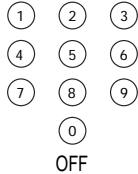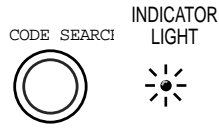

After your code is entered, the **INDICATOR LIGHT** will turn off.

5. Aim the remote at your VCR and press the **POWER** button. Your VCR should turn off.

Note: If your VCR does not respond, try all the codes for your brand. If the codes do not work, or your brand is not listed, try the Code Search method on page 11.

6. With your VCR on, press **CHANNEL UP**. If the VCR responds, no further programming is required.
7. Enter your code here for easy reference.

VCR Code List Continued

| | | | |
|----------------------------|-------------------------|-----------------------|-------------------------|
| GE | 000, 013, 021, 022 | Runco..... | 104 |
| | 053, 115, 120 | Samsung | 005, 013, 015 |
| Goldstar | 009, 014, 018 | | 033, 053, 112 |
| | 054, 121 | Sanky | 001, 104 |
| Gradiente | 026 | Sansui | 010, 092, 111, 123 |
| Harley Davidson | 026 | Sanyo | 011, 013, 023 |
| Harman Kardon..... | 009 | Scott..... | 012, 015, 025, 032, 038 |
| Harwood | 061 | | 065, 093, 116 |
| Headquarter | 011 | Sears..... | 011, 014, 021, 023 |
| Hitachi..... | 002, 055, 056, 057 | | 048, 049, 050, 051 |
| | 107, 111, 120, 122 | | 055, 056, 107, 118 |
| HI-Q..... | 023 | Sharp | 001, 002, 017, 029 |
| Instant Replay | 021 | | 094, 095, 096 |
| JCL | 021 | Shintom..... | 004, 056, 061, 098 |
| JC Penney | 009, 010, 011, 013 | Shogun | 013 |
| | 014, 021, 022, 055, 056 | Signature..... | 002 |
| | 058, 059, 060, 107, 118 | Singer..... | 021, 061 |
| Jensen | 111 | Sony | 004, 098, 099, 119, 128 |
| JVC..... | 009, 010, 011, 018 | STS | 021, 107 |
| | 058, 111, 123 | Sylvania | 002, 021, 022, 026 |
| Kenwood..... | 009, 010, 011, 016 | | 062, 063, 065, 124 |
| | 018, 058, 111, 123 | Symphonic | 002, 026 |
| KLH | 061 | Tandy..... | 002, 011 |
| Kodak | 014, 021 | Tashiko | 014 |
| Lloyd | 002, 026 | Tatung | 058, 111 |
| Logik | 061 | Teac | 002, 026, 058, 085, 111 |
| LXI | 014 | Technics | 021, 109 |
| Magnavox..... | 021, 022, 062, 063 | Teknika | 002, 014, 021 |
| | 104, 108, 124 | | 100, 129, 026 |
| Magnin | 013 | Toshiba | 015, 049, 051, 055 |
| Marantz..... | 009, 010, 011, 016 | | 065, 093, 116 |
| | 018, 021, 058, 062, 064 | Totevision..... | 013, 014 |
| Marta | 014 | TMK | 013, 024, 047 |
| Masushita | 021 | Unitech | 013 |
| MEI | 021 | Vector Research | 009, 010 |
| Memorex..... | 001, 002, 011, 013 | | 015, 016 |
| | 014, 021, 023, 026, 104 | Victor | 010 |
| MGA | 029, 065, 113 | Video Concepts | 009, 010 |
| MGN Technology | 013 | | 015, 016, 113 |
| Midland..... | 053 | Videosonic | 013 |
| Minolta | 055, 056, 107 | Wards | 001, 002, 013, 014 |
| Mitsubishi..... | 029, 055, 056, 065 | | 015, 021, 023, 026 |
| | 066, 067, 069 | | 029, 055, 056, 061 |
| | 070, 071, 072, 073 | | 096, 101, 102, 103 |
| | 074, 106, 113, 123 | | 107, 116 |
| Montgomery Ward | 001, 075 | XR-1000..... | 021, 026, 061 |
| Motorola | 001, 021 | Yamaha | 009, 010, 011 |
| MTC | 002, 013, 026 | | 018, 058, 111 |
| Multitech..... | 002, 013, 026 | Zenith | 004, 098, 104, 119, 128 |
| | 053, 061 | | |
| NEC | 009, 010, 011, 016, 018 | | |
| | 058, 064, 076 | | |
| | 078, 079, 111, 123 | | |
| Nikko..... | 014 | | |
| Noblex | 013 | | |
| Olympus | 021 | | |
| Optimus | 001, 014 | | |
| Optonica | 096 | | |
| Panasonic | 021, 022, 109 | | |
| | 125, 126, 127 | | |
| Pentax | 016, 055, 056 | | |
| | 016, 107, 120 | | |
| Pentax Research..... | 018 | | |
| Philco..... | 021, 022, 062, 063 | | |
| Philips | 021, 062, 096, 124 | | |
| Pilot | 014 | | |
| Pioneer | 010, 055, 080, 081, 123 | | |
| Portland | 016, 017, 019, 110 | | |
| ProScan | 000 | | |
| Protec | 061 | | |
| Pulsar..... | 104 | | |
| Quarter | 011 | | |
| Quartz | 011 | | |
| Quasar | 021, 022, 125 | | |
| RCA | 000, 003, 013, 021 | | |
| | 055, 056, 082, 083 | | |
| | 084, 085, 086, 087 | | |
| | 088, 089, 090, 091 | | |
| | 107, 115, 120, 125 | | |
| Radio Shack/Realistic..... | 001 | | |
| | 002, 011, 013, 014 | | |
| | 021, 022, 023, 026 | | |
| | 029, 049, 050, 096 | | |
| Radix | 014 | | |
| Randex..... | 014 | | |
| Ricoh | 128 | | |

VCR Code List

| | | | |
|----------------------|--------------------|---------------------|-----------------------------------|
| Admiral..... | 001 | Colt..... | 061 |
| Adventura..... | 026 | Craig | 013, 014, 023, 061 |
| Aiko | 027 | Curtis-Mathes | 000, 002, 009 |
| Aiwa | 002, 026 | | 013, 016, 018 |
| Akai | 003, 004, 005 | | 021, 022, 024, 115 |
| | 007, 008 | Cybernex | 013 |
| | 111, 112, 113 | Daewoo..... | 015, 017, 019, 025 |
| American High | 021 | | 026, 027, 028, 110 |
| Asha..... | 013 | Daytron | 110 |
| Audio Dynamics | 009, 010 | DBX | 009, 010 |
| Audiovox | 014 | Dimensia | 000 |
| Bell & Howell | 011 | Dynatech | 002, 026 |
| Beaumarck | 013 | Electrohome | 014, 029 |
| Broksonic | 012, 025 | Electroponic | 014 |
| Calix | 014 | Emerson | 002, 014, 015, 021 |
| Candle..... | 013, 014, 015 | | 024, 025, 026, 029, 030 |
| | 016, 017, 018, 019 | | 032, 033, 034, 035, 036, 037 |
| Canon | 021, 022, 114 | | 038, 039, 040, 041, 042, 044, 045 |
| Capehart | 020, 110 | | 047, 065, 105, 113, 116, 117, 130 |
| Carver | 062 | Fisher | 011, 023, 048, 049 |
| CCE | 027, 061 | | 050, 051, 052, 118 |
| Citizen..... | 013, 014, 015, 016 | Fuji | 021, 119 |
| | 017, 018, 019, 027 | Funai | 002, 026 |
| Colortyme..... | 009 | Garrard | 026 |

Programming For Cable Box

Cable Box Code List

 
 
 
1. Manually turn on the Cable Box.
2. Press and hold the **CODE SEARCH** button until the **INDICATOR LIGHT** lights, then release the **CODE SEARCH** button.
3. Press and release the **CABLE** button (the **INDICATOR LIGHT** will blink then remain lit).
4. Find the three digit code for your Cable Box in the code list starting on the next page and enter it using the Number Buttons.

After your code is entered, the **INDICATOR LIGHT** will turn off.

5. Aim the remote at your Cable Box and press the **POWER** button. Your Cable Box should turn off.

Note: If your Cable Box does not respond, try all the codes for your brand. If the codes do not work, or your brand is not listed, try the Code Search method on page 11.

6. With your Cable Box on, press **CHANNEL UP**. If the Cable Box responds, no further programming is required.
7. Enter your code here for easy reference.

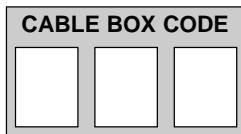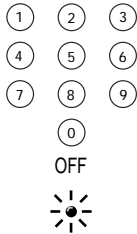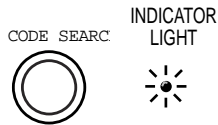


| | |
|--------------------------|--|
| ABC | 001, 002, 003, 004 005, 006, 007 |
| Antronix | 008, 009 |
| Archer | 008, 009, 010, 011 |
| Cabletenna..... | 008 |
| Cableview | 008 |
| Century | 011 |
| Citizen | 011 |
| Colour Voice | 012, 013 |
| Comtronics | 014, 015 |
| Contec | 016 |
| Eastern | 017 |
| Garrard..... | 011 |
| GC Electronics | 009 |
| Gemini..... | 018, 019, 049 |
| General Instrument | 003 |
| Hamlin..... | 020, 021, 022 035, 045 |
| Hitachi | 003 |
| Hytex | 002 |
| Jasco | 011 |
| Jerrold | 001, 003, 005, 007 018, 023, 024, 046 |
| Magnavox | 025 |
| Memorex | 026 |
| Movie Time..... | 002, 027 |
| NSC | 002, 027 |
| Oak..... | 002, 016, 029 |
| Panasonic..... | 000, 048 |
| Paragon | 026 |
| Philips | 011, 012, 013 019, 025, 030 031, 032 |
| Pioneer..... | 033, 034 |
| Pulsar | 026 |
| RCA | 000, 047, 049 |
| Realistic | 009, 049 |
| Regal | 022, 035 |
| Regency | 017 |
| Rembrandt..... | 003 |
| Runco | 026 |
| Samsung | 014, 034 |
| Scientific Atlanta | 006, 036 037, 038 |
| Signal | 014, 018 |
| Signature | 003 |
| SI Marx..... | 014 |
| Sprucer..... | 000 |
| Starcom | 001, 007, 018 |
| Stargate | 014, 018 |
| Starquest | 018 |
| Tandy | 040 |
| Televue..... | 014 |
| Tocom..... | 004, 023, 041 |
| Toshiba..... | 026 |
| Tusa | 018 |
| TV86 | 027 |
| Unika | 008, 009, 011 |
| United Artists | 002 |
| United Cable | 001 |
| Universal | 008, 009 010, 011 |
| Videoway..... | 044 |
| Viewstar..... | 015, 025 027, 040 |
| Zenith..... | 026, 050, 051 |

The AUX Button

The AUX Button allows you to assign another TV, VCR or Cable Box to be controlled.

 1. Manually turn on the the device you wish to assign to the **AUX** button (TV, VCR or Cable Box).
2. Press and hold the **CODE SEARCH** button until the **INDICATOR LIGHT** lights, then release the **CODE SEARCH** button.
3. Press and release the **AUX** button. The **INDICATOR LIGHT** will blink.
4. Find the three digit code for the device you wish to program in the code list

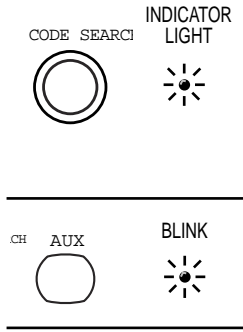

| Device | Page |
|-----------------|------|
| TV | 4 |
| VCR | 6 |
| Cable Box | 9 |

 
Enter the code using the Number Buttons.

After your code is entered, the **INDICATOR LIGHT** will turn off.

5. Aim the remote at your device and press the **POWER** button. Your device should turn off.

Note: If your device does not respond, try all the codes for your brand. If the codes do not work, or your brand is not listed, try the Code Search method on page 11.


6. With your device on, press **CHANNEL UP**. If the device responds, no further programming is required.
8. Enter your code here for easy reference.

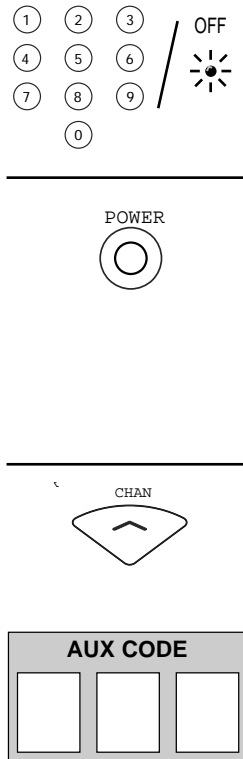

Programming With Code Search

If your TV, VCR, or Cable Box does not respond after you have tried all the codes for your brand, or if your brand is not listed, try searching for your code by following the steps below.

 
1. Turn on the device you wish to program.
2. Press and hold **CODE SEARCH** until the **INDICATOR LIGHT** lights, then release **CODE SEARCH**.
3. Press and release the device button for the device you are programming (**TV, VCR or CABLE**). The **INDICATOR LIGHT** will blink once then remain lit.
4. Press and release **POWER** until your device turns off.
5. When your device turns off, press the **ENTER** button, the **INDICATOR LIGHT** will go off.

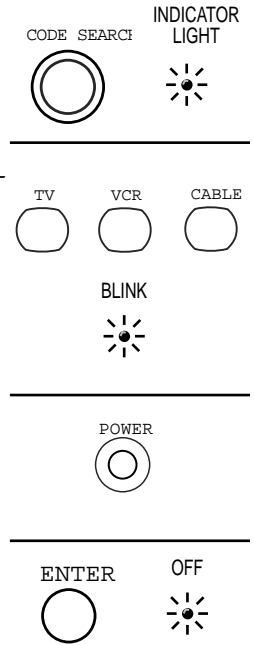

Retrieving Codes

If you need to find the three-digit code for your TV, VCR or Cable Box after your device is set-up using Code Search, use this procedure.

 1. Press and hold **CODE SEARCH** until the **INDICATOR LIGHT** lights, then release **CODE SEARCH**.
2. Press and release the device button for the device's code you are retrieving (**TV, VCR or CABLE**). The **INDICATOR LIGHT** will blink once then remain lit.
3. Press and release **CODE SEARCH**. The **INDICATOR LIGHT** will turn off.
4. Starting with **0** on the keypad, press the number buttons in order (**0-9**) until the **INDICATOR LIGHT** blinks.
5. The number which causes the **INDICATOR LIGHT** to blink is the first digit of your code.
6. Repeat step 4 until you have retrieved all three numbers in the code.


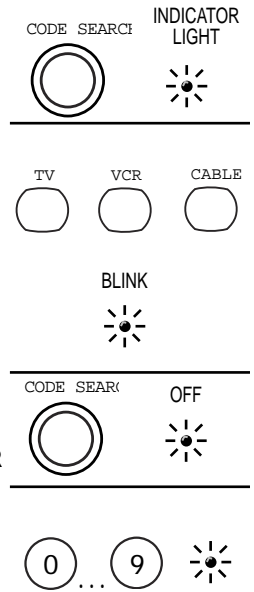


Sleep Feature

This feature will turn off your TV at the time you choose from 1 to 99 minutes.

To Program Sleep Feature:

  1. Press and hold the **SLEEP** button. **INDICATOR LIGHT** will stay lit. Release the **SLEEP** button.
2. Enter time in minutes using the numerical key pad. (Minutes 1 thru 9: press **0** before the actual number) (Maximum: 99 minutes)
3. Leave remote aimed at television. (Sleep Feature will not work unless remote is left aimed at television.)

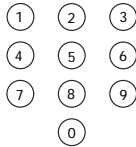

To Turn Off The Sleep Timer:

Sleep timer program will be cancelled and reset to zero by either of the following:

Press and hold **SLEEP** button until **INDICATOR LIGHT** blinks or press **POWER** button, turning TV OFF.



Trouble Shooting

| Problem | Solution |
|---|--|
| Indicator light not blinking when you press any key | A) Replace the batteries (with fresh, new AAA Alkaline batteries). B) Check that batteries are properly installed. |
| The RM94902 does not operate your device | A) Try all the codes listed for your brand. B) Try the Code Search method (page 11). |
| Not performing commands properly | Start Code Search over again to locate the proper code. |
| Problems programming a TV/VCR Combo Unit | Try the VCR code for your brand. Some combo units, however, may require both a TV and a VCR code for full operation. |
| VCR not recording | As a safety feature on your remote, you must press the REC button twice. |
| Channel up and down do not function on an RCA TV | Due to some designs, the original remote will only perform these functions. |
| Problems changing channels | If your original remote required ENTER after a channel, press ENTER after you select a channel. |
| No response after pressing a key | A) Make sure you have new batteries, and you are aiming your remote at your devices. B) Check that batteries are properly installed. See page 3. |
| Sleep feature does not work | Remote must remain aimed at television after sleep is set in order for it to work. Reprogramming may be required after batteries are removed. |

GE Accessories

The following GE accessories and other products are available through our web site at www.ge-electronics.com or by calling 1-800-654-8483.

TL96597 InstaJack

 
Turn Just About Any Electrical Outlet Into A Phone Jack Instantly*

Exclusive technology sends phone signal through the electrical wiring in your home.

No Wiring, No Drilling, No Tools! Installs In Two Simple Steps


STEP 1

Plug Base Unit into electrical outlet near an existing phone jack, and connect phone jack to Base Unit with included phone cord.

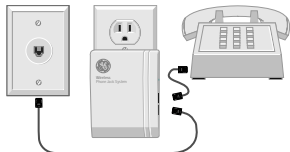

STEP 2

 Plug Extension Unit into any other electrical outlet and connect phone to Extension Unit.

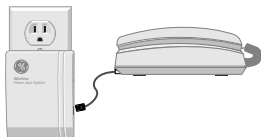

Works With:

Corded Phones
Cordless Phones
Answering Machines
Fax Machines
Computer Modems

Compatible With:

Call Waiting
Call Forwarding
Three-Way Calling
Speed Dialing

TL96597
\$79⁹⁵

Plus Shipping/Handling
& Sales Tax

TL96596 InstaJack Extension

Additional extensions are available to connect even more phones!

TL96596
\$49⁹⁵

Plus Shipping/Handling
& Sales Tax



How To Order

ORDER BY PHONE:

Have your Visa, MasterCard or Discover Card ready and call the toll-free number listed below. This number should only be used to place orders for the above-listed Accessories.

1-800-654-8483

ORDER BY MAIL:

Provide your name, address, phone number and a check or money order for the total amount due, and mail to:

Jasco Products Company
311 NW 122nd Street
Oklahoma City, Oklahoma 73114

Include this completed form with your order.

| Description | Model # | Price | Qty. | Total |
|-----------------------|---|---------|------|--------|
| InstaJack | TL96597 | \$79.95 | | |
| InstaJack Extension | TL96596 | \$49.95 | | |
| Sales Tax | We are required by law to collect the appropriate sales tax for each individual state, county, and locality to which the merchandise is being sent. | | | |
| Shipping and Handling | | | | \$5.00 |
| Total Amount Due | | | | |

Name: _____

Address: _____

City/State: _____

Zip: _____

Daytime Phone Number: _____

Check Enclosed

Money Order Enclosed

Visa

MasterCard

Card Number:

□□□□ - □□□□ - □□□□ - □□□□

Exp: _____

Signature: _____

Shipping and handling is charged for all orders.

Please allow 4-6 weeks for mail orders.

*Some electrical devices, phone services, and wiring systems may not be compatible or may cause a variance in performance.

90 Day Limited Warranty

Jasco Products Company warrants this product to be free from manufacturing defects for a period of ninety days from the original date of consumer purchase. This warranty is limited to the repair or replacement of this product only and does not extend to consequential or incidental damage to other products that may be used with this unit. This warranty is in lieu of all other warranties express or implied. Some states do not allow limitations on how long an implied warranty lasts or permit the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you. This warranty gives you specific rights, and you may also have other rights which vary from state to state. If unit should prove defective within the warranty period, return prepaid with dated proof of purchase to:

Jasco Products Company
311 N.W. 122nd
Oklahoma City, OK. 73114