# WIRELESS THIN-PROFILE KEYBOARD AND MOUSE

## **USER'S MANUAL**





www.jascoproducts.com

## TABLE OF CONTENTS

1. INTRODUCTION	3
2. PACKAGE CONTENTS	3
3. SYSTEM REQUIREMENT	3
4. INSTALLATION INSTRUCTIONS	3
5. SPECIAL FUNCTION HOT KEYS	6
6. SPECIAL MOUSE FUNCTIONS	7
7. TROUBLESHOOTING	7
8. TWO YEAR LIMITED WARRANTY	7
9. FCC STATEMENT	8

### Thank you for purchasing the GE branded Wireless Thin-Profile Keyboard and Mouse. This User's Manual contains all of the information needed to operate your keyboard.

#### 1. Introduction

Do away with cables and take control of your applications. The Wireless Thin-Profile Keyboard and Mouse are specially designed to optimize your efficiency and provide a complete wireless solution. With 13 special PC keys and 11 special Mac keys, you can execute your favorite commands instantly from your desktop! This wireless solution is designed to maximize your total productivity no matter what operating system you are running!

\*For Windows<sup>®</sup> XP or later operation systems, NO driver is required; you can just plug-and-play! \*For Mac 10.3 or later operation systems a driver is required.

### 2. Package Contents

- Wireless Thin-Profile Keyboard
- 2.4 GHz Mini Wireless Mouse
- Nano Receiver (in mouse's battery compartment)
- Two AAA batteries for Keyboard
- Two AA batteries for Mouse
- User's Manual
- Mac Driver CD

### 3. System Requirement

- Pentium 1 GHz or higher processor
- Microsoft<sup>®</sup> Windows<sup>®</sup> XP, Vista or 7
- Mac 10.3 and higher
- 512 MB of RAM recommended
- 4 GB of available hard disk space
- USB Port

### 4. Installation Instructions

Please keep this user's manual in a safe place.

#### 1). Connecting receiver to PC

• How to Remove the Nano Receiver







Remove the Nano receiver stored in

top of mouse


- the Center between the batteries.
- 1. Press the tab (as shown) to remove the top of the mouse.
- 2. Remove the Nano Receiver from its location in the center of the mouse.
- 3. Plug the USB receiver into an available USB port of your PC.

2). Insert the batteries with correct orientation into the battery compartments of both keyboard and mouse respectively.



#### • Installing the batteries in the Mouse

- 1. Turn off the power switch
- 2. Press the tab (as shown) to remove the top of the mouse.
- 3. Remove the battery restraint by pressing the tab (as shown) that is located below the Nano receiver.
- 4. Insert the batteries as depicted by the battery compartments.
- 5. Replace the battery restraint and the top of the mouse.
- 6. Turn on power switch.

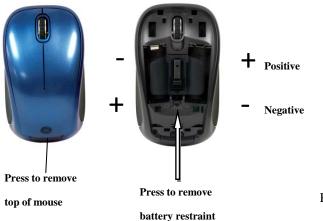

Page 4

3 This wireless keyboard and mouse set provides factory preset connection channels and enables Plug and Play function.

Note:

- 1. This keyboard and mouse set does not require changing connection ID as there is no ID button on the Nano receiver.
- 2. When this wireless set encounters radio interference, either keyboard or mouse will automatically change to a clean channel respectively. Manually changing connection ID is not necessary.
- 3. For Mac 10.3 and higher you will have to use the driver provided in order to use the Mac oriented function keys.

#### 

Batteries may leak harmful liquids or ignitable materials or explode causing injury and product damage.

- Do not mix old and new or other battery types.
- Replace all batteries at the same time.
- Replace fully discharged batteries immediately.

#### 

Continuous use of any keyboard may cause injury to hands, wrists, arms, neck or back. If you feel ache, numbness or weakness in these areas, consult a qualified health professional.

TO REDUCE THE RISK OF SUCH INJUIRIES FOLLOW THESE PRECAUTIONS:

- Position Yourself: Choose a chair that provides support for your lower back. Adjust your work surface height and your chair to assume a comfortable and natural body posture.
- Go Lightly: Type with a light touch, keeping your hands and fingers relaxed. Avoid resting your palms or your wrists on any type of surface while typing. Don't rest on edges, such as the edge of your desk.
- Take Breaks: Take frequent short breaks. Get up and walk around at least a couple of times every hour. Adjust your chair so the seat does not press in to the back of your knees.

## 5. Special Function Hot Keys

	PC Mode
F1	F1 + Fn : Sleep
	Mac Mode
	F1 : Decrease display brightness
F2	PC Mode
	F2 + Fn : Home
	Mac Mode
	F2 : Increase display brightness
	PC Mode
F3	F3 + Fn : Refresh
120 9	Mac Mode
	F3 : Expose all windows
	PC Mode
F4	F4 + Fn : My favorite
	Mac Mode
	F4:View Dashboard widgets
	PC Mode
F5	F5 + Fn : Email
	Mac Mode
	F5 :Press and hold the Media Eject key to eject a disc
	PC Mode
F6	F6 + Fn : Previous track
	Mac Mode
	F6 : NA

	Do Mada
F7	PC Mode
	F7 + Fn : Play / Pause
	Mac Mode
<u>['</u> ]	F7 : Previous or Rewind
F8	PC Mode
	F8 + Fn : Next track
►II ►I	Mac Mode Increase
<u>('</u>	F8 :Play / Pause
	PC Mode
F9	F9 + Fn : Stop
	Mac Mode
	F9 : Next or Fast Forward
	PC Mode
F10	PC Mode F10 + Fn : Volume up
F10	
F10	F10 + Fn : Volume up
F10	F10 + Fn : Volume up Mac Mode
F10	F10 + Fn : Volume up Mac Mode F10 : Mute
F10	F10 + Fn : Volume up Mac Mode F10 : Mute PC Mode
F10	F10 + Fn : Volume up Mac Mode F10 : Mute PC Mode F11 + Fn : Mute Mac Mode F11 : Volume down
F10	F10 + Fn : Volume up Mac Mode F10 : Mute PC Mode F11 + Fn : Mute Mac Mode
F10 F11 • •	F10 + Fn : Volume up Mac Mode F10 : Mute PC Mode F11 + Fn : Mute Mac Mode F11 : Volume down PC Mode F12 + Fn : Volume down
F10 F11 F12 F12	F10 + Fn : Volume up Mac Mode F10 : Mute PC Mode F11 + Fn : Mute Mac Mode F11 : Volume down PC Mode
F10 F11 F11 F12 F12	F10 + Fn : Volume up Mac Mode F10 : Mute PC Mode F11 + Fn : Mute Mac Mode F11 : Volume down PC Mode F12 + Fn : Volume down

The Wireless Thin-Profile Keyboard will come preset with these function keys and shortcuts. In order to toggle between the function key and the Multimedia hotkeys, FN needs to be selected or deselected

## 6. Special Mouse Functions



#### 7. Troubleshooting

#### • The Wireless Thin-Profile Keyboard or Mouse stops working

- After periods of inactivity, the mouse goes into sleep mode to save batteries. To awake the mouse, just simply move it in any direction and it should respond on the screen.
- You may need to change the batteries. You will need 2 AAA batteries for the Wireless Thin-Profile Keyboard, and 2 AA batteries for the 2.4 GHz Mini Wireless Mouse.

## If you still cannot solve the problem, please contact Jasco Products Company at <u>www.jascoproducts.com</u> or at 1-800-654-8483 Option 4 if prompted.

#### 8. Two Year Limited Warranty

**TWO YEAR LIMITED WARRANTY**: Jasco Products Company warrants this product to be free from manufacturing defects for a period of two years from the original date of consumer purchase. This warranty is limited to the repair or replacement of this product only and does not extend to consequential or incidental damage to other products that may be used with this unit. This warranty is in lieu of all other warranties express or implied. Some states do not allow limitations on how long an implied warranty lasts or permit the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you. This warranty gives you specific rights, and you may also have other rights which vary

from state to state. If unit should prove defective within the warranty period, return prepaid with dated proof of purchase to:

Jasco Products Company

10 E. Memorial Road

Oklahoma City, OK. 73114

## 9. FCC Statement

#### Notice: Federal Communications Commission (FCC) requirements, Part 15

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**CAUTION:** Any changes of modifications not expressly approved by the grantee of this device could void the users authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.