


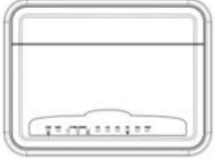


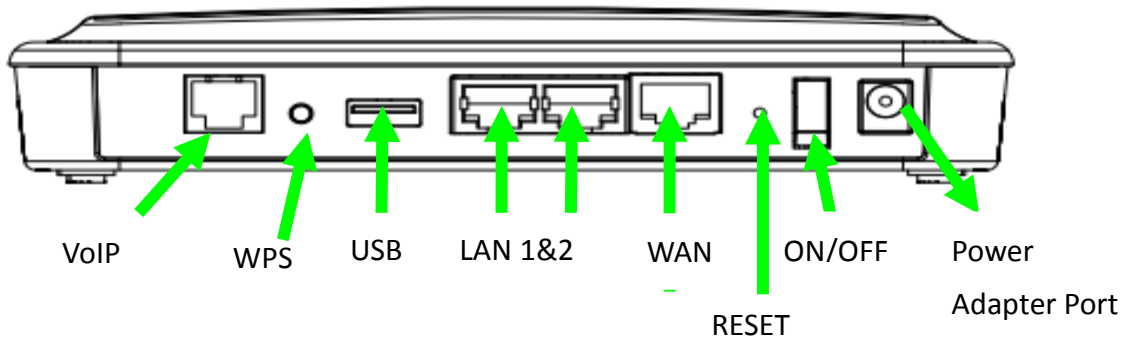
# **Quick installation Guide**

WVRTM-127ACN

# Table of Content


	The LTE Indoor CPE
	Quick installation Guide
	Power Adapter & Plug
	CAT5 8-wire Ethernet cable

# Connectors



Connector	Description
LAN – RJ45	The LAN port allows you to connect Modem to your PC or Hub using a Cat.5e/6 Ethernet network cable.
Voice- RJ11	The voice port allows you to connect your Phone to this Modem
USB Type A Host	Support USB 2.0 Host Reserved HW only; no SW support
Reset	Holds down the button for 5-seconds to factory defaults.
WPS	Holds down the button for 5-seconds to WPS enable
Power	The power port is where you connect the enclosed power adapter.


# LED Indicators \_Router

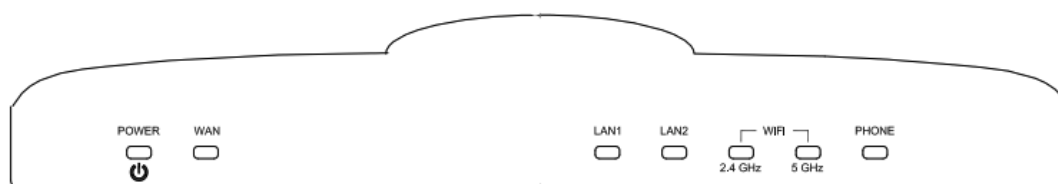


Type	Color	Action	Description
Power	Green	ON	Device Power On (AC plug in)
		OFF	Device Off (AC not plug in or device damaged)
WAN	Green	ON	The ODU is sync
		OFF	No ODU detected
Ethernet 1-2	Green	ON	LAN device connected
		Blinking	LAN traffic
		OFF	The device does not have an Ethernet connection on LAN
2.4GHz WLAN	Green	ON	The wireless network is activated and is operating in IEEE 802.11 b/g/n mode.
		Blinking	The device is still communicating with other wireless clients.
		OFF	The wireless network is not activated.
5GHz WLAN	Green	ON	The wireless network is activated and is operating in IEEE 802.11 b/g/n mode.
		Blinking	The device is still communicating with other wireless clients.
		OFF	The device is still communicating with other wireless clients.
Phone	Green	ON	A SIP account is registered
		Blinking	Talk

	OFF	Phone off
--	-----	-----------

## Installation

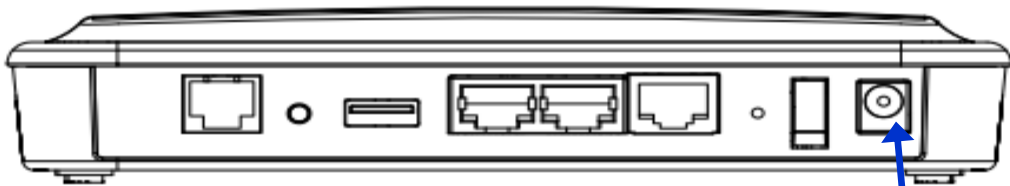

CAT5 8-wire Ethernet cable for connecting IDU and computer

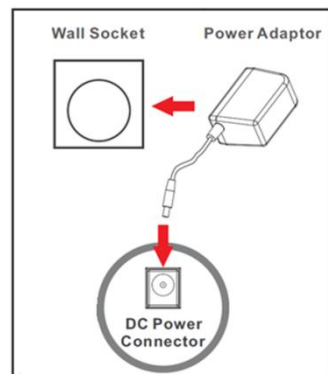

## Easy setup

Web IP: 192.168.0.1

### **Federal Communication Commission Interference Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### **IMPORTANT NOTE:**

#### **Radiation Exposure Statement:**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20 cm between the radiator & your body.

This transmitter must not be co-located or operating in conjunction with any other

antenna or transmitter.

Country Code selection feature to be disabled for products marketed to the US/CANADA.

Operation of this device is restricted to indoor use only.

**Innovation, Science and Economic Development Canada statement**

This device complies with Innovation, Science and Economic Development Canada's licence-exempt RSSs. Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

*Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:*

- 1) l'appareil ne doit pas produire de brouillage;*
- 2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.*

**Caution:**

(i) the device for operation in the band 5150–5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems;

(iii) for devices with detachable antenna(s), the maximum antenna gain permitted for devices in the band 5725-5850 MHz shall be such that the equipment still complies with the e.i.r.p. limits specified for point-to-point and non-point-to-point operation as appropriate; and

**Avertissement:**

(i) les dispositifs fonctionnant dans la bande de 5150 à 5250MHz sont réservés uniquement pour une utilisation à l'intérieur afin de réduire les risques de brouillage préjudiciable aux systèmes de satellites mobiles utilisant les mêmes canaux;

(ii) pour les dispositifs munis d'antennes amovibles, le gain maximal d'antenne permis (pour les dispositifs utilisant la bande de 5725 à 5850 MHz) doit être conforme à la limite de la p.i.r.e. spécifiée pour l'exploitation point à point et l'exploitation non point à point, selon le cas;



**Radiation Exposure Statement:**

This equipment complies with Canada radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance **20** cm between the radiator & your body.

**Déclaration d'exposition aux radiations:**

Cet équipement est conforme Canada limites d'exposition aux radiations dans un environnement non contrôlé. Cet équipement doit être installé et utilisé à distance minimum de **20** cm entre le radiateur et votre corps.