

- **SPECIAL USER INSTRUCTIONS – PLEASE READ!!!**
English/French/Spanish/Danish/Swedish/Finnish/Russian
Coming soon: Italian, Portugese, Japanese, Thai, Aramaic, and
Simoan.....

THIS MESSAGE IS TO OUR HOCKEY PLAYING CUSTOMERS FROM THE CREATORS OF THIS PRODUCT AND NOT FROM OUR ATTORNEY!!! FIRST, THANKS FOR BUYING OUR PRODUCT. TAKE A MINUTE OR TWO TO READ THE POINTS BELOW. FOLLOWING THEM WILL MAKE SURE YOUR LEGOLIE WORKS THE WAY IT WAS MADE TO FOR A LONG TIME TO COME!

- 1- THIS PRODUCT IS NOT MADE OF STEEL, GRAPHITE, KEVLAR, SPACE DEPARTMENT ALUMINUM AND IS 100% BORON FREE AND THE BAG IS NOT MYLAR-COATED (YET). IF IT CONTAINED ANY OF THOSE MATERIALS, IT WOULD COST 20 TIMES MORE AND THESE INSTRUCTIONS WOULD NOT BE REQUIRED. IT'S MADE OF HIGH IMPACT PLASTICS, PVC, MICROCHIPS AND INFRARED SCANNERS. IF YOU ABUSE IT, IT WILL BREAK. WE HAVE A LAB THAT TESTS ALL PRODUCTS IN WAYS THAT FAR EXCEED NORMAL USE. WE CAN TELL HOW AND WHY SOMETHING IS NOT RIGHT SO IF YOUR IDEA OF FUN IS STABBING LE GOLIE WITH A BUTCHER KNIFE, SMASHING THE PLASTICS WITH A BALL PIN HAMMER, UNDERSTAND THIS:

- A) WE'LL KNOW
- B) THIS PRODUCT IS NOT FOR YOU AND YOU MAY WANT TO SEEK PROFESSIONAL HELP

2 – LEGOLIE IS DESIGNED TO USE ANYWHERE IN TEMPERATURES BETWEEN -10 AND 30 DEGRESS CELCIUS. THE PVC IS NOT DESIGNED TO TAKE ANY MORE OR LESS NOR ARE THE MECHANICAL COMPONENTS. ANYWAY, IF YOUR IDEA OF A GOOD TIME IS PLAYING HOCKEY IN TEMPS THAT ARE HIGHER OR LOWER THAN WHAT WE RECOMMEND FOR THE PRODUCT, REFER TO POINT “B” ABOVE.

3 – LEGOLIE CAN BE USED ON THE ICE. YOU CANNOT USE IT IN RAIN, SNOW, BLIZZARDS, SANDSTORMS, PUDDLES OR STANDING WATER. IF YOU DID NOT KNOW THIS ALREADY, YOU KNOW WHERE TO REFFER. FOR OUR HOLLYWOOD FLORIDA HOCKEY BUDS WHERE THE RAIN COMES AND GOES EVERY 15 MINUTES IN THE SUMMER, “SQUEEGIE THAT RINK NICE AND DRY BEFORE SETTING UP LEGOLIE!!!”

4 – THIS PRODUCT CONTAINS HIGH TECH COMPONENTS AND MICROCHIPS THAT CAN OVERHEAT. IT IS IMPORTANT THAT YOU ALLOW THE UNIT TO COOL DOWN BETWEEN LONG UNINTERRUPTED PERIODS OF USE (THIS IS WHY WE ENCOURAGE YOU TO HAVE A BACK UP LEGOLIE ON HAND). FOR THE BEST PERFORMANCE RESULTS AND THE LONGEST COMPONENT LIFE POSSIBLE, FOLLOW THE GUIDE BELOW:

Function	Max. Continuous Hours.	Shut Off Time before Restart
Random only	1-1.5 hours	30-40 minutes
Remote only	2-2.5 hours	30-40 minutes
Remote/Random	1.5-2 hours	30-40 minutes

**The machine will run a lot longer and will not tell you it needs a break. If you constantly run the unit beyond our suggested use periods, you will burn the motor, gears, and/or internal components.

5 – DO NOT FILL WITH ANYTHING OTHER THAN REGULAR AIR (NO HELIUM, BEER OR NITROUS!!! OUR LEGOLIE IS ALCOHOL AND DRUG FREE AND IS FUN AT PARTIES JUST BEING HIMSELF) DO NOT OVERINFLATE THE BAG. THE MORE AIR YOU INFLATE, THE MORE SUCCEPTABLE THE BAG IS TO TEARS ON THE SEAMS. IF YOU FEEL A LOT OF RESISTANCE WHEN YOU “SQUEEZE” THE CHEST OR PADS OF THE INFLATABLE, YOU HAVE OVERINFLATED THE BAG. FOR MORE REALISTIC REBOUNDS AND A LONGER LIFE WITHOUT LEAKS, LEAVE ROOM FOR SOME AIR!!

6 – AVOID SKATING OVER THE TRACK, BASE, OR ANY OF THE WORKING PARTS OR BAG. IF LEGOLIE EMBARRASES YOU ON A BREAKAWAY, SMASH THE POST OR CROSSBAR, NOT THE PRODUCT.

7 – WHEN USING A/C POWER EITHER DIRECTLY INTO AN OUTLET OR VIA AN EXTENSION CORD-PLEASE USE COMMON SENSE. THE DIRECT POWER OPTION IS MEANT TO USE WHEN YOU ARE PRACTISING IN THE BASEMENT AND SHOULD NOT BE USED ON THE STREET OR AT THE RINK WHERE THE CORD RUNNING BEHIND THE NET WOULD BE AN OBVIOUS HAZARD. ONLY USE THE WIRELESS/BATTERY OPTION FOR GAME/OUTDOOR/RINK SITUATIONS!!!

8 – WE RECOMMEND YOU USE INLINE OR STREET PUCKS, FOAM PUCKS, OR STREET/INLINE BALLS ABOVE ANYTHING ELSE. YOU CAN USE ICE PUCKS BUT IT IS IMPORTANT TO NOTE THE FOLLOWING:

- a) Ice pucks are very heavy and if you have a big time shot (80MPH+), you can cause more seam damage leading to leaks and tears.

- b) If you want to use the product with ice pucks, use the ADULT bag. This bag is 20-25% bigger than the JR bag. The ADULT bag displaces energy and impact over a greater surface making it much more durable than the JR. bag. If you are an experienced player, you will likely want the bigger bag accessory since it is more challenging than the JR bag anyway.

9 – THE RECOMMENDED AGE FOR THIS PRODUCT IS 5-14. OLDER AND MORE EXPERIENCED PLAYERS CAN USE IT ALSO AND HAVE A LOT OF FUN WITH IT, ESPECIALLY IF THEY FOLLOW THE GUIDELINES LISTED ABOVE.

10 – YOU **MUST** USE THE INFLATABLE STICK WHEN USING THE PRODUCT. IT IS THERE NOT JUST FOR LOOKS! IT IS DESIGNED TO PROTECT THE MOTOR HOUSE AND ENTIRE BASE FROM PUCK IMPACT. IT ALSO ABSORBS IMPACT THEREFORE REDUCING THE AMOUNT OF TIMES THE BASE GETS KNOCKED OFF THE TRACK. USING THE PRODUCT WITHOUT THE STICK WILL ALMOST CERTAINLY RESULT IN DAMAGE TO THE INTERNAL COMPONENTS OF THE MOTOR BOX.

****DON'T USE THE BAG AS A PASSENGER TO RIDE THE HOV LANES ON YOUR LOCAL FREEWAYS. WE CANNOT BE HELD RESPONSIBLE FOR THE TICKETS YOU WILL NO DOUBT INCUR.**

THANKS AGAIN AND BE SURE TO CHECK OUT OUR WEBSITE AT www.legolie.net FOR REALLY COOL ACCESSORIES NOT ALWAYS AVAILABLE IN STORES.

USER TIPS-IDEAS ON HOW TO USE LEGOLIE

- 1 – Put it on random when you are alone or with other players
- 2 – Use the remote mode to challenge yourself and other shooters or as a training tool for young players or beginners. The best position to make saves using the remote is from directly behind the net (protected by the net of course. If you don't have a net, don't be crazy enough to stand behind "LeGolie" trying to make saves).
- 3 – In remote mode, the closer a player is to the net, the tougher it is to make saves, just like real hockey, so being a good "LeGolie" takes quick reflexes, good instincts and a little guesswork
- 4 – It's not hard to deke LeGolie. Practicing shots from further out, one-timers, or even lining up 5 or 10 pucks and rapid firing while on random or remote is the best way to have fun when you're playing with the product.
- 5 – On battery mode, the product will start slowing down as the battery loses power. It will still move for several minutes depending on the size of the battery before it shuts off completely. Always keep at least one extra fully charged battery handy when taking LeGolie on the road.
- 6 – Even with the power off, you can still use the product by positioning it anywhere on the track and practicing shots from different angles.

Assembly Instructions

****For mistake free easy to follow visual instructions, log on to our website at www.legolie.net and download a 60 second video**

This Package contains the following

- a) Motor Box (1)
- b) Wing Pads (2)
- c) End Caps (2)
- d) Track Sections (3)
- e) Battery/Charger Box (1)
- f) Electric Pump (1)
- g) Inflatable (1)
- h) Patch Kits (6 patches – 3 glue tubes)
- i) Thumb Screws (8)
- j) One remote Control Handset

1 – Assemble track sections A-D (E attaches later). The easiest way to attach is to bring the tracks together on an angle and bring your hands together to fit in. Push the lock pin on each site of the joined sections of track.

****Do not “lay the track sections flat and push/force them towards each other.**

****You must follow the letter sequence of track (A-E) and all the arrows you see next to the letters must face the exact same direction in order for the sensor to read the track mirrors properly.**

2 – Join the wing pads (B) to the motor box using the 8 thumbscrews (H). Place a wing pad OVER one of the sides of the motor box. Align an End Cap (C) over the four holes of the Motor Box/Wing Pad so the 4 cylinder covered bolts of the End Cap face the ground. Turn the base over while holding the End Cap and use the Thumbscrews (I) to attach parts A-B-C. The Thumbscrews get screwed in from the TOP of the Wing pad. Repeat for the other side. There is no left or right Wing Pad, either can be used on either side of the motor box.

3 – For easy set up, do not inflate the bag (G) until you attach the anchors on the bottom of the inflatable to the 4 housings on the top of the wing pad (B). Make sure the Inflatable and the FRONT of the motor box (A) is in front facing the shooter. The FRONT of the motor box has a FOAM piece in front for extra protection. The BACK of the motor box is where you find the random mode switch and AC Adapter housing. Pull back all four of the Metal pull pins on the wing pad. Place each anchor inside the box. Push each foot of the inflatable down and push the pin through to secure. Do one foot at a time. Never force the pin. If you have difficulty, it means the anchors aren't squarely in the box. Be patient as once you get the hang of it, it's very simple to do!

4 – Inflate the bag. There are two valves on the inflatable. One valve for the top half and one for the lower half. Each valve has two openings, a larger one and a smaller one. Until you become experienced at using the pump, the best way to do it is to make sure the larger valve opening is securely closed. Open the smaller of the two and use the pump attachment that fits into that opening and inflate. When the small valve is open and the larger is closed, Air goes in but not out. Do not over inflate (see special instructions). Close the small valve opening and repeat the process to fill the entire bag.

5 – To attach the stick, simply inflate (just as quick without the pump) the stick and attach it to the bag by matching the 3 bars on the stick with the three plastic houses on the inflatable (1 on each pad and one on the blocker)

The above should take you about 5-6 minutes. Once you attach the base (parts A-B-C) properly, you can leave it assembled reducing your set up time in the future if you choose.

READY TO PLAY!

1) USING DIRECT POWER

- a) Plug the Battery Box (E) into an outlet. The plug is tucked away under the MASK.
- b) Make sure the Charger button on the Battery box is OFF
- c) Switch to the AC/Adapter mode
- d) Run the adapter at the back of the Battery Box directly into the back of the Motor Box.

You are ready to go. Make sure you follow the suggested run times found in the SPECIAL INSTRUCTIONS page.

2) Battery Mode

- a) You can use the 8V we supply or the 10V upgrade available on our website. Make sure the battery is fully charged.
- b) Make sure the Charger button on the Battery box is OFF
- c) Switch to Battery Mode

3) CHARGING THE BATTERY

- a) You cannot charge the battery while using the product in the AC/Adapter Mode.

- b) Charge the battery while the product is NOT in use by plugging the Battery Box into a standard outlet and putting the Charger switch to the ON position.
- c) It takes approximately 6 hours to fully recharge the battery.

** The only 10V battery in existence that works with our product is made exclusively for us and is available on our website in a 2-pack with/charger. The 10V gives you longer run times and increased speed.

“Modifications not authorized by the manufacturer may void users authority to operate this device”

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.