

BEYBLADE

AGE 8+

82618/82617 Asst.

Radio Control Instructions

RA-01

RECHARGEABLE

For competition among RC BEYBLADE tops.

the other RC BEYBLADE tops (sold separately) must have frequencies other than 27 MHz.


Requires 2 x 1.5V "AA" (LR6 batteries not included). Alkaline batteries recommended.

Phillips/crosshead screwdriver needed (not included). See instructions


WARNING: Do not use BEYBLADE tops or Beystadium™ on tables or other elevated surfaces.

BEYBLADE tops/BEYSTADIUM are intended to be used on the floor. Do not lean over the stadium when BEYBLADE tops are in play. BEYBLADE tops may bounce up and hit eye or face.

Includes radio control launcher, radio control BEYBLADE top, ripcord, BT Chip, and label sheet.

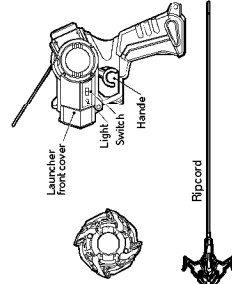


Peel and apply labels as shown.

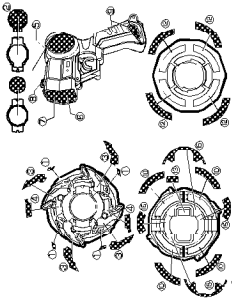

TO INSERT BATTERIES:

- Using a Phillips/crosshead screwdriver (not included), loosen/crow securing battery compartment door on launcher, and swing door to access compartment (screw remains attached to door). Insert 2 x 1.5V "AA"/LR6 batteries. We recommend alkaline batteries. Swing door to close compartment, and tighten screw with screwdriver.

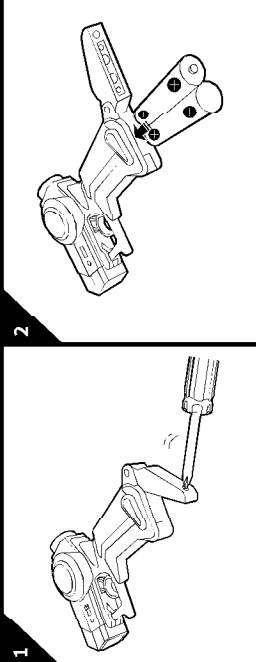

IMPORTANT BATTERY INFORMATION


Please read this information for future reference.

- Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
- Do not mix old batteries and new batteries, or standard carbon/zinc with alkaline batteries.
- Remove batteries if product is not to be played with for a long time.
- Do not short-circuit the supply terminals.
- Signify removing and re-inserting batteries, if necessary.
- RECHARGEABLE BATTERIES: DO NOT RECHARGE OTHER TYPES OF BATTERIES.


- CAUTION: TO AVOID BATTERY LEAKAGE** and battery manufacturers' instructions;
- Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries;**
- Always remove weak or dead batteries from the product.**

CHARGING:


Turn the launcher power switch to ON.

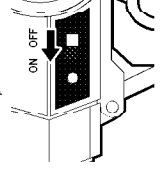

- Open the launcher front cover, and use the radio control top to attach the radio control top to the charge gate. The charge light will turn ON.

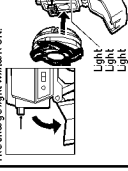


- Each time you push the launcher's charge gate, the charge light will turn ON.

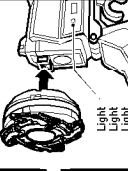

Please note:


- Charge the radio control top after the tip has stopped moving. Recharging when a charge remains in the battery may lead to weakening of the battery.
- If the radio control top is accidentally removed from the launcher, the charging sequence will continue to stay lit until the entire 80 second charging sequence has been completed. Be sure to charge until the charge light goes out.

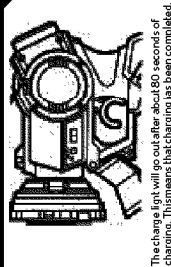


The charge light will go out after about 80 seconds of charging. This means that charging has been completed.

LAUNCH:

Slide the ripcord through the launcher and attach the radio control top.

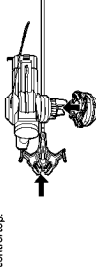

Turn the radio control top to the right and secure the launcher.

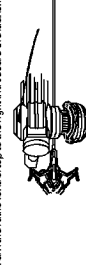

Grab the launcher firmly and pull hard on the ripcord until the radio control top.