

TROUBLESHOOTING:	
SYMPTOM	CAUSE
It doesn't move.	<b>COUNTERMEASURE</b> Turn the switch to the ON position, charge and launch it. Insert new batteries.
I can't control it.	Are the batteries old? Are they facing the correct direction? The transmission range of the launcher and top is about 2.62 feet (80 cm). Depending on circumstances, the transmission range may be reduced. Point the antenna toward the top and control it within 2.62 feet (80 cm). Has the top been charged enough? Clean the tip. If dust or dirt is present, the top may slip on the surface of the arena, making it difficult to control.
It has a mind of its own.	Is there dirt or dust on the tip of the arena? Is there dirt or dust on the surface of the arena, making it difficult to control? Are you playing against another top that has the same frequency as yours? There are places in buildings where signals reflect easily. Play in a different location.

### NOW THAT YOU HAVE MASTERED BASIC OPERATION, EXPERIMENT WITH DIFFERENT PATTERNS!

**Reverse Attack!**  
Launch the top so that it moves counterclockwise while in flight. You will move near the center of the BEYBLADE™ arena. This is good for an attack from the inside. Once the charge also begins spin time, so be sure to use this attack for a quick action win!

★ Difficulty: 1

**High Power Attack!**  
Launch the top so that it moves clockwise. Use the power of the top's compact motor enabling a powerful attack! This technique uses the compact motor's support power. Although it's powerful, it's also easier to get knocked out of the ring.

★ Difficulty: 1

**Return Attack!**  
This is a counterattack in which you change the direction of movement during launch and then your opponent's launch and then make your movement off the trigger to make a counterattack. This is a standard technique to implement!

★★★ Difficulty: 3

**Entrance Circle!**  
Move the trigger so that the top just slightly enters clockwise mode. Then control the top so that it continuously runs around the BEYBLADE™ arena wall. If you don't get bumped by your opponent's top, you can continue to run for as long as you want with the extra support the arena bowser of the compact motor supports the circling motion!

★★★ Difficulty: 3

**Bottom view**

It's an attack with a radio-controlled flat base!

The tip has a 2.5 mm diameter compact motor. Normally, the tip can move at incredible speeds and also spin counterclockwise!

### BASIC OPERATION OF THE LAUNCHER:

The main switch should be ON.

Pull trigger to make top move clockwise

Leave trigger center of top spin in place.

Push trigger forward to make top move counterclockwise.

The BEYBLADE radio system allows radio control of a radio control BEYBLADE top after launch. By spinning the compact motor in the same direction as the top (right spin), the spin of the compact motor will increase the rotational force of the top. Moreover, by spinning in the opposite direction (left spin) than the top, the compact motor can reverse the spin direction of the top!

Move trigger back and forth to change how the top moves!

Push the trigger for the same direction as the spin in the opposite direction of the radio control top!

Push the trigger for the same direction as the spin in the opposite direction of the radio control top!

**FCC Statement:**  
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including any interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause interference to other communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to other communications, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

**BEYBLADE.COM**  
BY YU-GI-O! GAMES

Manufacturer's representative in the United Kingdom is Hasbro UK Ltd., Caswell Way, Newport, Gwent NP23 5JF. Call 0800 2247276.  
Product art codes may vary.  
© 2003 Hasbro. All Rights Reserved. © Games Reg. U.S. Pat. & TM Office.  
**MADE IN CHINA**  
Manufactured under license from Takara Co., Ltd. © HODOSHI SOTTTAKA404-BEYBLADE PROJECT TV TOKYO. Licensed by © rights, Inc.