


Model:LBT-HS310M

Brand:ELECOM

Bluetooth headset

Bluetooth™ headset connect with your cellular phone (with Bluetooth™ function) give you a safety way to none stop communication in driving. It supports NFC easy pairing function(Receive tag only).

● Headset instruction:

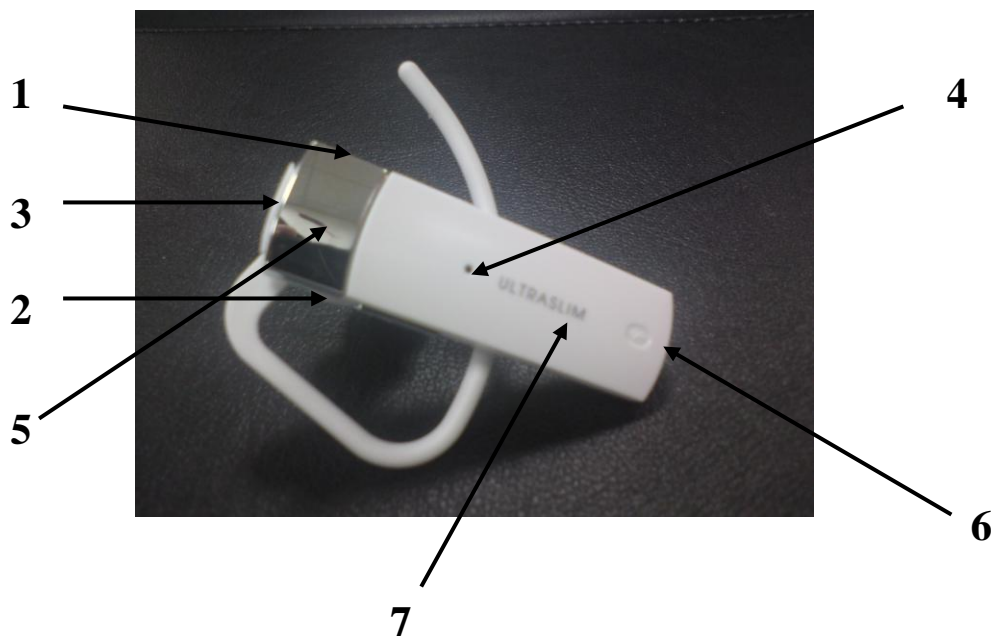

- 1: Volume up
- 2: Volume down
- 3: mini USB jack.
- 4: Indicate LED
- 5: MFB button
- 6: Microphone
- 7. NFC area

Function Keys

Location	Keys	Function
	Volume up	Volume up or forward function
	Volume down	Volume down or backward function
	MFB button	Power on / off / Play/Pause/ call function

LED indicators

Color	LED Status	Function
Blue	Status LED flashes 2 times every 5 seconds	Linked
	Status LED and Charging LED Flash alternative	Pairing state
Red	Red LED flashes 1 time every 5 seconds	Standby(no connection)
	Charging LED flashes slowly every 3 seconds	Low battery
	Charging LED lights up steady	Charging (Indicator turns off when charging is completed.)

How to start

After opening the package, please make sure to do the following steps

1. Full charge the headset by charge it first time at least 2 hours.
The Red LED will be steady on when charging. The LED will go off when battery is fully charged. Press MFB key about 3 seconds to power on the headset. When the headset power on the blue led will flash 3 times and you can hear a rising tone. When headset already power on, press MFB key about 3~5 seconds will power off the headset. When the headset power off the red led will flash 3 times and you can hear a falling tone.
2. Link (Pairing) headset to your Bluetooth™ mobile phone or other Bluetooth™ devices for the first time only.
Press and hold the MFB button for three seconds to wait for the Blue led steady on that indicates the headset is into the paring mode.
Operate your Bluetooth™ mobile phone or other Bluetooth™ device to start Bluetooth™ function. Find the headset “LBT-HS310M”, press the pairing

code “0000” The blue LED is start flashing, the headset is in connected mode

3. Standby mode :

- Double click MFB key to initiate voice dial
- Long press main key to power off headset
- Short press Vol+ and Vol- key to initiate Last Number redial
- Short press MFB key for play/pause function
- Long press MFB and Vol+ for proximity pairing
- Long press MFB and Vol- for clear paired information

4. Music play:

- Short press MFB key for play/pause function
- Long press Vol+ key for forward function
- Long press Vol- key for backward function

5. Incoming call:

- Short press MFB key to accept call
- Long press MFB key till hear beep tone to reject call

6. In Talking:

- Short press volume up key to adjust volume up
- Short press volume down key to adjust volume down
- Long press MFB key to toggle call between headset and cellular phone
- Short press MFB key to end call
- long press Vol+ and Vol- to toggle microphone mute function

7. NFC easy pairing (Receive tag only).

- Power On: Mobile phone short touch the BEC3470, blue and red LED flash alternatively for into pairing mode. You can auto-connect to the headset.
- Connect: Mobile phone short touch with the BEC3470 when headset is disconnected
- Power Off: Mobile phone short touch with the BEC3470 when headset is connected.

8. Led statuses

POWER ON	Blue led flash 3 times
POWER OFF	Red led flash 3 times
PAIRING	Blue and red led flash alternatively
STANDBY MODE	Red led flash once every 5 seconds
A2DP SBC MODE	Blue led flash twice every 5 seconds
HEADSET ACTIVE MODE	Blue led flash once(1 second dim led)every 5 seconds
LOW BATTERY INDICATION	Red led flash twice every 3 seconds
AUTO SHUTDOWN	Red led flash 3 times and power off (5 minutes no any connection)

9. Troubleshooting

If the Bluetooth Headset does not work, try the following:

- Ensure connecting devices are charged
- Turn off all devices and then turn them on in order to shown in this guide
- Ensure devices are within 10 meter range
- Ensure the Headset is connected by check the blue LED flash

Note 1: Some A2DP source like 3.5mm interface transmitter cannot support AVRCP profile, so it cannot do remote control function.

Note 2: Only cellular phone supports hands free profile can use voice dial, last number redial, call transfer function

Federal Communication Commission Interference Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

Radiation Exposure Statement:

The product comply with the FCC portable RF exposure limit set forth for an uncontrolled environment and are safe for intended operation as described in this manual. The further RF exposure reduction can be achieved if the product can be kept as far as possible from the user body or set the device to lower output power if such function is available.

電信管制射頻器材警語：

低功率電波輻射性電機管理辦法

第十二條 經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

第十四條 低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。

前項合法通信，指依電信法規定作業之無線電通信。

低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。