


1. General Specification

- Power On/Off Key : Top
- PTT Key : Side [Tact SW]
- Monitor Key : Side [Tact SW]
- UP Key : Top
- Down Key : Top
- SCAN Key : Top
- CALL Key : Top
- Menu Key : Top
- Lamp Key : Top
- EXT Mic/Speaker Jack[2.5φ]


2. Function Flow Chart

- F → CTCSS → PWR Hi/Low → DW → VOX → BEEP → Roger Beep → Ringer Tone → F

3. LCD Display

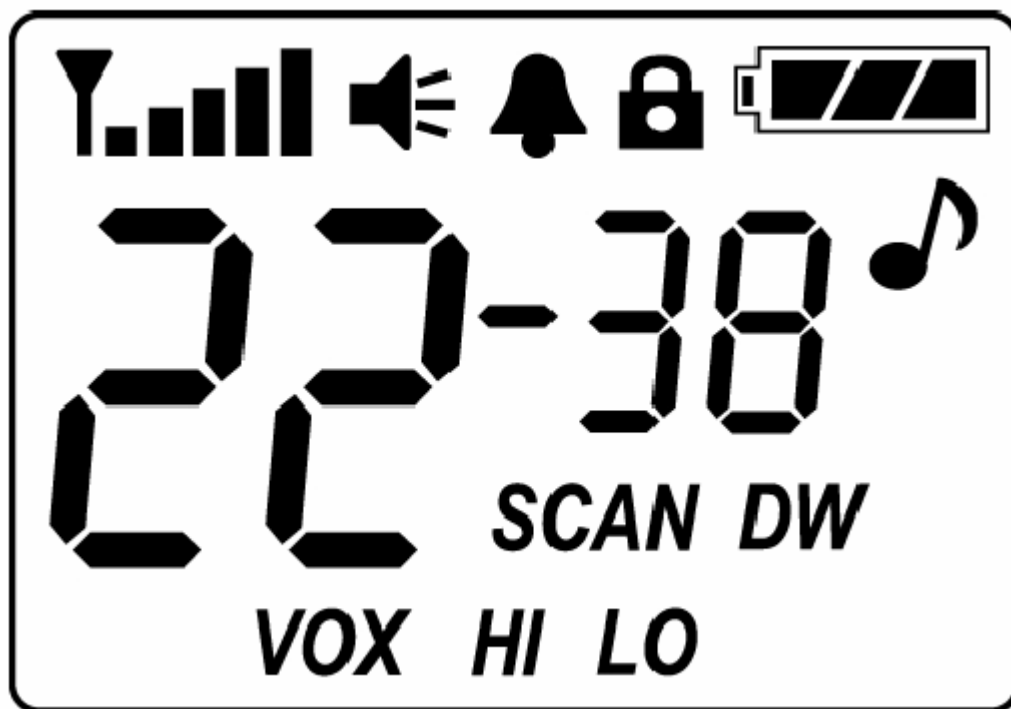

4. Front, Side, Top Overview

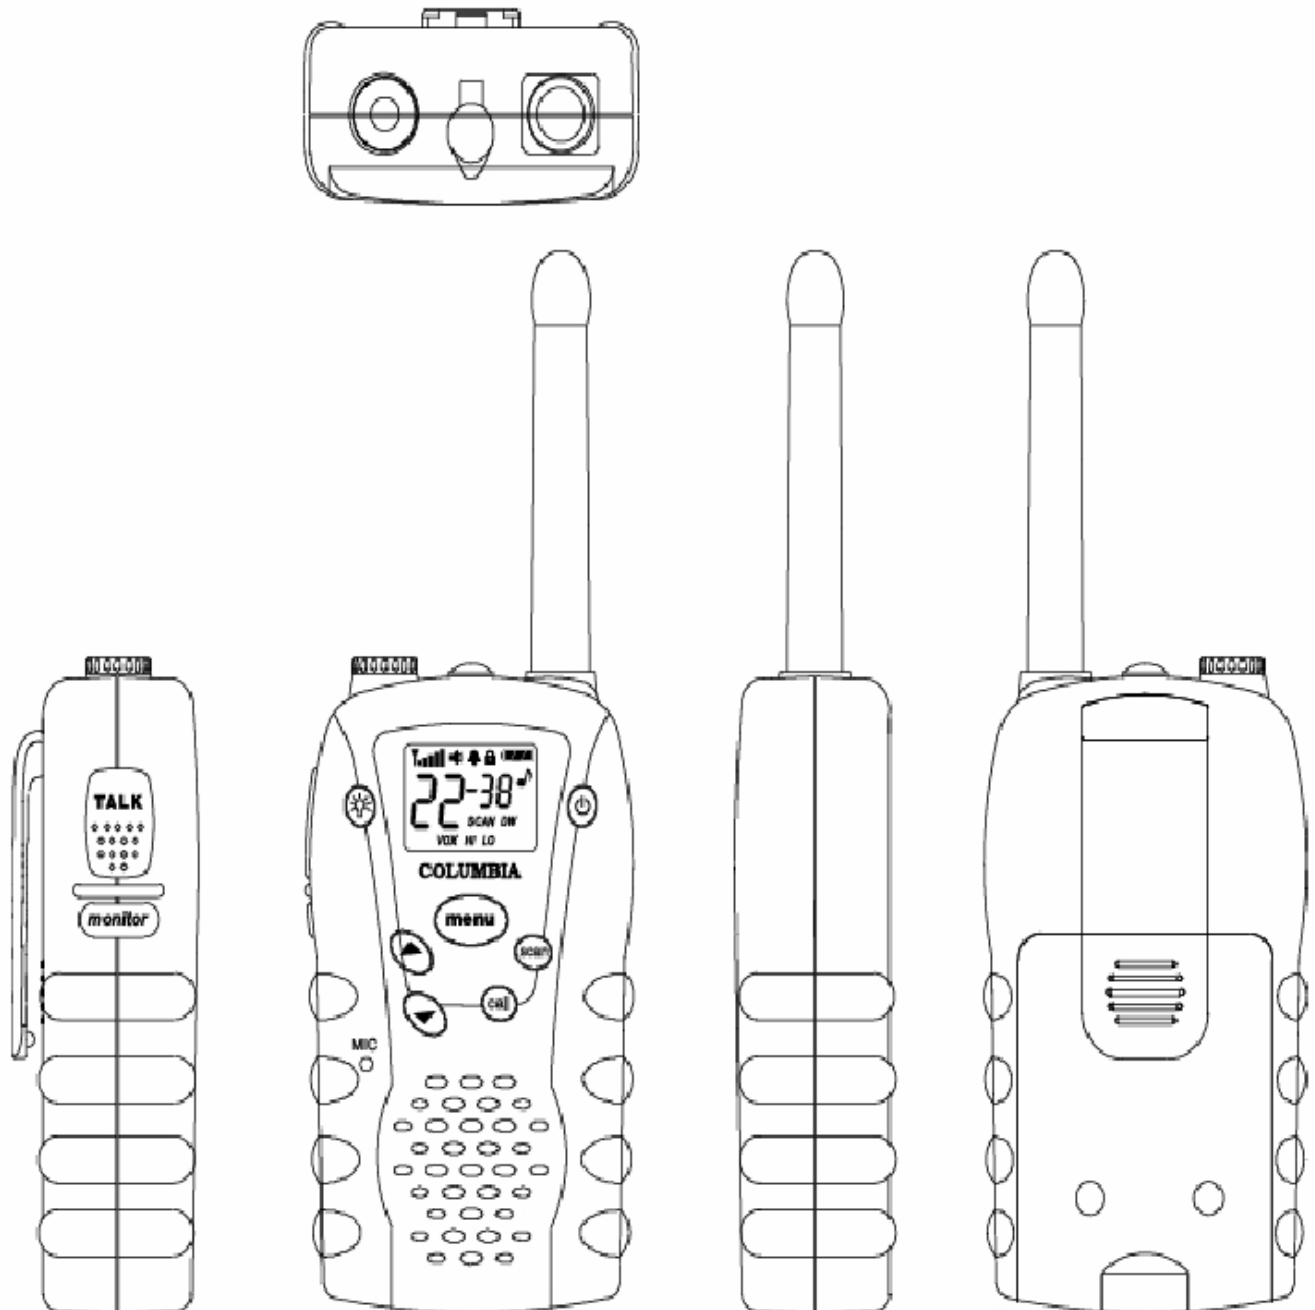

5. Operating Instruction

1) On/Off & Volume control Switch

- **Radio ON** : Press and hold down the Power[P] button for over 2seconds.
All indicators will appear momentarily on the LCD and you will hear short beep sound.
- **Radio Off** : Press and hold down the Power[P] button for over 2seconds until all indicators Disappear on the LCD.
- **Volume setting** : Press up[▲] or down[▼] button to choose the adjust level that is most Comfortable for you.

2) Setting the Channel

GM-18 has 22 main channels.

- **To select the channel**

- Turn the radio on
- Press up[▲] or down[▼] button to choose the channel.

3) Setting the Tone Code(CTCSS)

GM-18 has 38 CTCSS Codes

- **To set the Tone Codes(CTCSS)**

- Press Function[F] button once more,[XX oF up to 38] will appear and tone code digit will blink on the LCD. " oF " means no CTCSS code.
- Press up[▲] or down[▼] button to choose the desired sub-channel to use.
- Press the PTT button or Function[F] button to confirm.

4) Setting the Transmit Power HI/LO

- **HI** : 1.5W TX power
- **LO** : 500mW TX power
- **To set the TX output power**
 - Press the Function[menu] button until the [Po LO or HI] appears.
 - Press the up[▲] button or down [▼] button to set the TX power
 - Press the PTT button or Function[menu] button to confirm.
 - **HI** or **LO** will appear on the LCD.
 - If the battery is in low condition, the TX Power will be switched to LO automatically.
 - Even though the TX power is set to HI.

5) Setting the DW(dual watch) and CTCSS in DW mode.

- **To active the DW mode**

- Press the Function[menu] button until the [oF or 1 up to 22] and **DW icon** blink on the LCD.
- Press the up[▲] button or down [▼] button to choose the channel.
- " oF " means no DW mode.

- Press the PTT button or Function[**menu**] button to confirm.
- **DW** icon will appear on the LCD.
- **To stop the dual watch(DW)**
- Press the "S" Scan button, the unit will stop the dual watch and will return to normal operation and **DW** icon will disappear from the LCD.
- **DW** icon will disappear from the LCD.

6) VOX (Voice Operated Transmission)

This option enables you to have hands-free conversation. You do not have to operate the PTT button each time when you want to transmit.

You can also choose the VOX sensitivity to suit your environment of operation.

(Ex ; noisy road, motor bike, factory etc.)

- **To set the VOX mode.**
- Press the Function[**menu**] button until the [**Uo oF** or **x**] appears. **x** is a vox level
- **VOX** icon will be appeared on the LCD.
- **To set the VOX level**
- Press the up[▲] button or down [▼] button to set the VOX level from 1 to 5.
- "oF" is disable the VOX function.
- " 3 " is most sensitive.
- " 1 " is least sensitive.
- Press the PTT button or Function[**F**] button to confirm.

7) Beep tone

- **To activate or disable the beep tone**
- Press the Function[**menu**] button until [**bP on** or **oF**] and the **BELL**[🔔] icon blink on the LCD.
- Press the up[▲] button or down [▼] button.
- Press the PTT button or Function[**menu**] button to confirm.

8) Roger tone

This feature will give the tone signal to other parties when transmitting finished (when PTT button is released.)

- **To activate or disable the Roger tone**
- Press the Function[**menu**] button until [**rb on** or **oF**] and the **Roger** [🔊] icon blink on the LCD.
- Press the up[▲] button or down [▼] button.
- Press the PTT button or Function[**menu**] button to confirm.

9) Setting the Ringer

This feature provides 3 user selectable call ringer signal and vibration.

- **To set your favorite call ringer signal.**
 - Press the Function[**menu**] button until the [**CA 1** or up to **3**] appears on the LCD.
 - Press the up[**▲**] button or down [**▼**] button to select the call melody type.
 - Press the PTT button to confirm.
 - To activate the call , click the "**PTT**" button twice quickly.

10) Transmitting

- Press and hold the PTT button (The "TX" LED will light with red color)
- Speak slowly and clearly
- To stop the transmission, release the PTT button
- If there are no more receiving signal for 5 seconds, the unit will go into power save mode and then the "TX" LED will blink with green color.

11) Receiving

The coding feature reduces the possibility of interference and provides enhanced communication. You can only listen to a call that has correct matching code.

Important ;

Before transmitting or receiving to the other parties ;

- Correct channel is selected (1 to 22) and
- Correct code is set (00 to 38)

12) Channel Scanning

This feature allows you to monitor all activated channels while scanning.

- **To activate the Scan**
 - Press the Scan[**S**] button
 - Radio will begin scanning.
 - When in scan mode, the display will show each scanning channel.
 - After an activated channel is scanned and received signal and then if there is no more signal, the scan will resume automatically.
- **To disable the Scan**
 - Press the Scan[**S**] button, the unit will stop the scanning.
 - **SCAN** icon indicator will disappear from the LCD
 - The unit will return to home channel.


13) Call

- Press the Call[**C**] button.(The "TX" LED will light with red color.)


14) Monitoring the channel

It is used for listening the weak signal or to hear all activities on the channel by manually overriding channel sub tone code setting.

- **To activate the Monitor feature**

- Press and hold the Monitor[M] button for over two seconds.
- When you hear the sound, release the Monitor[M] button.
(The monitor[] icon will appear on the LCD.)

- **To disable the Monitor feature**

- Press and hold the Monitor[M] button for over two seconds.
(The monitor[] icon will disappear on the LCD.)

15) Backlight

Backlight is used to improve the display visibility in dark condition.

- **To activate the Backlight**

- Press and hold the Monitor[M] button in a moment.


- **To disable the Backlight**

- Press and hold the Monitor[M] button in a moment once again.

16) Keypad Lock

The lock function is to avoid the accidental changes to channel with other radio settings. All buttons will be locked except the Power, PTT and monitor button.


- **To lock the keypad**

- Press and hold down the Scan[SC] button for over 2 seconds.
- Keypad will lock.(LOCK[] icon will appear on the LCD)



 
- **To unlock the keypad**

- Press and hold down the Scan[SC] button for over 2 seconds.
- Keypad will unlock. (LOCK[] icon will disappear on the LCD)

17) Battery status indicator

The Battery[] icon will blink when the radio is in low battery power.

Charge the rechargeable battery or replace the batteries.

- Full battery - Battery[] icon is not displayed.
- Low battery - Battery[] icon is displayed.
- Low battery warning – Battery[] icon will blinking.

18) External charger /Speaker – Mic

MIC socket can be used for the charging purpose.

It should use the recommended rechargeable battery and wall charger

Use the approved accessories only to have the optimum performance.

- Ear/Mic unit

FCC Information

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES.

OPERATION IS SUBJECT TO THE CONDITION THAT THIS DEVICE DOES NOT CAUSE HARMFUL INTERFERENCE.

MODIFICATIONS OR CHANGES NOT EXPRESSLY APPROVED BY THE MANUFACTURER COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

Your wireless handheld portable transceiver contains a low power transmitter.

When the Push-to-Talk (PTT) button is pushed, it sends out radio frequency (RF) signals. This device is authorized to operate at a duty factor not to exceed 50%.

In August 1996, the Federal Communications Commission (FCC) adopted RF exposure guidelines with safety levels for hand-held wireless devices.

Important Note: To maintain compliance with the FCC's RF exposure guidelines, hold the transmitter and antenna at least 1 inch (2.5 centimeters) from your face and speak in a normal voice, with the antenna pointed up and away from the face.

If you wear the handset on your body while using the headset accessory, use only the manufacturer's supplied belt clip for this product and ensure that the antenna is at least 1 inch (2.5 centimeters) from your body when transmitting.

Use only the supplied antenna. Un-authorized antennas, modifications, or attachments could damage the transmitter and may violate FCC regulations.