



Your new vehicle comes with an Automatic-Dimming Mirror with an Integrated Homelink Wireless Control System.

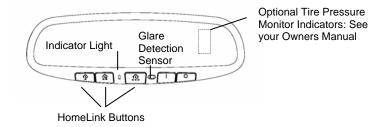

Automatic-Dimming Function

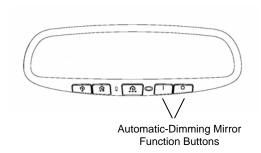

During nighttime driving, this safety feature will automatically detect and eliminate dangerous rearview mirror glare.

To protect your vision during nighttime driving, your mirror will automatically dim upon detecting glare from the vehicles traveling behind you.

Press the button to turn the automatic-dimming function off. The mirror indicator light will turn off.

Press the button to turn the automatic-dimming function on. The mirror indicator

NOTE:

light will illuminate.

The mirror defaults to the "on" position each time the vehicle is started.

Homelink Programming Guide

The HomeLink Wireless Control System provides a convenient way to replace up to three hand-held radio-frequency (RF) transmitters used to activate devices such as gate operators, garage door openers, entry door locks, security systems, even home lighting. Additional HomeLink information can be found at: www.homelink.com or by calling 1-800-355-3515.

Precautions!

 
Before programming HomeLink to a garage door opener or gate operator, make sure that people and objects are out of the way of the device to prevent potential harm or damage. When programming a garage door opener, it is advised to park outside of the garage. Do not use HomeLink with any garage door opener that lacks safety stop and reverse features as required by U.S. federal safety standards (this includes any garage door opener model manufactured before April 1, 1982). A garage door that cannot detect an object - signaling the door to stop and reverse - does not meet current U.S. federal safety standards. For more information, contact HomeLink at www.homelink.com or by calling: 1–800–355–3515.

Retain the original transmitter of the RF device you are programming for use in other vehicles as well as for future HomeLink programming. It is also suggested that upon the sale of the vehicle, the programmed HomeLink buttons be erased for security purposes. Refer to "*Programming*" (step #1 only) or, for assistance, contact HomeLink at: www.homelink.com or by calling: 1-800-355-3515.


Programming HomeLink

Note: Some vehicles may require the ignition switch to be turned to the second (or "accessories") position for programming and/or operation of HomeLink. It is also recommended that a new battery be placed in the hand-held transmitter of the device being programmed to HomeLink for quicker training and accurate transmission of the radio-frequency signal.

 Press and hold the two outer HomeLink buttons - releasing only when the indicator light begins to flash (after 20 seconds).
 Do not hold the buttons for longer than 30 seconds and do not repeat step one to program a second and/or third hand-held transmitter to the remaining two HomeLink buttons.



 - 2. Position the end of your hand-held transmitter 1–3 inches (5–14 cm) away from the HomeLink buttons while keeping the indicator light in view.
- Simultaneously press and hold both the HomeLink and handheld transmitter button. Do not release the buttons until step 4 has been completed.



(Note: Some gate operators and garage door openers may require you to replace this Programming Step 3 with procedures noted in the "Gate Operator and Canadian Programming" section.)

4. The indicator light will flash slowly and then rapidly after HomeLink successfully receives the frequency signal from the hand-held transmitter. Release both buttons.

5. Press and hold the just-trained HomeLink button and observe the indicator light.

If the indicator light **stays on constantly**, **programming is complete** and your device should activate when the HomeLink button is pressed and released.

Note: To program the *remaining two* HomeLink buttons, begin with "Programming" - *step two*. **Do not repeat step one**.

If the indicator light blinks rapidly for two seconds and then turns to a constant light, continue with "Programming" - steps 6-8 to complete the programming of a rolling code equipped device (most commonly a garage door opener).

- 6. At the garage door opener receiver (motor-head unit) in the garage, locate the "learn" or "smart" button. This can *usually* be found where the hanging antenna wire is attached to the motor-head unit.
- 7. Firmly press and release the "learn" or "smart" button. (The name and color of the button may vary by manufacturer.)

Note: There are 30 seconds in which to initiate step eight.

8. Return to the vehicle and firmly **press**, **hold for two seconds and release** the programmed HomeLink button. Repeat the "**press/hold/release**" sequence a second time, and, depending on the brand of the garage door opener (or other rolling code equipped device), repeat this sequence a third time to complete the programming.

HomeLink should now activate your rolling code equipped device.

Note: To program the remaining two HomeLink buttons, begin with "Programming" - step two.

Do not repeat step one.

For questions or comments, please contact HomeLink at: www.homelink.com or 1–800–355–3515.

Gate Operator & Canadian Programming

Canadian radio-frequency laws require transmitter signals to "time-out" (or quit) after several seconds of transmission – which may not be long enough for HomeLink to pick up the signal during programming. Similar to this Canadian law, some U.S. gate operators are manufactured to "time-out" in the same manner.

If you live in Canada or you are having difficulties programming a gate operator by using the "Programming" procedures (regardless of where you live), **replace "Programming HomeLink" Step 3** with the following:

Note: If programming a garage door opener or gate operator, it is advised to unplug the device during the "cycling" process to prevent possible overheating.

3. Continue to press and hold the HomeLink button while you **press and release - every two seconds** ("cycle") your hand-held transmitter until the frequency signal has successfully been accepted by HomeLink. (The indicator light will flash slowly and then rapidly.)

Proceed with "Programming" step four to complete.

Using HomeLink

To operate, simply press and release the programmed HomeLink button. Activation will now occur for the trained device (i.e. garage door opener, gate operator, security system, entry door lock, home/office lighting, etc.). For convenience, the hand-held transmitter of the device may also be used at any time. In the event that there are still programming difficulties or questions, contact HomeLink at: www.homelink.com or 1–800–355–3515.

Erasing HomeLink Buttons

Individual buttons cannot be erased. However, to erase all three programmed buttons:

- 1. Press and hold the two outer HomeLink buttons until the indicator light begins to flash-after 20 seconds.
- 2. Release both buttons. Do not hold for longer that 30 seconds.

HomeLink[®] is now in the training (learning) mode and can be programmed at any time following steps 2 through 4 in the Programming section on page 2.

Reprogramming a Single HomeLink Button

To program a device to HomeLink using a HomeLink button previously trained, follow these steps:

- 1. Press and hold the desired HomeLink button. **Do NOT** release the button.
- 2. The indicator light will begin to flash after 20 seconds. Without releasing the HomeLink button, proceed with "Programming" step 2

For questions or comments, contact HomeLink at: www.homelink.com or 1–800–355–3515.

FCC ID: NZLBTPHL3 IC: 4112A- NZLBTPHL3

This device complies with Part 15 FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning

The transceiver has been tested and complies with FCC and Industry Canada rules. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the device.