



MOTOROLA

User's Guide

TWO-WAY RADIO

Disney Cover Design Not Yet Available



6881040B40-O

Introduction

Disney Motorola 2-way radios operate on Family Radio Service (FRS) designated frequencies. This license-free, two-way radio service was established specifically for family and group recreational use. Use of this radio outside the country where it was intended to be distributed is subject to government regulations and may be prohibited. Read this manual carefully and make sure you know how to properly operate radio before use.

For a copy of a large-print version of this guide, or for product-related questions, please contact:

1-800-353-2729 U.S.A.

1-800-461-4575 Canada

1-888-390-6456 TTY (Text Telephone)

On the web, please refer to: www.motorola.com/talkabout

Congratulations on your purchase of a Motorola product!

Product registration is an important step toward enjoying your new Motorola product. Registering helps us facilitate warranty service, and permits us to contact you should your Motorola product require an update or other service. Registration is not required for warranty coverage. To register your product on-line, visit www.motorola.com/warranty/radios.

Please retain your original dated sales receipt for your records. For warranty service of your Motorola Personal Communications Product you will need to provide a copy of your dated sales receipt to confirm warranty status.

Contents

Introduction	7	Limited Warranty	27
Safety and General Information	1	FCC License	34
Getting Started	9	Software Copyright Notice	34
Turning On Your Radio	9	Export Law Assurances	35
Sharing Radio Channels	9		
Diagram of Your Radio	10		
Display Symbols	11		
Power	12		
Batteries	12		
Talking and Listening	13		
Talk Range	13		
Changing Channels	14		
Changing Interference Eliminator Code ..	15		
Changing Volume	16		
Monitoring a Channel	17		
Time-Out Timer	17		
Locking the Keypad	17		
Alerts	18		
Sending and Changing Call Tones	18		
Talk Confirmation Tone	20		
Alert Tone	21		
Troubleshooting	23		
Use and Care	25		

SAFETY AND GENERAL INFORMATION

IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION

READ THIS INFORMATION BEFORE USING YOUR RADIO

The information provided in this document supersedes the general safety information contained in user guides published prior to July 2000. For information regarding radio use in a hazardous atmosphere please refer to the Factory Mutual (FM) Approval Manual Supplement or Instruction Card, which is included with radio models that offer this capability.

Transmit and Receive Procedure

Your two-way radio contains a transmitter and a receiver. To transmit (talk), you must push the Push-to-Talk button; to receive (listen), release the Push-to-Talk button.

Exposure To Radio Frequency Energy

Your Motorola radio is designed to comply with the following national and international standards and guidelines regarding exposure of human beings to radio frequency electromagnetic energy:

- United States Federal Communications Commission, Code of Federal Regulations; 47 CFR part 2 sub-part J

- American National Standards Institute (ANSI) / Institute of Electrical and Electronic Engineers (IEEE) C95. 1-1992
- Institute of Electrical and Electronic Engineers (IEEE) C95.1-1999 Edition
- National Council on Radiation Protection and Measurements (NCRP) of the United States, Report 86, 1986
- International Commission on Non-Ionizing Radiation Protection (ICNIRP) 1998
- Ministry of Health (Canada) Safety Code 6. Limits of Human Exposure to Radiofrequency Electromagnetic Fields in the Frequency Range from 3 kHz to 300 GHz, 1999
- Australian Communications Authority Radiocommunications (Electromagnetic Radiation - Human Exposure) Standard 1999 (applicable to wireless phones only)

To assure optimal radio performance and make sure human exposure to radio frequency electromagnetic energy is within the guidelines set forth in the above standards, always adhere to the following procedures:

PORTABLE RADIO OPERATION AND EME EXPOSURE

Antenna Care

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the radio and may violate FCC regulations.

DO NOT hold the antenna when the radio is “IN USE.” Holding the antenna affects call quality and may cause the radio to operate at a higher power level than needed.



Two-way Radio Operation

When using your radio as a traditional two-way radio, **hold the radio in a vertical position with the microphone one to two inches (2.5 to 5 cm) away from the lips.**

Body-worn Operation

To maintain compliance with FCC/Health Canada RF exposure guidelines, if you wear a radio on your body when transmitting, always place the radio in a Motorola supplied or approved clip, holder, holster, case, or body harness for this product. Use of non-Motorola-approved accessories may exceed FCC/Health Canada RF exposure guidelines. If you do not use one of the Motorola-supplied or approved body-worn accessories, and are not using the radio held in the normal use position, **ensure the radio and its antenna are at least one inch (2.5 cm) away from your body when transmitting.**

Data Operation

When using any data feature of the radio, with or without an accessory cable, **position the radio and its antenna at least one (2.5 cm) away from the body.**

Approved Accessories

For a list of approved Motorola accessories visit our website at www.mot.com.

ELECTROMAGNETIC INTERFERENCE/COMPATIBILITY

Note: Nearly every electronic device is susceptible to electromagnetic interference (EMI) if inadequately shielded, designed or otherwise configured for electromagnetic compatibility.

- **FACILITIES**

To avoid electromagnetic interference and/or compatibility conflicts, turn off your radio in any facility where posted notices instruct you to do so. Hospitals or health care facilities may be using equipment that is sensitive to external RF energy.

- **AIRCRAFT**

When instructed to do so, turn off your radio when on board an aircraft. Any use of a radio must be in accordance with applicable regulations per airline crew instructions.

- **MEDICAL DEVICES**

Pacemakers

The Advanced Medical Technology Association recommends that a minimum separation of 6 inches (15 centimeters) be maintained between a handheld wireless radio and a pacemaker. These recommendations are consistent with the independent research by, and recommendations of, the United States Food and Drug Administration.

Persons with pacemakers should:

- ALWAYS keep the radio more than six inches (15 centimeters) from their pacemaker when the radio is turned ON.

- not carry the radio in the breast pocket.
- use the ear opposite the pacemaker to minimize the potential for interference.
- turn the radio OFF immediately if you have any reason to suspect that interference is taking place.

Hearing Aids

Some digital wireless radio may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from RF energy. Your physician may be able to assist you in obtaining this information.

Safety and General Use While Driving

Check the laws and regulations on the use of radio in the area where you drive. Always obey them.

When using your radio while driving, please:

- Give full attention to driving and to the road.
- Use hands-free operation, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

OPERATIONAL WARNINGS

- **FOR VEHICLES WITH AN AIR BAG**

Do not place a portable radio in the area over an air bag or in the air bag deployment area. Air bags inflate with great force. If a portable radio is placed in the air bag deployment area and the air bag inflates, the radio may be propelled with great force and cause serious injury to occupants of the vehicle.

- **POTENTIALLY EXPLOSIVE ATMOSPHERES**

Turn off your radio prior to entering any area with a potentially explosive atmosphere, unless it is a radio type especially qualified for use in such areas as “Intrinsically Safe.” Do not remove, install, or charge batteries in such areas. Sparks in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.

Note: The areas with potentially explosive atmospheres referred to above include fueling areas such as below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any other area where you would normally be advised to turn off your vehicle engine. Areas with potentially explosive atmospheres are often but not always posted.

BLASTING CAPS AND AREAS

To avoid possible interference with blasting operations, turn off your radio when you are near electrical blasting caps, in a blasting area, or in areas posted: “Turn off two-way radio.” Obey all signs and instructions.

OPERATIONAL CAUTIONS

- **ANTENNAS**

Do not use any portable radio that has a damaged antenna. If a damaged antenna comes into contact with your skin, a minor burn can result.

- **BATTERIES**

All batteries can cause property damage and/or bodily injury such as burns if a conductive material such as jewelry, keys, or beaded chains touch exposed terminals. The conductive material may complete an electrical circuit (short circuit) and become quite hot. Exercise care in handling any charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects.

BATTERY CHARGER SAFETY INSTRUCTIONS

Save these Charger Instructions

1. Do not expose the charger to rain or snow.
2. Do not operate the charger if it has received a sharp blow, or has been dropped or damaged in any way.
3. Do not disassemble the charger if it has received a sharp blow, or has been dropped or damaged in any way.
4. Never alter the AC cord or plug provided with the unit. If plug will not fit the outlet, have proper outlet installed by a qualified electrician. An improper condition can result in a risk of electric shock.
5. To reduce risk of damage to cord or plug, pull the plug rather than the cord when disconnecting charger from AC receptacle.

6. To reduce the risk of electric shock, unplug the charger from the outlet before attempting any maintenance or cleaning.
7. Use of an attachment not recommended or sold by Motorola may result in a risk of fire, electric shock, or personal injury.
8. Make sure that the cord is located so that it will not be stepped on, tripped over, or subjected to damage or stress.
9. An extension cord should not be used unless absolutely necessary. Use of an improper extension cord could result in a risk of fire and/ or electric shock. If an extension cord must be used, make sure:
 - That the pins on the plug of the extension cord are the same number, size and shape as those on the plug of the charger.
 - That the extension cord is properly wired and in good electrical condition, and
 - That the cord size is 18 AWG for lengths up to 100 feet, and 16 AWG for lengths up to 150 feet.
10. The supply cord of this charger cannot be replaced. If the cord is damaged, call-Motorola Product Services at:
 - 1-800-353-2729 (U. S. A.)
 - 1-800-461-4575 (Canada)
 - 1-888-390-6456 TTY (Text Telephone)

Getting Started

Turning On Your Radio

Do This

Press **⏻**.

Result

The radio display shows the Standby screen.



See page 11 for descriptions of other symbols you might see on the screen.

Sharing Radio Channels

Your radio has multiple channels that you share with other groups on a “take turns” basis. Other groups may be talking on the channels. For uninterrupted communications, do not talk over someone who is already using the channel – your message may not be completely heard. If someone is using your channel, change to a different channel and press **↻** to see if the channel is clear. If you hear static while holding down **↻**, the channel is clear to use.

Diagram of Your Radio

Use - to:

- Decrease volume
- Decrease value when changing menu settings

Use * to:

 
- Scroll through menus
- Exit a menu (when pressed while in a menu)
- Lock/unlock the keypad (when held down and not in a menu)

Use 🎵 to:

Send call tone

Use ⏻ to:

- Turn power on and off

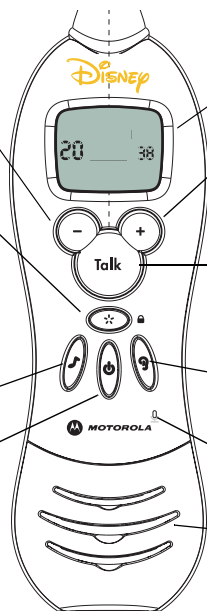

Display

Use + to:

- Increase volume
- Increase value when changing menu settings

Use Talk to:

- Talk
- Save a menu setting

Use 📶 to:


- Monitor channel activity

Microphone

Speaker

Display Symbols

The following picture shows some of the display symbols you might see while using your radio.

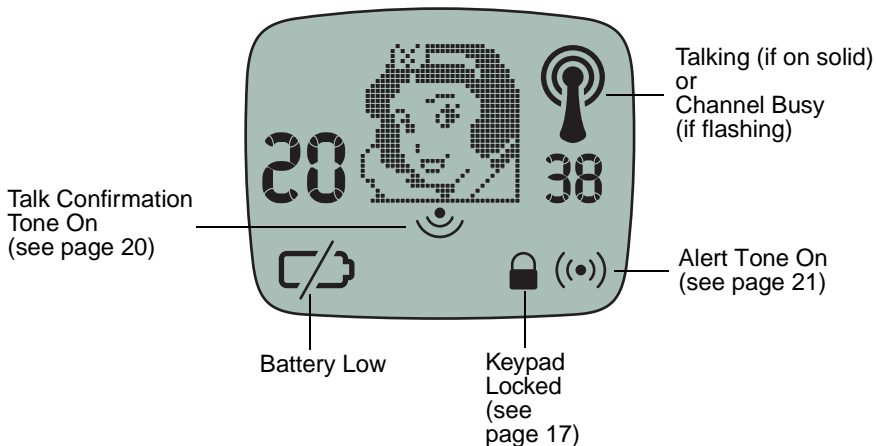 


Power

Batteries

Disney Motorola radios operate with 4 AAA Alkaline batteries.

Installation

 1. With back of radio facing you, press down battery cover latch.
2. Remove battery cover.
3. Insert 4 AAA batteries as shown.
4. Reposition battery cover and press down to secure.

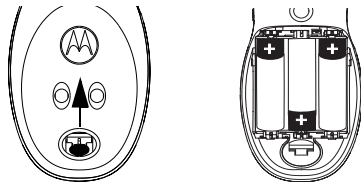

Battery Cover

Low Battery Alert

When batteries are low, a battery low indicator (⌘) appears on the radio display. In addition, the radio will beep:

- 3 to 4 seconds after turning radio on
- Every 10 minutes in standby mode
- After you release the **Talk** button

Battery Life


The approximate battery life during two-way use* for AAA Alkaline is 20 hours.

*Two-way use is defined as 90% standby time, 5% talk time, and 5% receive time.

Note: Remove batteries before storing your radio for extended periods. Batteries corrode over time and may cause permanent damage to your radio.

Talking and Listening

To communicate, all radios in your group must be set to the same channel (1-14) and interference eliminator code (0-38).

- For clearest communication, hold radio 2 to 3 inches from mouth.
- Press and hold the **Talk** button and speak into the microphone. The  indicator appears on the right side of the radio display while you are talking.
- To receive messages, release the **Talk** button.

Talk Range

Your radio has been designed to maximize performance and improve transmission range. It is recommended that you do not use the radios closer than 5 feet apart.



Optimal Range Outdoors
Flat, open areas





Medium Range Outdoors
Buildings or trees
Also near residential buildings



Minimal Range Outdoors
Dense foliage or mountains
Also inside some buildings

Changing Channels

If other groups are using the current channel, follow these steps to change to a new channel:

Do This	Result
1. From Standby screen, press * two times.	The current channel number flashes. 
2. Press - or + to change channel number.	
3. Press Talk to save channel setting.	The display returns to Standby screen, with new channel number displayed.

Changing Interference Eliminator Code

If there is interference on a channel, try changing the interference eliminator code to minimize the interference.

Do This

Result

1. From Standby screen, press ***** three times.

The current interference eliminator code flashes.



2. Press **-** or **+** to change code.




3. Press **Talk** to save code setting.

The display returns to Standby screen, with new code displayed.


You can set a different code for each channel. To set a channel and code combination:

1. Press ***** two times and then press **-** or **+** to select the channel.
 2. Press ***** again and then press **-** or **+** to select a code.
 3. Press **Talk** to exit the menu and save the channel and code combination.
- To set another channel and code combination, repeat these steps.

Changing Volume

Do This	Result
1. Press - to decrease or + to increase the volume.	The display shows the current volume setting (1-16).
	
2. Press Talk to save the volume setting.	The display returns to Standby screen.


Monitoring a Channel

Pressing  lets you hear the radio's volume level when you are not receiving so you can adjust the volume. It is also lets you check activity on the current channel before talking.


Time-Out Timer

The time-out timer helps extend battery life by preventing accidental transmission. The radio emits a continuous warning tone if **Talk** is pressed for 60 continuous seconds. The radio then stops transmitting.


Locking the Keypad

To avoid accidentally changing radio operation, you can lock the keypad. When the keypad is locked, the  button does not work. You will no longer be able to change the call tone, channel, or interference eliminator code.

Do This

1. Press and hold  for 3 seconds.

Result


A  appears on the display, indicating the keypad is locked.



Do This

Result


2. To unlock, press and hold * for 3 seconds

The  disappears, indicating the keypad is unlocked.

Alerts

Sending and Changing Call Tones

Call tones are sounds you can send to get your listener's attention before you start talking. Your radio has 5 different sounds you can send. Each sound is a different Disney character's voice. The picture on the radio display shows the selected character.

To send the selected call tone, press . Listeners who are using the same channel and code will hear your call tone.

 
To change the call tone:

Do This


Result

1. From Standby screen, press ***** one time.

The display shows the  symbol next to the Disney character's picture.

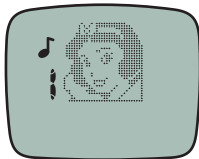

 2. Press **-** or **+** to change and hear the different character voices.

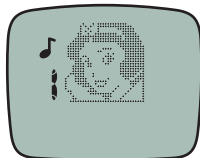

3. When the desired character is shown, press **Talk** .

The display returns to Standby screen, with the new character displayed.

Talk Confirmation Tone

When the talk confirmation tone is turned on, your radio sends a unique tone when you finish talking and release the **Talk** button. It's like saying "Roger" or "Over" and lets others know you're finished talking. When this tone is turned on, the ☺ symbol appears on the Standby screen.

 
To turn the talk confirmation tone on or off:

Do This


Result

1. From Standby screen, press * four times.

The display shows the ☺ symbol.

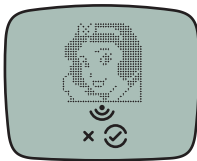

 2. Press + or - to turn the talk confirmation tone on or off. The ☺ symbol means the tone is on. The ☒ symbol means the tone is off.

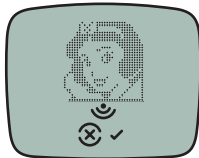

Do This

- When the setting you want is shown, press **Talk** .

Result

The display returns to Standby screen.

Alert Tone

When the alert tone is turned on, your radio sounds a tone whenever you press a button on the keypad. When this tone is turned on, the (📞) symbol appears on the Standby screen.

To turn the alert tone on or off:

Do This

- From Standby screen, press * five times.

Result

The display shows the (📞) symbol.

 


Do This

2. Press **+** or **-** to turn the alert tone on or off. The ☺ symbol means the tone is on. The ☹ symbol means the tone is off.

3. When the setting you want is shown, press **Talk** button.

Result

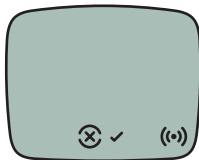

The display returns to Standby mode.

Troubleshooting

Problem	Solution
No Power	Reposition or replace batteries.
Erratic Display	Reposition or replace batteries.
Message Not Transmitted	Make sure Talk button is completely pressed while you transmit. Reposition or replace batteries. Shared channel may be in use. Try another channel.
Message Not Received	Confirm radios have same channel settings and/or interference eliminator code (helps minimize interference). Make sure Talk button is not inadvertently pressed. Reposition or replace batteries. Obstructions and use in buildings and in vehicles may interfere with communication. Change your location. Check that volume is turned up.

Problem	Solution
Hearing Other Conversation or Noise on a Channel	Shared channel may be in use. Try another channel.
Limited Talk Range	Steel/concrete structures, heavy foliage, and use in buildings and in vehicles will decrease range. Check for clear line of sight to improve transmission. Wearing radio close to body, such as in a pocket or on a belt, will decrease range. Change location of radio.
Heavy Static or Interference	Radios too close. Radios must be at least 5 feet apart; increase your distance. Radios too far apart. Obstacles interfere with transmission.

Use and Care



To clean the radio, use a soft damp cloth.



Do not immerse in water.



Do not use alcohol or cleaning solutions.

If the radio gets wet...



Turn it off and remove batteries.



Dry with soft cloth. Battery contacts may be wiped with a dry, lint-free cloth.



Do not use until completely dry.

Limited Warranty

for Motorola Personal Communications Products and Accessories Purchased in the United States and Canada

IV. What This Warranty Covers

Defects in materials and workmanship in the following new “Products” manufactured, sold or certified by Motorola, with which this limited warranty is included in/on the package: (a) wireless cellular telephones, pagers and two-way radios that operate via “Personal Radio Service” (such as Family Radio Service and General Mobile Radio Service), together with software imbedded in any of these products, and (b) subject to the following exceptions, accessories or software sold for use with these products.

- Battery Exception. This limited warranty extends only to batteries in which the fully-charged capacity falls below 80% of rated capacity and batteries that leak;
- Software Exceptions. This limited warranty extends only to physical defects in the media (such as CD-ROM) that tangibly embodies each copy of any software sold and/or certified by Motorola for use with Products. Software that is not tangibly embodied in media and that is purchased separately from Products (such as software that is downloaded from the internet) comes “as is” and without warranty.

V. What the Period of Coverage Is

Subject to the following exceptions, one year from the date the Products are purchased by the first end-user:

- 90-Day Warranty Exception. The warranty is for 90 days for: (a) any software tangibly embodied in media or (b) any accessories for two-way radios that are covered by this warranty, as described in Section I, above.

- Limited Lifetime Warranty Exception. The warranty is a limited lifetime warranty for the lifetime of ownership by the first end-user of the following products, only: (a) decorative covers, including bezel, PhoneWrap™ or case (any model); and (b) ear buds and boom headsets that transmit mono sound through a wire connection (this does not include ear buds or boom headsets that either transmit stereo sound or that are wireless, or both).
- Repair / Replacement Exception. The warranty is for the balance of the original warranty or for 90 days from the date returned and delivered to the first end-user, whichever is longer.

VI. Who is Covered

This warranty extends to you only if you are the first end-user purchaser.

VII. What We Will Do to Correct Warranty Problems

At no charge to you, we have the option to repair or replace the Products that do not conform to the warranty, or to refund the Products' purchase price. We may use functionally equivalent reconditioned/refurbished/pre-owned or new Products or parts. No software updates are provided.

VIII. How to Get Warranty Service

PLEASE CALL US – DO NOT SHIP:

USA

Cellular 1-800-331-6456

Paging 1-800-548-9954

FRS Radios 1-800-353-2729

1-888-390-6456 TTY (Text Telephone)

Canada

All Products 1-800-461-4575

1-888-390-6456 TTY (Text Telephone)

Accessories and software -- call the number designated for the product with which they are used.

You will receive instructions on how to ship the Products to Motorola or our designated resource. If instructed to ship the Products, you must ship them with freight, duties and insurance prepaid. Regardless of where you are instructed to return the Products, you must include: (a) a copy of your receipt, bill of sale or other comparable proof of purchase; (b) a written description of the problem; (c) the name of your service provider (if this Product requires subscription service); (d) the name and location of the installation facility (if applicable) and, most importantly; (e) your address and telephone number. If requested, you must also return all detachable parts such as antennas, batteries and chargers. **RETAIN YOUR ORIGINAL PROOF OF PURCHASE.**

For Products we ask you ship to us, we will ship repaired or replacement Products at our expense for the freight and insurance, but at your expense for any duties. If additional information is needed, please contact us at the telephone number listed above.

IX. What This Warranty Does Not Cover

- Products that are operated in combination with ancillary or peripheral equipment or software not furnished or otherwise certified by Motorola for use with the Products (“ancillary equipment”), or any damage to the Products or ancillary equipment as a result of such use. Among other things, “ancillary equipment” includes batteries, chargers, adaptors, and power supplies not manufactured or supplied by Motorola. Any of these voids the warranty.
- Someone other than Motorola (or its authorized service centers) tests, adjusts, installs, maintains, alters, modifies or services the Products in any way. Any of these voids the warranty.

- Rechargeable batteries that: (a) are charged by other than the Motorola-approved battery charger specified for charging such batteries; (b) have any broken seals or show evidence of tampering; (c) are used in equipment other than the Product for which they are specified; or (d) are charged and stored at temperatures greater than 60 degrees centigrade. Any of these voids the warranty.
- Products that have: (a) serial numbers or date tags that have been removed, altered or obliterated; (b) board serial numbers that do not match each other, or board serial numbers that do not match the housing; or (c) nonconforming or non-Motorola housings or parts. Any of these voids the warranty.
- Defects or damage that result from: (a) use of the Products in a manner that is not normal or customary; (b) improper operation or misuse; (c) accident or neglect such as dropping the Products onto hard surfaces; (d) contact with water, rain, extreme humidity or heavy perspiration; (e) contact with sand, dirt or the like; or (f) contact with extreme heat, or spills of food or liquid.
- Physical damage to the surface of the Products, including scratches, cracks or other damage to a display screen, lens or other externally exposed parts.
- Failure of Products that is due primarily to any communication service or signal you may subscribe to or use with the Products.
- Coil cords that are stretched or that have any broken modular tabs.
- Leased Products.

Flat-rate repair rates may apply to Products not covered by this warranty. To obtain information about Products needing repairs that are not covered by this warranty, please call the telephone number previously listed. We will provide information on repair availability, rates, methods of payment, where to send the Products, etc.

X. Some Other Limitations

This is Motorola's complete warranty for the Products, and states your exclusive remedies. This warranty is given in lieu of all other express warranties. Implied warranties, including without limitation, the implied warranties of merchantability and fitness for a particular purpose, are given only if specifically required by applicable law. Otherwise, they are specifically excluded.

No warranty is made as to coverage, availability, or grade of service provided by the Products, whether through a service provider or otherwise.

No warranty is made that the software will meet your requirements or will work in combination with any hardware or applications software products provided by third parties, that the operation of the software products will be uninterrupted or error free, or that all defects in the software products will be corrected.

In no event shall Motorola be liable, whether in contract or tort (including negligence) for damages in excess of the purchase price of the Product, or for any indirect, incidental, special or consequential damages of any kind, or loss of revenue or profits, loss of business, loss of information or data, or other financial loss arising out of or in connection with the ability or inability to use the Products, to the full extent these damages may be disclaimed by law.

XI. Patent and Software Provisions

At Motorola's expense, we will defend you, and pay costs and damages that may be finally awarded against you, to the extent that a lawsuit is based on a claim that the Products directly infringe a United States patent. Our obligation is conditioned on: (a)

you notifying us promptly in writing when you receive notice of the claim; (b) you giving us sole control of the defense of the suit and all negotiations for its settlement or compromise; and (c) should the Products become, or in Motorola's opinion be likely to become, the subject of a claim of infringement of a United States patent, you permit us, at our option and expense, either to: procure for you the right to continue using the Products; replace or modify them so that they become non-infringing; or grant you a credit for such Products, as depreciated, and accept their return. The depreciation will be an equal amount per year over the lifetime of the Products, as established by Motorola.

Motorola will have no liability to you with respect to any claim of patent infringement that is based upon the combination of the Products or parts furnished under this limited warranty with ancillary equipment, as defined in VI., above.

This is Motorola's entire liability with respect to infringement of patents by the Products.

XII. State Law and Other Jurisdiction Rights

Some states and other jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from jurisdiction to jurisdiction.

To obtain information on Motorola Personal Communications Products, including warranty service, accessories and optional Extended Warranties on selected Products, please call:

USA

Cellular 1-800-331-6456

Paging 1-800-548-9954

FRS Radios 1-800-353-2729

TTY (Text Telephone) 1-888-390-6456

Canada

All Products 1-800-461-4575

TTY (Text Telephone)

1-888-390-6456

Accessories and software -- call the telephone number designated above for the product with which they are used.

DO NOT SHIP PRODUCTS TO THESE ADDRESSES – INSTEAD PLEASE CALL.

To correspond with Motorola about the Products, please write us at

<http://www.motorola.com> or at:

USA

Motorola, Inc.

600 North U.S. Highway 45

Libertyville, IL 60048

Canada

Motorola Canada Limited

5875 Whittle Road

Mississauga, ON L4Z 2H4

FCC License Not Required

Changes or modifications not expressly approved by Motorola may void the user's authority granted by the FCC to operate this radio and should not be made. To comply with FCC requirements, transmitter adjustments should be made only by or under the supervision of a person certified as technically qualified to perform transmitter maintenance and repairs in the private land mobile and fixed services as certified by an organization representative of the user of those services. Replacement of any transmitter component (crystal, semiconductor, etc.) not authorized by the FCC equipment authorization for this radio could violate FCC rules.

Software Copyright Notice

The Motorola products described in this manual may include copyrighted Motorola and third party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in the Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents, or patent applications of Motorola or any third party software provider, except for the normal, non-exclusive, royalty-free license to use that arises by operation of law in the sale of a product.

Patent Information

This product is manufactured under one or more of the following United States patents.

5896277 5894292 5864752 5699006 5742484 D408396 D399821 D387758
D389158 5894592 5893027 5789098 5734975 5861850 D395882 D383745
D389827 D389139 5929825 5926514 5953640 6071640 D413022 D416252
D416893 D433001

Export Law Assurances

This product is controlled under the export regulations of the United States of America and Canada. The Governments of the United States of America and Canada may restrict the exportation or re-exportation of this product to certain destinations. For further information contact the U.S. Department of Commerce or the Canadian Department of Foreign Affairs and International Trade.

- **Audible Call Tone**
Multiple distinct ringing options so your group can identify who's calling
- **Call Tone Button**
Get others' attention before you start talking
- **Talk Confirmation Tone**
Signals others you're finished talking
- **No license fee or airtime charges!**
- **Durable, fixed antenna**
Maximizes talk range
- **Batteries (not included)**
Requires 4 AAA Alkaline batteries
- **Keypad Lock**
Prevents your settings from being accidentally changed
- **Weather-resistant**
- **1 Year Limited Warranty**
For warranty details call 1-800-353-2729
- **User's Guide included**
- **Low Battery Alert**
Audible tone and visual display tell you your battery is running down
- **Up to 2 mile range***
* Range will vary based on terrain and conditions

Disney Motorola® Two-Way Radio



Proof of Purchase

WARNING CHOKING HAZARD

SMALL PARTS

Not for children under 3 years.
This product is not intended to be used as a toy or plaything.

MOTOROLA, the Stylized M Logo, and all other trademarks indicated as such herein are trademarks of Motorola, Inc. ® Reg. U.S. Pat. & Tm. Off. All other product or service names are the property of their respective owners.

© 2002 Motorola, Inc. All rights reserved. Printed in China.