

GIANT ELECTRONICS LTD.

TITLE: Software Description

MODEL: G2405

DOCUMENT NO.: ENG-G2405-05			Signature	Name	Title
Issue No.	01	Prepared by	<i>Chiang</i>	PW Chiang	S Engineer
Issue Date	Nov 19, 1999	Reviewed by	<i>Chiang</i>	PW Chiang	S. Engineer
Page No.	1/6	Approved by	<i>AP</i>	Alan Poon	S. Manager

Distribution List:

- follow Doc. Con. 3rd level controlled document distribution list.
(refer form # QC002)
- Other _____

Rev.#	Date	Page	Revision Details	Prepared by	Checked by	Approved by
00	11/19/99	6	First Issue	<i>Chiang</i>	<i>Chiang</i>	<i>AP</i>

GIANT ELECTRONICS LTD:			
Title: Software Description			
Model: G2405			Page 2 of 6
Document No.: ENG-G2405-05	Issue No.: 01	Rev. No.: 00	Issued date: 11/19/99
Prepared by: PW Chiang <i>Chiang</i>	Checked by: PW Chiang <i>Chiang</i>		Approved by: Alan Poon <i>Ap</i>

Operation manual

For

Model G2405

Giant Electronics Ltd.

Author: PWChiang

Checked: *Chiang*

Approved: *Ap*

Date of Approval: Dec 6, 99

GIANT ELECTRONICS LTD.			
Title: Software Description			
Model: G2405			Page 3 of 6
Document No.: ENG-G2405-05	Issue No.: 01	Rev. No.: 00	Issued date: 11/19/99
Prepared by: PW Chiang <i>Chiang</i>	Checked by: PW Chiang <i>Chiang</i>	Approved by: Alan Poon <i>AP</i>	

1	40-Channel Operation	4
2	Security Code.....	4
3	Placing a Call.....	4
4	Receiving a Call.....	4
5	Ending a Call.....	4
6	Flash	4
7	Mute.....	4
8	Temporary Tone.....	4
9	Redial.....	5
10	Pause.....	5
11	Page / Handset Location	5
12	Memory Feature.....	5
13	Selecting the Ringer Melody	5
14	Adjusting the Ringer Volume	6
15	Adjusting the Earpiece Volume	6
16	Battery Low indication	6
17	Out of range	6
18	Ringer On/Off	6

GIANT ELECTRONICS LTD.			
Title: Software Description			
Model: G2405		Page 4 of 6	
Document No.: ENG-G2405-05		Issue No.: 01	Rev. No.: 00
Prepared by: PW Chiang <i>Chiang</i>		Checked by: PW Chiang <i>Chiang</i>	Approved by: Alan Poon <i>AP</i>

1 40-Channel Operation

The G2405 cordless telephone automatically searches and selects the clearest of 40 channels when it is being used.

2 Security Code

The security code prevents your cordless telephone conversation from being accessed by a phone on a different line. Once the handset battery is fully charged, the handset will automatically select the code from a total of over 65,000 combinations. The code is changed very time the handset is placed in the cradle.

3 Placing a Call

1. Press TALK button.
2. IN-USE LED on handset will light.
The IN-USE LED on Base will blink at the same time.
3. When you hear a dial tone, place your call.

4 Receiving a Call

During ringing, both the IN-USE LED on handset and IN-USE LED on Base will blink. The ringer sound from handset will be heard too.

1. IF THE HANDSET IS OUT OF THE BASE UNIT, press TALK on the keypad.
 2. IF THE HANDSET IS IN THE BASE UNIT, lift the handset.
- Do not press TALK. You will automatically be connected.

5 Ending a Call

1. Place the handset in the base or press TALK to be disconnected from the line.
2. Both IN-USE LED on handset and IN-USE LED on Base will turn off.

6 Flash

If you have "call waiting" service and a call waiting tone sound is heard while you are on call, press FLASH to accept the waiting call. There is a short pause, then you will hear the new caller. To return to the original caller, press FLASH again.

7 Mute

During a call, press MUTE to mute the microphone. Press again to return to normal function.

8 Temporary Tone (*)

PULSE (rotary) service users may access touch-tone features needed to operate answering machines or use electronic banking, calling cards, etc., by pressing the TONE(*) button. Phone will automatically return to pulse dialing after the call ends.