

User's Guide

Model: T8260D

Contents

Safety and General Information	2	Special Features	17
FCC Licensing Information	10	Interference Eliminator Code	17
Control Buttons	11	Push to Talk Timeout Timer	17
Getting Started	12	Locking the Keypad	17
Installing the AA Batteries	12	Scanning Channels	18
Installing the NiMH Battery Pack	12	Advanced Scan	18
Battery Meter	13	Alerts	19
Attaching the Belt Clip	14	Channel Busy Indicator	19
Removing the Belt Clip	14	Setting and Transmitting Call Tones	19
Turning Your Radio On and Off	14	Transmitting a Talk Confirmation Tone	20
Setting the Volume	14	Accessories	21
Setting a Channel	15	Using Audio Accessories	21
Channels and Frequencies.....	15	Hands - Free Use (VOX / iVOX)	22
Talking and Listening	16	Setting the Sensitivity Level	22
Talk Range	16	Warranty	23
Checking the Channel Before Transmitting	16	Copyright Information	28

2 Safety and General Information

Important Information on Safe and Efficient Operation Read This Information Before Using Your Radio

The information provided in this document supersedes the general safety information in user guides published prior to December 1, 2002.

Transmit and Receive Procedure

Your two-way radio contains a transmitter and a receiver. To control your exposure and ensure compliance with the general population/uncontrolled environment exposure limits, always adhere to the following procedure:

- ◆ Transmit no more than 50% of the time.
- ◆ To transmit (talk), press the Push to Talk (PTT) button.
- ◆ To receive calls, release the PTT button.

Transmitting 50% of the time, or less, is important because the radio generates measurable RF energy exposure only when transmitting (in terms of measuring standards compliance).

Exposure To Radio Frequency Energy

Your two-way radio complies with the following RF energy exposure standards and guidelines:

- ◆ United States Federal Communications Commission, Code of Federal Regulations; 47CFR part 2 sub-part J

- ◆ American National Standards Institute (ANSI) / Institute of Electrical and Electronic Engineers (IEEE) C95. 1-1992
- ◆ Institute of Electrical and Electronic Engineers (IEEE) C95.1-1999 Edition
- ◆ International Commission on Non-Ionizing Radiation Protection (ICNIRP) 1998
- ◆ Ministry of Health (Canada) Safety Code 6. Limits of Human Exposure to Radiofrequency Electromagnetic Fields in the Frequency Range from 3 kHz to 300 GHz, 1999
- ◆ Australian Communications Authority Radiocommunications (Electromagnetic Radiation --- Human Exposure) Standard, 2003
- ◆ ANATEL ANNEX to Resolution No. 303 of July 2, 2002 "Regulation of limitation of exposure to electrical, magnetic and electromagnetic fields in the radio frequency range between 9 KHz and 300 GHz" and "Attachment to Resolution No. 303 from July 2, 2002"

To assure optimal radio performance and make sure human exposure to radio frequency electromagnetic energy is within the guidelines set forth in the above standards, always adhere to the following procedures.

Portable Radio Operation and EME Exposure

Antenna Care

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the radio and may violate FCC regulations.

DO NOT hold the antenna when the radio is "IN USE!" Holding the antenna affects the effective range.

4 Safety and General Information

Two-way Radio Operation

When using your radio as a traditional two-way radio, **hold the radio in a vertical position with the microphone 1 to 2 inches (2.5 to 5 cm) away from the lips.**

Body-Worn Operation

To maintain compliance with FCC/Health Canada RF exposure guidelines, if you wear a radio on your body when transmitting, always place the radio in a supplied or approved clip, holder, holster, case, or body harness for this product. Use of non-approved accessories may exceed FCC/Health Canada RF exposure guidelines.

If you do not use one of the supplied or approved body-worn accessories, and are not using the radio held in the normal use position, **ensure the radio and its antenna are at least 1 inch (2.5 cm) from your body when transmitting.**

Data Operation

If applicable, when using any data feature of the radio with or without an accessory cable, **position the radio and its antenna at least 1 inch (2.5 cm) from the body.**

Electromagnetic Interference/Compatibility

Note: Nearly every electronic device is susceptible to electromagnetic interference (EMI) if inadequately shielded, designed, or otherwise configured for electromagnetic compatibility.

Facilities

To avoid electromagnetic interference and/or compatibility conflicts, turn off your radio in any facility where posted notices instruct you to do so. Hospitals or health care facilities may be using equipment that is sensitive to external RF energy.

Aircraft

When instructed to do so, turn off your radio when on board an aircraft. Any use of a radio must be in accordance with applicable regulations per airline crew instructions.

Medical Devices - Pacemakers

The Advanced Medical Technology Association recommends that a minimum separation of 6 inches (15 cm) be maintained between a handheld wireless radio and a pacemaker. These recommendations are consistent with the independent research by, and recommendations of the U.S. Food and Drug Administration.

Persons with pacemakers should:

- ◆ ALWAYS keep the radio more than 6 inches (15 cm) from their pacemaker when the radio is turned ON.
- ◆ Not carry the radio in the breast pocket.
- ◆ Use the ear opposite the pacemaker to minimize the potential for interference.
- ◆ Turn the radio OFF immediately if you have any reason to suspect that interference is taking place.

6 Safety and General Information

Medical Devices - Hearing Aids

Some digital wireless radios may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from RF energy. Your physician may be able to assist you in obtaining this information.

Safety and General Use While Driving

Check the laws and regulations on the use of radios in the area where you drive. Always obey them. When using your radio while driving, please:

- ◆ Give full attention to driving and to the road.
- ◆ Use hands-free operation, if available.
- ◆ Pull off the road and park before making or answering a call if driving conditions so require.

Operational Warnings

For Vehicles with an Air Bag

Do not place a portable radio in the area over an air bag or in the air bag deployment area. Air bags inflate with great force. If a portable radio is placed in the air bag deployment area and the air bag inflates, the radio may be propelled with great force and cause serious injury to occupants of the vehicle.

Potentially Explosive Atmospheres

Turn off your radio prior to entering any area with a potentially explosive atmosphere, unless it is a radio type especially qualified for use in such areas as "intrinsically safe."

Do not remove, install, or charge batteries in such areas. Sparks in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.

Note: The areas with potentially explosive atmospheres referred to above include fueling areas such as below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders, and any other area where you would normally be advised to turn off your vehicle engine. Areas with potentially explosive atmospheres are often but not always posted.

Blasting Caps and Areas

To avoid possible interference with blasting operations, turn off your radio when you are near electrical blasting caps, in a blasting area, or in areas posted: "Turn off two-way radio." Obey all signs and instructions.

Operational Cautions**Antennas**

Do not use any portable radio that has a damaged antenna. If a damaged antenna comes into contact with your skin, a minor burn can result.



Safety and General Information 7



8 Safety and General Information

Batteries

All batteries can cause property damage and/or bodily injury such as burns if a conductive material such as jewelry, keys, or beaded chains touch exposed terminals. The conductive material may complete an electrical circuit (short circuit) and become quite hot. Exercise care in handling any charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects.

Battery Charger Safety Instructions**Save these Instructions**

1. Do not expose the charger to rain or snow.
2. Do not operate or disassemble the charger if it has received a sharp blow, or has been dropped or damaged in any way.
3. Never alter the AC cord or plug provided with the unit. If the plug will not fit the outlet, have the proper outlet installed by a qualified electrician. An improper condition can result in a risk of electric shock.
4. To reduce the risk of damage to the cord or plug, pull the plug rather than the cord when disconnecting the charger from the AC receptacle.
5. To reduce the risk of electric shock, unplug the charger from the outlet before attempting any maintenance or cleaning.
6. Use of an attachment not recommended or sold with unit may result in a risk of fire, electric shock, or personal injury.

7. Make sure the cord is located so it will not be stepped on, tripped over, or subjected to damage or stress.
8. An extension cord should not be used unless absolutely necessary. Use of an improper extension cord could result in a risk of fire and/or electric shock. If an extension cord must be used, make sure that:
 - ◆ The pins on the plug of the extension cord are the same number, size and shape as those on the plug of the charger.
 - ◆ The extension cord is properly wired and in good electrical condition.
 - ◆ The cord size is 18 AWG for lengths up to 100 feet, and 16 AWG for lengths up to 150 feet.
9. The supply cord of this charger cannot be replaced. If the cord is damaged, call Customer Service at 1-800-638-5156 in USA or Canada.

Safety and General Information 9

10 FCC Licensing Information

FCC Licensing Information

 
Your radio operates on General Mobile Radio Service (GMRS) frequencies and is subject to the Rules and Regulations of the Federal Communications Commission (FCC). The FCC requires that all operators using GMRS frequencies obtain a radio license before operating their equipment. To obtain the FCC forms, please request Form **605** and **159**, which includes all forms and instructions. If you wish to have the document faxed or mailed, or have questions, please use the following contact information.

Faxed Contact the Fax-On- Demand system at:	Mailed Call the FCC forms hotline at:	Questions Regarding FCC license Contact the FCC at:
1-202-418-0177	1-800-418-FORM (1-800-418-3676)	1-888-CALL-FCC (1-888-225-5322) Or: http://www.fcc.gov

.....
 Changes or modifications not expressly approved may void the user's authority granted by the FCC to operate this radio and should not be made. To comply with FCC requirements, transmitter adjustments should be made only by or under the supervision of a person certified as technically qualified to perform transmitter maintenance and repairs in the private land mobile and fixed services as certified by an organization representative of the user of those services. Replacement of any transmitter component (crystal, semiconductor, etc.) not authorized by the FCC equipment authorization for this radio could violate FCC rules.

Note: Use of this radio outside the country where it was intended to be distributed is subject to government regulations and may be prohibited.

Control Buttons - Model T8260D

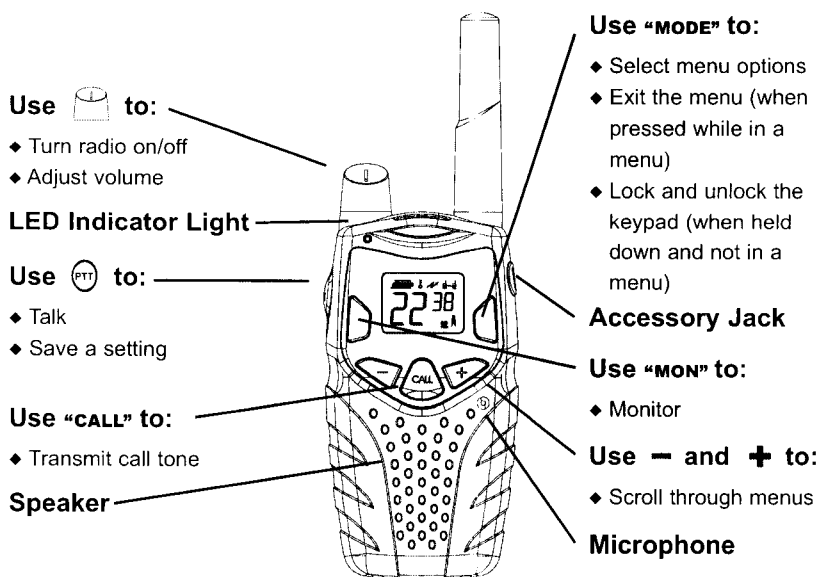

Control Buttons - Model T8260D 11

12 Getting Started

 
Getting Started

Installing the AA Batteries

Your radio uses 3 AA Alkaline batteries.

1. With the back of the radio facing you, lift the battery latch up to release the battery cover and remove the cover.
2. Insert 3 AA Alkaline batteries as shown on the inside of the battery compartment.
3. Reposition the battery cover and press down to secure.

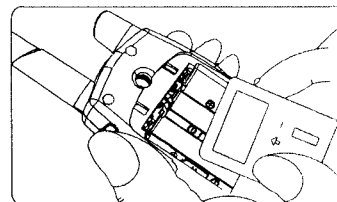


Note: The T8260D model radio can use a NiMH rechargeable battery instead of 3 AA Alkaline batteries.



Installing the NiMH Battery Pack

1. Follow step 1 above to remove the battery cover.
2. Remove the battery pack from the clear plastic bag.
Do not disassemble or unwrap the battery pack.
3. Insert the NiMH battery pack so the metal contacts on the side of the battery are facing outward from the radio to connect with the contacts on the battery door.
4. Reposition the battery cover and press down to secure.

Battery Meter

The battery icon shows the battery charge level, from full  to empty . When the battery is empty, the radio chirps periodically after releasing . The radio powers off when the voltage drops below a predetermined level to protect the rechargeable battery.

Note: Remove the batteries before storing your radio for extended periods of time.

Batteries corrode over time and may cause permanent damage to your radio.

Using the Desk Stand Charger

The desk stand charger provides drop-in charging convenience for NiMH batteries and can be placed on any flat surface, such as a desk or workbench. Charge the NiMH battery overnight (at least 16 hours) before using it for the first time. After the initial charge, an empty battery is fully charged within 14 hours.

1. Turn the radio off and remove the battery cover.
2. Remove the battery pack from the clear plastic bag. **Do not disassemble or unwrap the battery pack.**
3. Insert the NiMH battery pack so the metal contacts on the side of the battery are facing outward from the radio to connect with the contacts on the battery door.
4. Reposition the battery cover and press down to secure.
5. Plug the AC power supply into the plug on the desk stand.
6. Plug the AC power supply into a standard wall outlet.
7. With the radio facing forward, slide it into one of the charging pockets.

Getting Started 13

14 Getting Started

Notes

- ◆ The light on the charging base will glow continuously when radio/battery is inserted.
- ◆ When moving between hot and cold temperatures, do not charge the battery until the battery temperature acclimates (usually about 20 minutes).
- ◆ For optimal battery life, remove the radio or battery from the charger within 16 hours.

Do not store the radio in the charger.


Attaching the Belt Clip

1. Align the belt clip post with the hole in the back of the radio.
2. Gently push until the clip clicks into place.



Removing the Belt Clip

1. Push down on the release tab at the top of the belt clip to release the catch.
2. Pull the belt clip away from the back of the radio.

Turning Your Radio On and Off

Turn  clockwise to turn the radio on and counterclockwise to turn the radio off. The radio chirps and the display briefly shows all feature icons available on your radio.

Setting the Volume

Rotate  while holding down "MON" until you reach a comfortable listening level. Rotate  clockwise to increase the volume or counterclockwise to decrease the volume.

Setting a Channel

Your radio has 22 channels. Channels 1-7 and 15-22 are 1 watt. Channels 8-14 are 0.5 watt. When the radio is on a 1 watt channel, **A** displays. The High power icon will be turned off when the radio is on a 0.5 watt channel.

1. With the radio on, press **"MODE"**. The current channel flashes.
2. Press **-** or **+** to set the channel.
3. Press **(PTT)** to save the channel setting.

Channels and Frequencies

Channel	Frequency	Description	Channel	Frequency	Description
1	462.5625 MHz	GMRS/FRS	12	467.6625 MHz	FRS
2	462.5875 MHz	GMRS/FRS	13	467.6875 MHz	FRS
3	462.6125 MHz	GMRS/FRS	14	467.7125 MHz	FRS
4	462.6375 MHz	GMRS/FRS	15	462.5500 MHz	GMRS
5	462.6625 MHz	GMRS/FRS	16	462.5750 MHz	GMRS
6	462.6875 MHz	GMRS/FRS	17	462.6000 MHz	GMRS
7	462.7125 MHz	GMRS/FRS	18	462.6250 MHz	GMRS
8	467.5625 MHz	FRS	19	462.6500 MHz	GMRS
9	467.5875 MHz	FRS	20	462.6750 MHz	GMRS
10	467.6125 MHz	FRS	21	462.7000 MHz	GMRS
11	467.6375 MHz	FRS	22	462.7250 MHz	GMRS

Getting Started 15

16 Talking and Listening

To communicate, all radios in your group must be set to the same channel and Interference Eliminator Code.

To talk, press and hold **(PTT)**. Hold the radio 2 to 3 inches away from your mouth when talking.

When you finish talking, release **(PTT)** (press to talk, release to listen).

Talk Range

Your radio is designed to maximize performance and improve transmission range. Do not use the radios closer than 5 feet apart.

Checking the Channel Before Transmitting

Your radio has multiple channels shared on a "take turns" basis. For uninterrupted communication, do not talk on a channel if someone else is currently talking on it.

To check for activity on a channel before you talk, press and hold **"MON"**. If you hear static, the channel is clear to use.

Special Features

Interference Eliminator Code

Interference Eliminator Codes help minimize interference by providing you with a choice of code combinations.

To set the code for a channel:

1. Press **"MODE"** twice until the code starts to flash.
2. Press **-** or **+** to select the code.
3. Press **(PTT)** to save the code setting.



You can set a different code for each channel using this procedure.

Note: You must set the Interference Eliminator Code to **[]** on an FRS radio that uses Interference Eliminator Codes to communicate with other FRS radios that do not have Interference Eliminator Codes.

Push to Talk Timeout Timer

To prevent accidental transmissions and save battery life, the radio emits a continuous warning tone and stops transmitting if you press **(PTT)** for 60 continuous seconds.

Locking the Keypad

To avoid accidentally changing your radio settings, press and hold **"MODE"** for 3 seconds or until **[]** displays. You can still turn the radio on and off, adjust the volume, receive, transmit, send a call tone, and monitor channels. All other functions are locked. To unlock the radio, press and hold **"MODE"** for 3 seconds or until **[]** is no longer displayed.

Special Features 17

18 Special Features

Scanning Channels

Use scanning to monitor channels and codes for transmissions or to find someone in your group who has accidentally changed channels.

To start scanning, briefly press and release **"MON"**. The scan indicator displays **[]**.

When the radio detects channel activity, it stops scanning and you can hear the transmission. To respond to the transmission, press **(PTT)** within 5 seconds.

Note: If your radio's Interference Eliminator Code is set to **[]** while scanning, the radio checks for activity on each channel regardless of the code used on the channel.

If your radio's Interference Eliminator Code is set to **1-38**, the radio checks for activity only on channels using codes **1-38** and ignores channels using code **[]**.

Advanced Scan

If the radio stops scanning on a channel you do not want to listen to, briefly press and release **-** or **+** to resume scanning for the next active channel.

Removing Channels from the Scan List

To remove a channel so the radio does not stop on it while scanning, press and hold **-** for **+** at least 3 seconds, then release. This temporarily removes the channel from the scan list.

To restore the channel, turn the radio off and then back on.

Note: You cannot remove the channel your radio was set to when you started the scan (called your home channel).

Alerts

Channel Busy Indicator

When a channel is busy, the LED flashes twice per second.

Setting and Transmitting Call Tones

Your radio can transmit different call tones to other radios in your group so you can alert them that you want to talk.

To set a call tone:

1. With the radio on, press "**MODE**" 3 times. The current call tone setting flashes and [A] displays.
2. Press (-) or (+) to change and hear the call tone.
3. Press "**MODE**" or (M) to set the new call tone.

To transmit your call tone to other radios, set to the same channel and Interference Eliminator Code as your radio and press "**CALL**".

Notes

- ◆ The RT210 model has 10 call tones.
- ◆ Setting the call tone to [] disables the call tone feature.

Alerts 19

20 Alerts

Transmitting a Talk Confirmation Tone



 
You can set your radio to transmit an unique tone when you finish transmitting. It's like saying Roger or Over to let others know you are finished talking.

- ◆ To turn talk confirmation on, press and hold + while you turn the radio on. When you release (M) after transmitting, your call tone transmits and [A] displays.
- ◆ To turn talk confirmation off, turn your radio off and then back on while pressing and holding +.

Accessories


There is one audio accessory available for your radio.

Using Audio Accessories

1. Turn the radio off. Plug the accessory connector into the jack. See page 11 for the location of the accessory jack on your radio.
2. Turn the radio on. Lower the volume before placing the accessory on your head or in your ear.
3. Press **"MON"** while rotating  to adjust the volume to a comfortable level.
4. To transmit, press  and speak into the accessory microphone, if any.
5. To receive, release .

Handsfree (VOX)


Voice activation (VOX) allows you to talk handsfree when used with optional accessories connected to the radio.

1. Turn the radio off.
2. Insert the plug of the audio accessory firmly into the accessory jack.
3. Turn the radio on.  displays.
4. Lower the radio volume before placing the accessory on your head or in your ear.

Accessories 21



22 Accessories

5. To transmit, speak into accessory microphone. There is a short delay between the time you start talking and when the radio transmits.
6. To receive, stop talking.

To turn VOX off, press  or remove the audio accessory.

Handsfree Use Without Accessories (iVOX)

You can use the iVox feature to transmit handsfree without the need for any voice activation (VOX) accessories. Once iVOX is turned on, the radio detects your voice and transmits when you speak.

1. Turn the radio off.
2. Turn the radio on while pressing   displays.
3. To turn off iVox, turn the radio off.

Setting the Sensitivity Level

Adjusting the radio's sensitivity level helps minimize the possibility of unintended noises triggering a transmission and helps the radio pick up soft voices.

1. Press **"MODE"** until  displays.
2. Press **-** or **+** to select the sensitivity level.

 = **High Sensitivity** for quiet environments  = **Medium Sensitivity** for most environments  = **Low Sensitivity** for noisy environments

Note: When you connect a VOX accessory, the radio is automatically set to the last chosen sensitivity level.

Limited Warranty

Products Covered	Length of Coverage	Exclusions
A. Products and Accessories as defined above, unless otherwise provided for below.	A. One (1) year from the date of purchase by the first consumer purchaser of the product unless otherwise provided for below.	<p>Normal Wear and Tear. Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.</p> <p>Batteries. Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this limited warranty.</p>



Warranty 23



24 Warranty

Products Covered	Length of Coverage	Exclusions
<p>1. Decorative Accessories and Cases. Decorative covers, bezels, PhoneWrap™ covers and cases.</p> <p>2. Monaural Headsets. Ear buds and boom headsets that transmit mono sound through a wired connection.</p> <p>3. Consumer Two-Way Radio Accessories.</p> <p>4. Products and Accessories that are Repaired or Replaced.</p>	<p>1. Limited lifetime warranty for the lifetime of ownership by the first consumer purchaser of the product.</p> <p>2. Limited lifetime warranty for the lifetime of ownership by the first consumer purchaser of the product.</p> <p>3. Ninety (90) days from the date of purchase by the first consumer purchaser of the product.</p> <p>4. The balance of the original warranty or for ninety (90) days from the date returned to the consumer, whichever is longer.</p>	<p>Abuse & Misuse. Defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or (d) other acts which are not the fault of Motorola or (Giant International Ltd.), are excluded from coverage.</p>

Products Covered	Length of Coverage	Exclusions
		<p>Unauthorized Service or Modification. Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than Giant International Ltd. or its authorized service centers, are excluded from coverage.</p> <p>Altered Products. Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or branded housings, or parts, are excluded from coverage.</p> <p>Communication Services. Defects, damages, or the failure of Products, Accessories or Software due to any communication service or signal you may subscribe to or use with the Products Accessories or Software is excluded from coverage.</p>



Warranty 25



26 Warranty

What will Giant International Ltd. Do? Giant International Ltd., at its option, will at no charge repair, replace or refund the purchase price of any Products, Accessories or Software that does not conform to this warranty. We may use functionally equivalent reconditioned/refurbished/pre-owned or new Products, Accessories or parts. No data, software or applications added to your Product, Accessory or Software, including but not limited to personal contacts, games and ringer tones, will be reinstalled. To avoid losing such data, software and applications please create a back up prior to requesting service.

How to Obtain Warranty Service or Other Information?

To obtain service or information, please call:

USA	Canada
Two-Way Radios 1-800-638-5156	Two-Way radio 1-800-638-5156

For **Accessories and Software**, please call the telephone number designated above for the product with which they are used.

You will receive instructions on how to ship the Products, Accessories or Software, at your expense, to a Giant International Ltd. Authorized Repair Center. To obtain service, you must include: (a) a copy of your receipt, bill of sale or other comparable proof of purchase; (b) a written description of the problem; (c) the name of your service provider, if applicable; (d) the name and location of the installation facility (if applicable) and, most importantly; (e) your address and telephone number.

What Other Limitations Are There? ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND

FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR, REPLACEMENT, OR REFUND AS PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OF IMPLIED. IN NO EVENT SHALL MOTOROLA OR GIANT INTERNATIONAL LTD. BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT, ACCESSORY OR SOFTWARE, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATA, SOFTWARE OR APPLICATIONS OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS, ACCESSORIES OR SOFTWARE TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

Some states and jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or from one jurisdiction to another.

Warranty 27

28 Copyright Information

Manufactured, distributed or sold by GIANT INTERNATIONAL official licensee for this product.

All other product or service names are the property of their respective owners. Please contact customer service at 800-638-5156 for questions/comments, warranty, support or service related to this product.

Realtree® and Advantage® are registered trademarks of and used under license by Jordan Outdoor Enterprises, Ltd.

© Jordan Outdoor Enterprises, Ltd.

◆ **22 Channels (8 GMRS, 7 GMRS/FRS, 7 FRS) with 38 Interference Eliminator Codes**

GMRS channels feature increased power for longer range. 14 channels ensure backward compatibility with FRS two-way radios. Eliminator Codes minimize interference from other groups.

◆ **Scanning**

Easily finds channel and code by searching all combinations.

◆ **Call Tones**

10 call tones.

◆ **Talk Handsfree**

With Voice Activation (VOX/iVOX) when used with accessory.

◆ **Talk Confirmation Tones**

Signals others you are finished talking.

◆ **NiMH Batteries and Charger Included**

◆ **Low Battery Alert**

Audible tone and visual display tell you when the battery is running down.

◆ **Illuminated Display**

Easy to read your settings in dark places.

◆ **Belt Clip Included**

◆ **1 Year Limited Warranty**

For warranty details, please ask your retailer.

◆ **User's Guide Included**

**FRS/GMRS use approved in the US only;
GMRS License Required.**



**WARNING CHOKING HAZARD
SMALL PARTS**

Not for children under 3 years.
This product is not intended to be used
as a toy or plaything.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.