

APX-071 User Manual



Safety Guidelines

- Follow the instructions to ensure correct and safe installation and interconnection of the apparatus.
- Incorrect connection may cause injury.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

This device must not be co-located or operating in conjunction with any other antenna or transmitter.

IMPORTANT:

- 1) Use only with the adaptor supplied by Hon Kwang. type no. HK-AX-120A200-US
- 2) Plug the adapter to the socket outlet that near the equipment and shall be easily accessible.

WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE



THE LIGHTNING FLASH AND ARROW HEAD WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF "DANGEROUS VOLTAGE" INSIDE THE PRODUCT.

CAUTION:

**RISK OF ELECTRIC SHOCK
DO NOT OPEN**

CAUTION: TO REDUCE THE RISK OF ELECTRICAL SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



THE EXCLAMATION WITHIN THE TRIANGLE IS WARNING SIGN ALERTING YOU OF IMPORTANT INSTRUCTIONS ACCOMPANYING THE PRODUCT.


SEE MARKING ON BOTTOM / BACK OF PRODUCT

Correct Disposal of this product



This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Waterproof

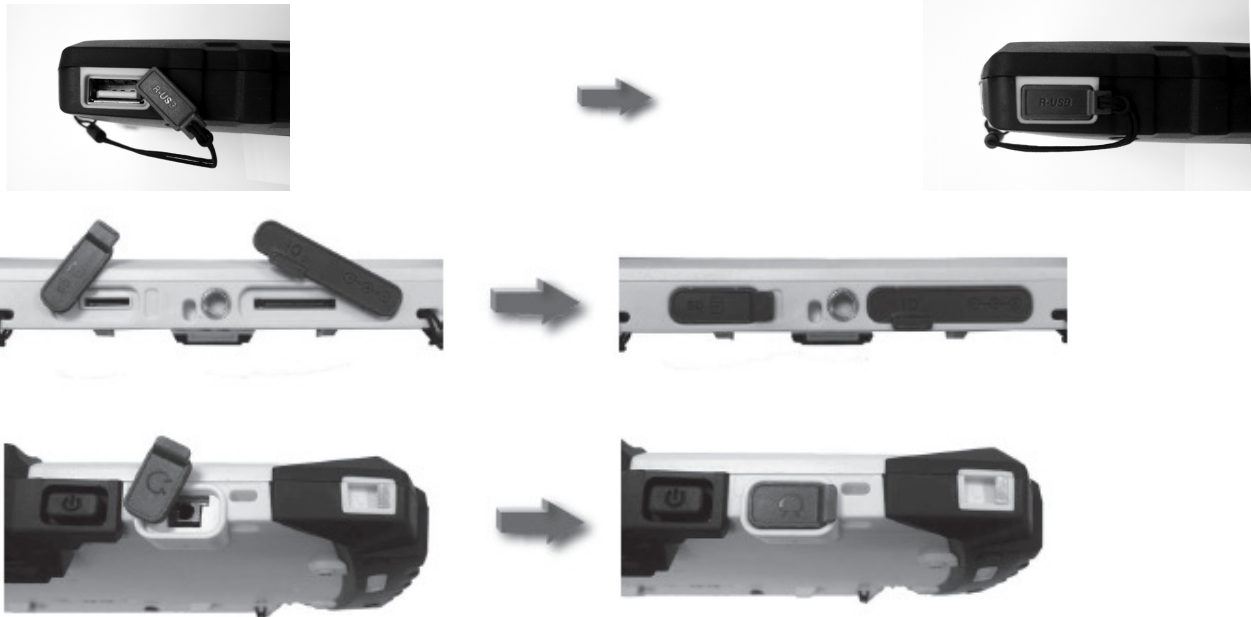

The APX071 is designed for waterproof. For protecting your tablet best, you must cover the all covers (Earphone, SD card, IO/DC) and insert the grips.

Remark:

1. Dry the device thoroughly with a clean and dry cloth in the case of the device getting wet.
2. In the cases of the covers are not covered well / the covers are opened without drying the device thoroughly, waterproof performance will be affected. Manufacturer will not be responsible for any corresponding liability.

Shock Buster - Accessories for APX071 series

User can install a pair of Shock Busters to enhance performance withstanding drop test from 1.2m (wooden surface).



The Shock Buster


Please follow the illustration to install the Shock Buster.



Technical Specifications

AC / DC Adapter	Input: 100~240VAC, Output: 12VDC 2A
Rechargeable Battery	7.4V 3100mAh Li-Polymer
Charge Time	12 hours for first time

DESCRIPTION OF THE DEVICE

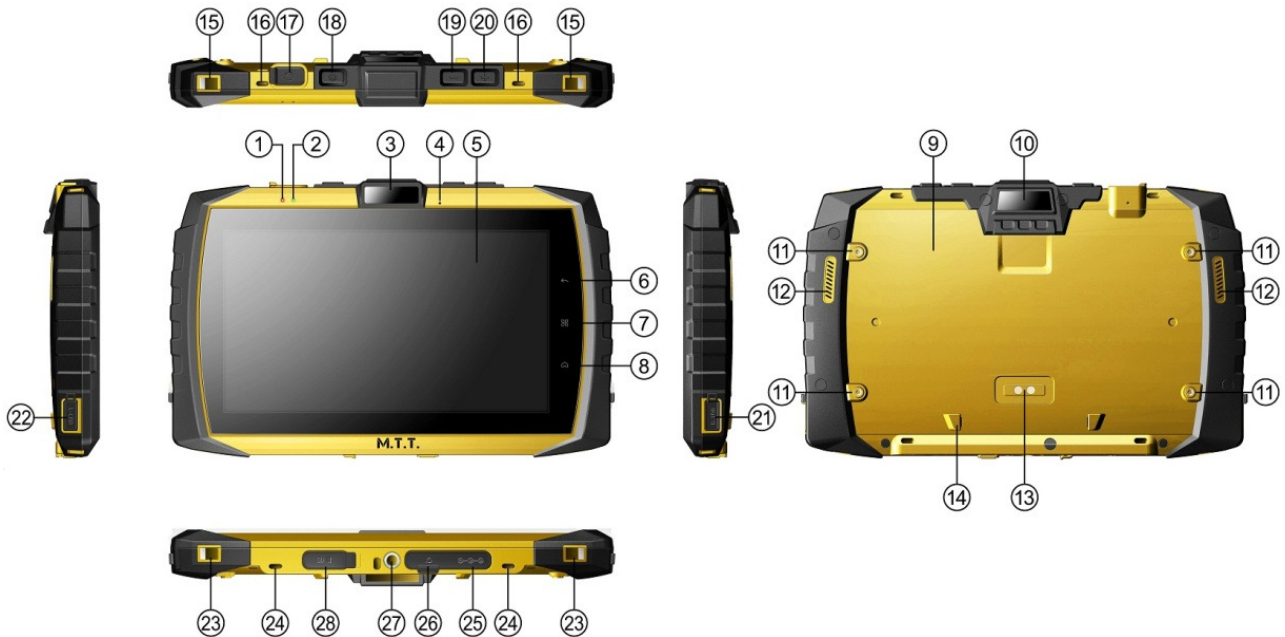

1. Charge LED 2. Indicator LED 3. Front Camera 4. Light Sensor
5. Touch Panel/Display 6. Return key 7. Menu key 8. Home key
9. NFC sensor (optional) 10. Rear Camera 11. Screws to attach Grip (for optional accessory)
12. Speaker 13. Contact for secondary battery (for optional accessory) 14. Lock for a secondary battery (optional accessory)
15. Grip lock (for optional accessory) 16. Hole for cord
17. Earphone jack 18. Power / Lock 19. Volume – 20. Volume +
21. USB port (left) 22. USB port (right)
23. Grip lock (for optional accessory)
24. Hole for cord 25. Power input 26. I/O connector
27. Nut for tripod 28. Micro SD card slot

STARTING UP

- ①. Connect the supplied power cable to the APX071 Power connector and to a wall outlet.
- ②. The APX071 will start charging. The Power indicator light is red while the battery is charging. It will turn off when the battery is fully charged.

Remark: Use only adapter listed in the user manual.



POWER ON

Press and hold the power for about 2 seconds to power on the unit.

INSTALL NEW APPS

You can download the apps from Opera Mobile Store. This online library of free and purchasable applications has thousands of useful applications (Media player, games, etc.) to download and use.

1. With the APX071 connected to the Internet, tap on the Opera Mobile Store icon.
2. Search for your interested apps to download.

Open the downloaded files (*.APK) and following the indication to install Apps.

TRANSFERRING MEDIA TO YOUR APX071



1. Connect the supplied USB cable to the running APX071 and to a running computer.
2. Drag the top bar on the screen of APX071 downwards to reveal the notification message.
3. Touch the “Turn on the USB storage”. Within a few seconds the APX071 will appear as an icon on your computer.
4. You can transfer your media files to the APX071 either by copy/pasting them into the respective folders using Windows® Explorer (or the Finder on a Mac®).
5. Once all your file transfers are finished, close Windows® Explorer and any other program that may have read or written to the APX071. Click on the ‘safely remove’ icon in the system tray, next to the clock. You can now unplug the USB cable.

USB Host

There are 2 Type-A USB socket for USB accessory.

NFC (optional)



This is an optional feature. It can be read the information of IC card (Resident card etc.). The antenna of NFC is at the left of rear camera. You must place the IC card in the area of antenna. When the tablet identifies the IC card, the application (Tags) will bring out and shows the information in the card.

Activate/Deactivate NFC function:

1. Press “Menu” button.
2. Select “Settings”.
3. Select “Wireless & networks”.
4. Activate/Deactivate NFC function.

Tripod (Not include)



There is a Nut for Tripod at the bottom of tablet for installing the tripod, after you install the tripod, you can place the tablet on a flat surface instead of holding it.

Power Reset

If your device is frozen, please press and hold the “volume+” and “volume-” buttons together for about 10 seconds, then the APX071 will be power off constrainedly. You need power on the device again.