

Intouch
IT7350&IT7340
Version –B
User Guide Version 0. 1

Safety Precautions

Make sure to follow the directions below to prevent personal injury, accidents and damage to the product.



Warning: To reduce the risk of bodily injury, electrical shock, fire, and damage to the equipment, observe the following precautions:

- Make sure to insert the power plug until it is firmly in place.
 - Do not use a damaged power plug, power cord, or plug into a damaged outlet.
 - Do not use force to pull the power cord.
 - Do not touch the power plug with wet hands.
 - Do not connect more than one appliance to a single outlet.
 - Do not place anything heavy on the power cord.
 - Make sure to turn the power off and disconnect the power plug from the outlet before moving the product.
 - Make sure to disconnect any connected cables from other devices as well.
-



Caution: Failure to follow the accompanying directions may lead to minor personal injury or property damage.

- Hold and pull out the plug by its body when disconnecting it from the outlet, as pulling the plug out by the cord may cause it to be damaged. Failing to do so, may cause fire, or the product may not turn on normally.
 - Ensure that the power plug is disconnected before cleaning the product. Failing to do so, may cause electric shock or fire.
 - Do not let water come into contact with or enter the power adapter, as this may cause electric shock or fire.
 - Do not use the product outdoors in snowy or rainy weather, or near any water.
 - When cleaning the floor with water, avoid any water contact with the power adapter.
 - Do not place the power adapter near a heater, as this may cause fire.
-

Installation



Warning: Failure to follow the accompanying directions may lead to serious injury or death.



Caution: Plug the adapter to the socket outlet that near the equipment and shall be easily accessible. Use only the **E-TEK (Output: 5.0V / 3.0A, Input: AC 100 -240V ~ 50 / 60 Hz 0.8A)** power supply that came with this unit. Using other power supplies may damage the unit.

- When installing the product on a cabinet or shelf, do not let the front end of the product project beyond its front edge. Failing to do so, may cause the product to fall, resulting in a product malfunction or personal injury.
- Do not place the power cord near a heater, as the power cord may melt, causing electric shock or fire.
- Do not install the product in a car or a location exposed to oil, smoke, moisture, water, or rainwater. Any contact of these materials with the product may cause electric shock or fire.
- Disconnect the power plug when there is thunder or lightning. Failing to do so, may cause electric shock or fire.
- For Pluggable Equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible

IMPORTANT SAFETY INSTRUCTIONS

- When using your wireless internet frame and equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:
- Do not use this product near water, for example, near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.
- The socket-outlet shall be installed near the equipment and shall be easily accessible
- Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.

SAVE THESE INSTRUCTIONS



Caution: Failure to follow the accompanying directions may lead to minor personal injury or property damage.

- Place the product down gently when installing it. Failing to do so may cause product damage or personal injury.
- Do not install the product in a location easily reached by children. As the product may fall and cause personal injury.



DECLARATION OF CONFORMITY

Correct Disposal of this product	
	<p>This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.</p>

Interference Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.



Warning:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC RF Radiation Exposure Statement

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

Shielded cables must be used with this unit to ensure compliance with the Class B FCC limits.

This class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Table of Contents

Getting Started	1	For a slide show as the wallpaper	14
Package Contents	1	Slide Show Control Buttons.....	15
Wireless Internet Frame Overview	2	Clock and Calendar	16
Front panel.....	2	Setting up the Calendar	16
Back panel.....	3	Set the Date.....	16
Left Panel.....	4	Set Date Format	16
Right Panel	4	Calendar Preview	17
Connecting the AC/DC Power Adapter and USB cable	5	Using the Calendar preview	17
General Button Description	6	Setting up the Clock	17
Turning your Frame on	7	Set the Time	18
Standing the Frame up	7	Select Time Format	18
Calibrate the Touch Screen	7	Select Internet Time Synchronization.....	18
Language Selection	7	Select Time Zone	18
End User License Agreement (EULA)	8	Setting up and using the Clock Alarm	19
The Home Screen	9	To set an Alarm	19
Home Screen Overview	9	To change an alarm.....	20
Home Settings Screen	10	Alarm Control.....	20
Additional Home Settings	11	Frame Tools	21
Power Icon	11	Main Menu	21
Wi-Fi icon	12	Tools Screen	21
News Bar	12	Keyboard	22
Wallpaper Settings	13	On-Screen Display Bar	23
For a still picture as wallpaper	13	Open and close the On-Screen Display (OSD) Bar	23
		OSD Bar Description	23

Adjust LCD Brightness using OSD Bar	24
Adjust Volume Level using OSD Bar.....	24
Lock / Unlock the screen using OSD Bar	24
Settings	25
Network.....	26
Setup Wi-Fi Network - Access Point's DHCP settings is On and the AP SSID is not hidden.....	26
Setup Wi-Fi Network - Access Point's DHCP settings is ON but the AP SSID is hidden and no encryption key is needed.....	28
Manual Edit Wi-Fi Network Screen	29
Advanced Settings.....	30
Date / Time.....	32
Display	32
Screen Calibration	32
Brightness.....	32
Auto Playback Demo Video.....	33
System Settings	34
Language.....	34
Firmware Upgrade.....	34
Factory Reset	36
Show Details.....	36
Motion Sensor (Model IT7350 only)	37
Screen Taps Sound.....	37
Power Management	38
Sleep Mode.....	38
Interval Time (Sleep Interval Time)	38
Battery Profile	39
Photo / Content Service	40

Photo Player Main Page controls.....	40
Photo.....	41
Frame	41
Slide Show Control Buttons.....	41
Zoom Control Buttons.....	42
Disk	43
Home Network.....	43
Adding Photos to the Library	43
Checking Shared Photos.....	46
Sharing Settings for Accepting Connections from Your Frame....	47
View for Sharing the Photos on your frame.....	48
Web	49
Photo Setup.....	49
Slide Show.....	49
Setup Web Photo Account	50
Content Service (Windows Live Framelt).....	52
Account.....	52
Setup Windows Live Framelt Account	52
Content Service (Framechannel)	54
Account.....	55
Setup Framechannel Account	55
Copy/ Delete Photos.....	56
Copy One	56
Copy All	57
Delete One	57
Delete All	57

RSS News Reader (RSS2.0)	58	Media Setup	71
RSS News Feed screen	58	Setup Media Playback.....	71
News Feed List screen	59	Add a Station	72
RSS News Reader	60	Edit an added Internet Radio Station	73
RSS News Reader Control Buttons / Icons	60	Delete an added Internet Radio Station	73
News Text Content	60	Copy / Delete Media Files	74
News Media Player.....	60	Copy One	74
RSS News Reader > News Text Content.....	61	Copy All	74
Refresh / Delete News	61	Delete One	75
Refresh RSS News Feed screen	61	Delete All	75
Delete One RSS News Headline.....	62	Specifications	76
Delete All RSS News Headlines.....	62	Troubleshooting	78
Delete All RSS News Read Headlines	62		
Delete One in RSS News Reader Screen.....	62		
News Setup	63		
Set General Settings	63		
Add / Edit RSS News Feeds (Support RSS2.0 Format only)	64		
Get RSS News Feed Address from Internet	64		
Add a new RSS News Feed	65		
Edit a RSS News Feed	66		
Delete a RSS News Feed.....	67		
Media Player	68		
Music / Video	69		
Internet Radio and Web TV	70		
Stations, Podcast or Web TV	70		
More.....	70		
Add to Favorites	71		

Getting Started

Package Contents

Please check to make sure that the following items are included in the box:

Item	Quantity
Wireless Internet Frame	1
AC/DC Power Adaptor	1
Quick Start Guide	1
Customer Support Contact Sheet	1
CD-ROM (includes User Guide and Warranty Information)	1

 
Wireless Internet Frame Overview

Front panel



Motion Sensor ON/OFF
indicator light (Only for
IT7350)

Back panel

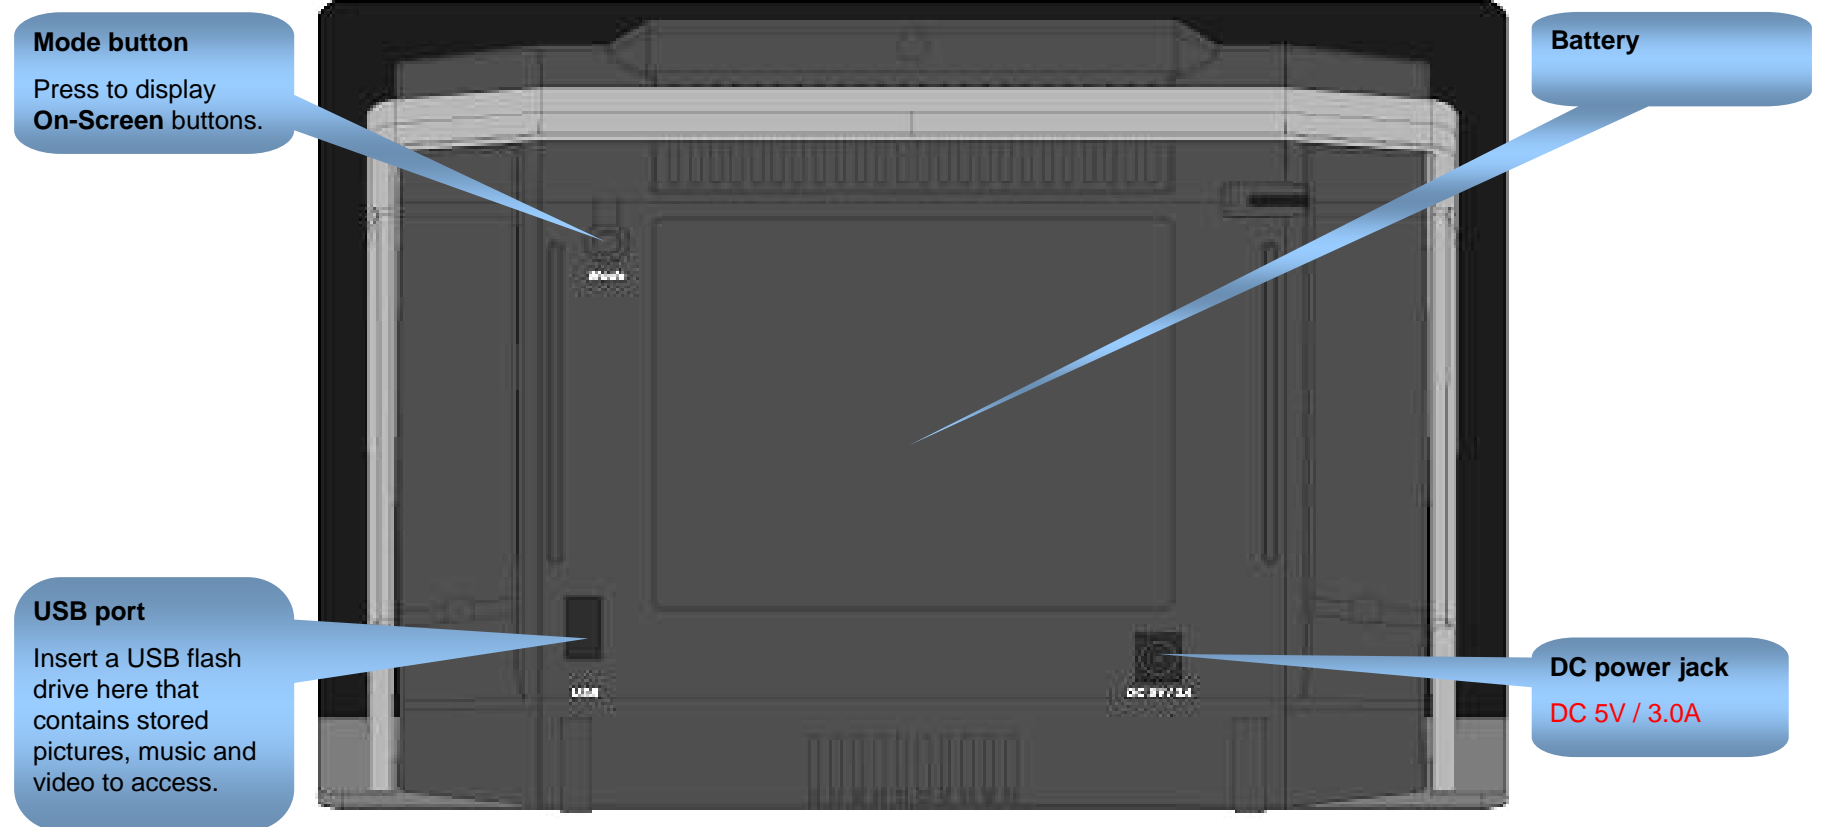

Left Panel



4-in-1 card slot

Insert a memory card here that contains stored pictures, music, or video that you would like to access.

CF (Compact Flash) card slot

Insert a compact flash here that contains stored pictures, music or video that you would like to access.

Right Panel

Reset button

Restart your frame

PC (mini-USB) port

 
Connect to PC with provided USB cable.

Audio output jack

 
Connect to external audio output (e.g. earphones, headphones, speakers)

Soft Power switch

Press and hold this key to turn power on and off.

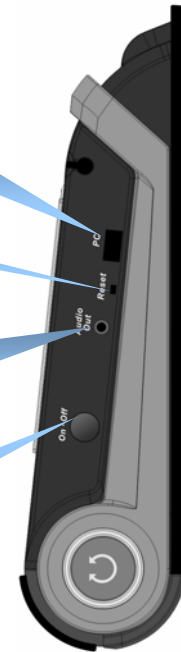



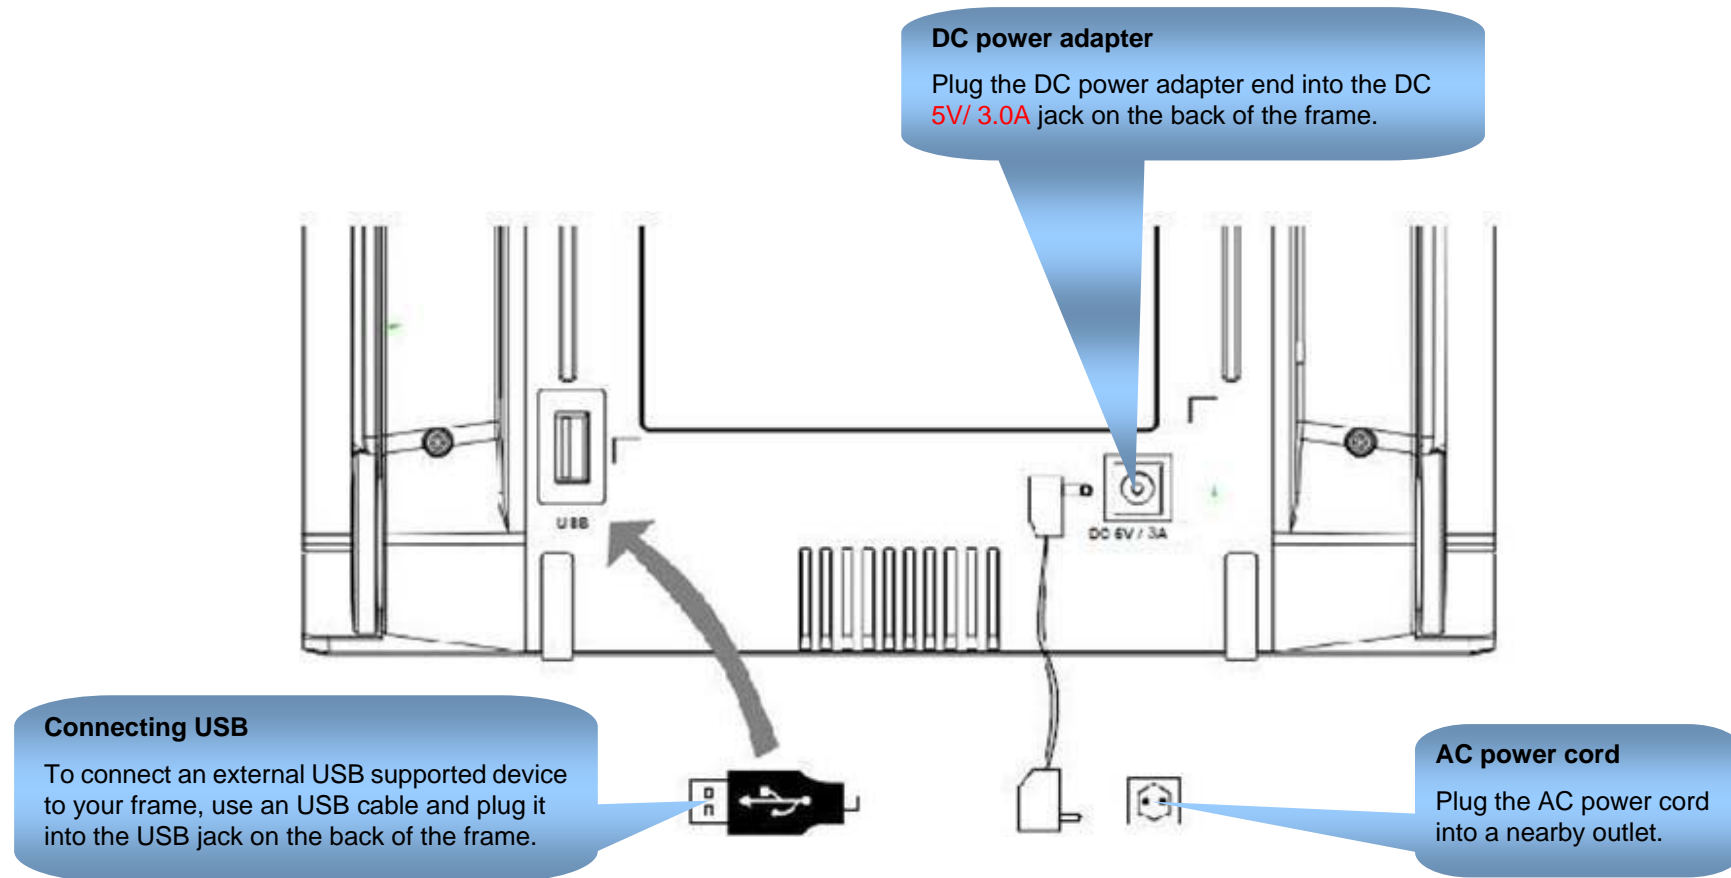



Connecting the AC/DC Power Adapter and USB cable



Notes:

- 1) When connecting an external device to the USB port, use the USB cable provided with the external device.
- 2) Some external devices provide a cable that does not meet USB standards, which may cause a malfunction.
- 3) If an external storage device does not work normally when connected to your digital photo frame, try to connect it to your PC. If it still does not work normally after re-connecting to your PC, then contact a service center for that external device or your PC.

General Button Description

Icon	Button Name	Function
	Submenu button	Enter into submenu
	Select option button	Select option
	Select file button	Select file
	Delete button	Delete some setups
	Keyboard button	Input characters
	More button	View more details

Turning your Frame on

If it's your first time turning on your frame, or you have reset the frame to factory presets, then you must calibrate the frame, select your language and accept the End User License Agreement (EULA).

Standing the Frame up

 
Rotate the frame handle to the desired viewing angle. To release the handle, press on both ends at the same time to release the locking mechanism.

Calibrate the Touch Screen

1. Slide the **OFF / ON** switch to **ON**.
2. There are five (5) points (+) needed to tap to calibrate the touch screen. The first point (+) is in the center of the screen and there is one (1) point (+) in each corner. Follow the on screen instructions to calibrate the frame.
3. After completing the calibration, the **Language** screen will appear.

Language Selection

1. On the **Language** screen, tap on the language you want.
2. Next, tap **OK** to accept the selected language.

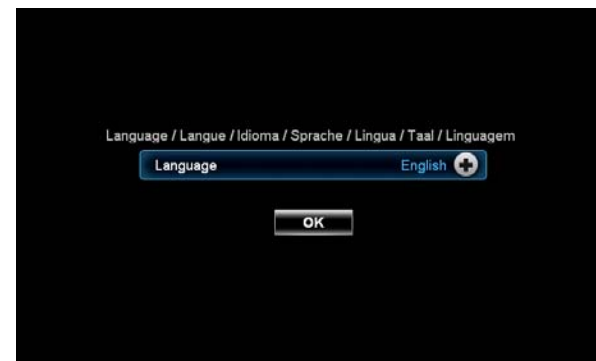

Language pop-up menu

End User License Agreement (EULA)

After selecting the language, you must review the EULA

To accept the EULA:

1. To accept the EULA, tap the check box next to **“I accept the terms in the license agreement”**.
2. Next, tap **OK**. The **Home Screen** will appear.



EULA

To not accept the EULA:

1. If you do not want to accept the terms of the EULA then tap the check box next to **“I do not accept the terms in the license agreement”**.
2. Next, tap **OK**.
3. A pop-up screen will appear telling you to **“Please switch off the device”**.

 
If you tap **OK** on the pop-up screen you will be sent back to the EULA screen.



EULA – no acceptance pop-up

The Home Screen

Home Screen Overview

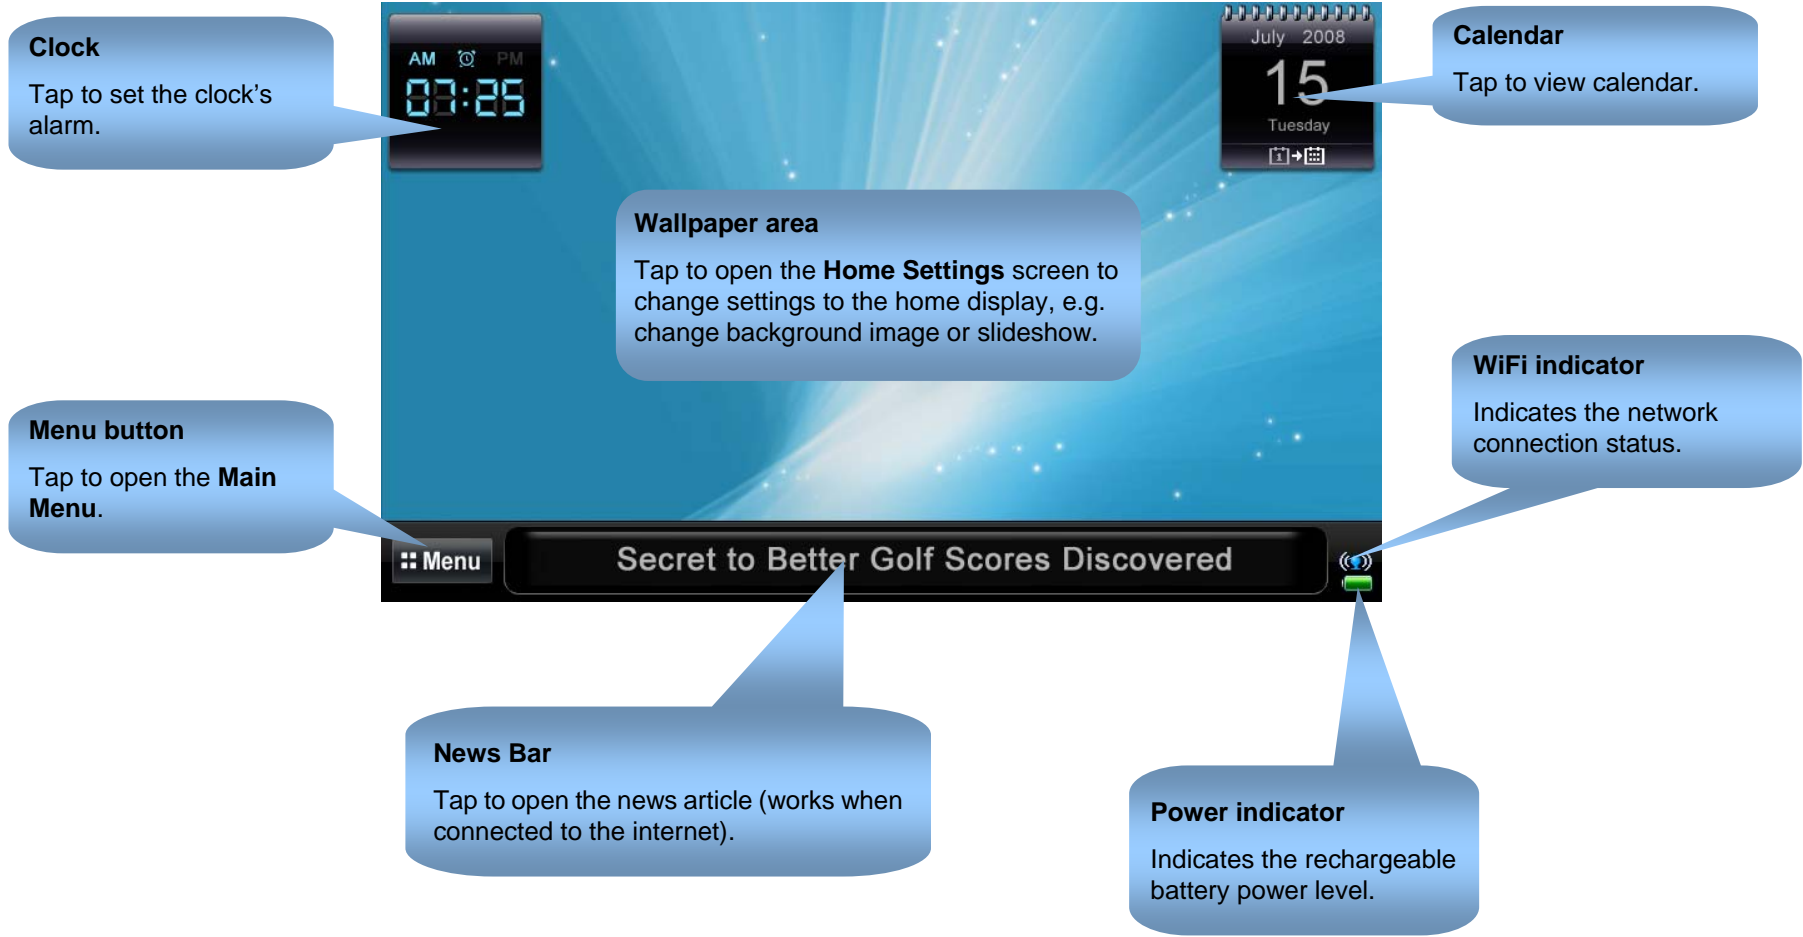


Home Settings Screen

Wallpaper

Choose a still picture or slide show as wallpaper on the **Home Screen**.

Calendar

 Turn the **Home Screen** calendar on or off.

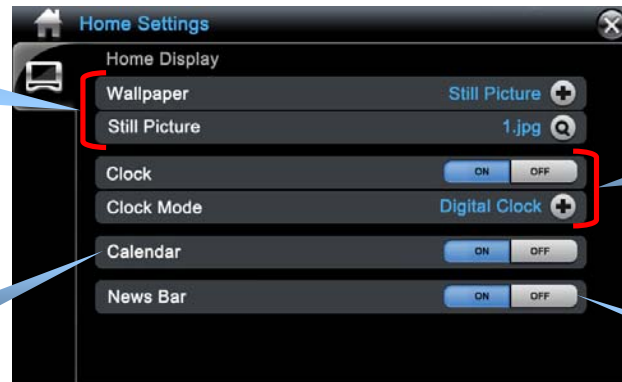

Home Settings screen

Clock

Choose between a digital or analog clock on the **Home Screen**, and turn it on or off.

News Bar

Turn it on or off on the **Home Screen**.

Notes:

- 1) The wallpaper will default to the factory preset if you factory reset the frame.
- 2) The selected still picture used for the wallpaper is copied to internal memory. If you delete this picture in the **Photo** application, it will not be deleted from the internal memory.
- 3) To add background music or change other settings for the slide show in the **Home Screen**, please go to the Photo Setup section.
- 4) User can play a slide show from internal memory or card only, Web or Home Network selection **IS NOT** enabled for the **Home Screen**.

Additional Home Settings

In addition to the wallpaper settings, you can also make additional **Home Screen** settings:

Clock – Allows you to turn the **Home Screen** clock on or off.

 
Clock Mode – Lets you select the display clock mode (digital or analog) in the **Home Screen**.

Clock Mode is disabled when slide show is selected or the clock is turned off.

Calendar – Allows you to turn the **Home Screen** calendar on or off.


News Bar – Allows you to turn the **News Bar** display on or off in the **Home Screen**.


News Bar is disabled when slide show is selected.

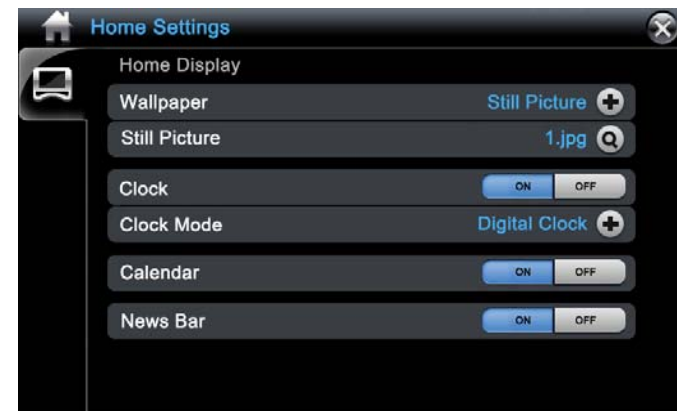

Home Display screen

Power Icon

 1. When the battery is empty, a pop-up screen will appear and the alarm will sound.
2. When the battery is empty, connect the power adapter. The battery icon will flash from empty to full repeatedly.
3. When the battery is full the battery  icon will be displayed. When the battery is not full it displays the current battery status.





Battery status pop-up

Wi-Fi icon

The **WiFi** icon on the **Home Screen** displays the status of your network connection.

If the Wi-Fi icon is tapped, the screen will jump to the Wi-Fi setting screen.

Icons	Icon Name	Description
	Wi-Fi icon	Connection to wireless access point is present.
	No Wi-Fi icon	Connection to wireless access point is not present.

News Bar

The **News Bar** lets you read news articles by tapping on the article. The **News Bar** works only when the frame is connected to the internet. Please refer to the [RSS News Reader](#) section for more detailed instructions on how to set up the news feed.

The news feed on the **Home Screen** is pulled from the **News Feeds** listed in the **RSS News Feeds screen** (see [News Feed Reader application](#)). The **News Bar** will begin with the first news feed listed and displays the news articles in that feed, and then proceeds to the next news feed and displays all of its articles, then goes to the next news feed, and so forth. This sequence is continuously repeated. The selection of news feeds and their sequence can not be changed.

Wallpaper Settings

For a still picture as wallpaper




1. On the **Home Screen**, tap the wallpaper area. The **Home Settings** screen will appear.
2. Tap the  button on the **Wallpaper** line.
3. Tap **Still Picture** on the pop-up. **Still Picture** will appear on the **Wallpaper** line.
4. Tap the  button on the **Still Picture** line. The **Photo Browser** screen will appear.
5. Tap **Frame** or **Disk** to select the picture location.
6. Double tap the picture you want. The picture you selected should appear in the **Still Picture** line in the **Home Settings** screen.
7. Tap the  button on the **Home Setting** screen.
8. On the **Save Settings** pop-up:
 - ◆ Tap **Yes** to save the setting. The **Home Screen** will appear with your selected picture as the wallpaper.
 - ◆ Tap **No** to cancel the setting. The **Home Screen** will appear with current picture or slide show as the wallpaper.






Photo Browser screen



Save pop-up box

For a slide show as the wallpaper

1. On the **Home Screen**, tap the **wallpaper area**. The **Home Settings** screen will appear.
2. Tap the  button on the **Wallpaper** line.
3. Tap **Slide Show** on the pop-up. **Slide Show** will appear on the **Wallpaper** line.
4. Tap the  button on the **Play Slide Show from** line. The **Photo Browser** screen will appear.
5. Tap **Frame** or **Disk** to select location of pictures.
6. Double tap on one of the pictures in the photo display area. The picture you selected should appear in the **Play Slide Show from** line in the **Home Settings** screen.
7. Tap the  button on the **Home Setting** screen. The picture and the photo set that you selected will appear in the **Home Screen**.
8. On the **Save Settings** pop-up:
 - ◆ Tap **Yes** to save the setting. The **Home Screen** will appear and the slide show will play from the picture selected.
 - ◆ Tap **No** to cancel the setting. The **Home Screen** will appear with current picture or slide show as the wallpaper.

When **Slide Show** is selected as the wallpaper, the **Home Screen** will only display the **Clock** and **Calendar**.




Photo Browser screen



Save pop-up box

 Slide Show Control Buttons

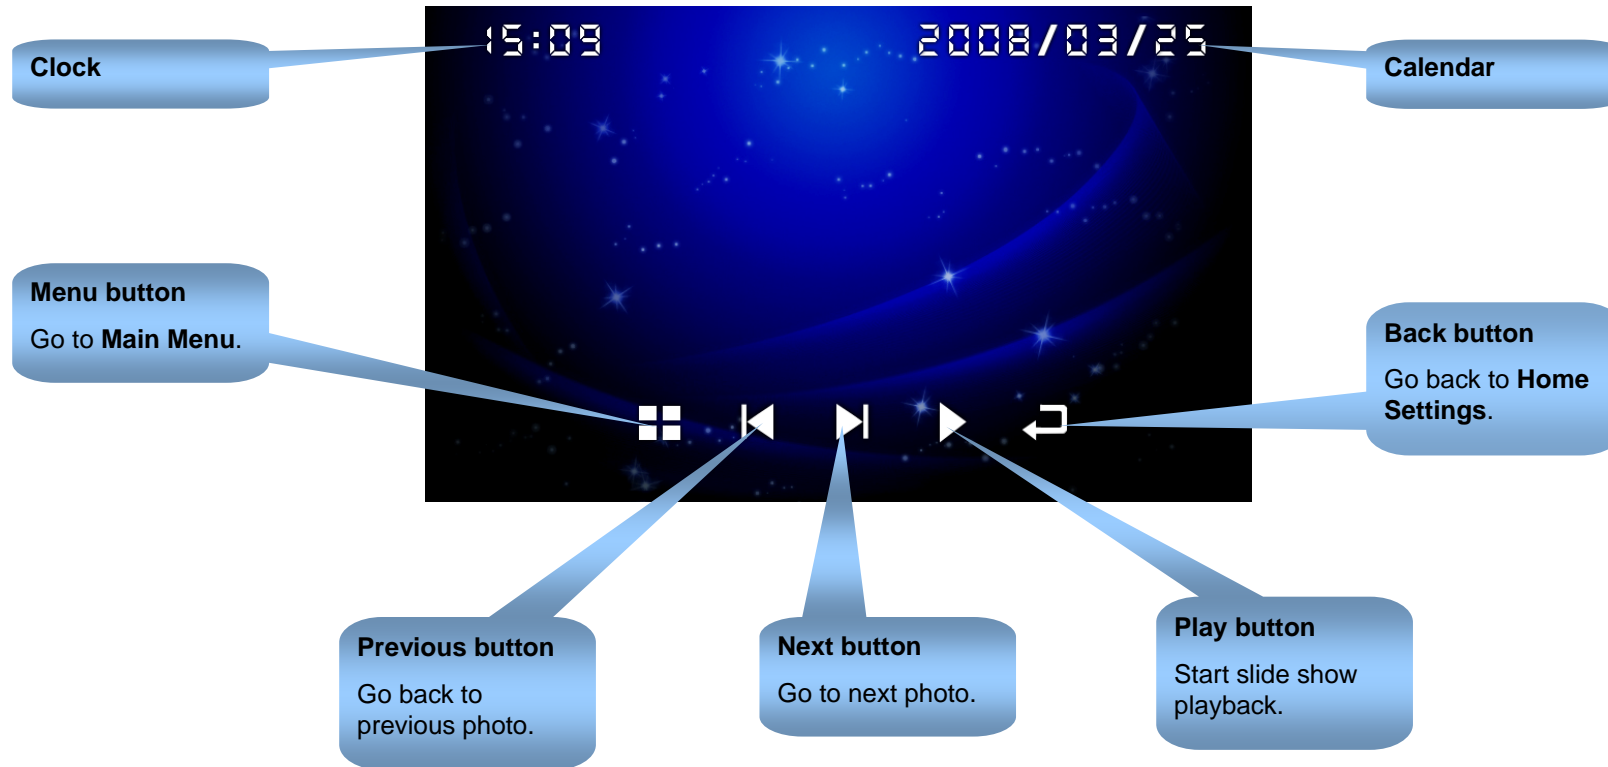

When using the slide show feature, tap the Home Screen wallpaper area to open the Slide Show Control Bar.




Note: When playing slide show in Home setting, user can control to move to next picture by shaking his hand in front of the sensor. Tap the screen, the control button will appear. Motion sensor is effective either when slide show is being played or being paused (**Only for IT7350**).

Clock and Calendar



Setting up the Calendar

1. On the **Home Screen**, tap the  **Menu** button.
2. Next, on the **Main Menu** screen, tap the **Settings** icon.
3. Then on the **Settings** screen, tap the  button.
4. The **Settings > Date / Time** screen will appear.

Set the Date

1. On the **Date** line, tap the  button.
2. The **Date / Time > Date** screen appears.
3. Tap the **up** and **down arrows** to set the day, month, and year.
4. Tap **Yes** to save the settings or **No** to cancel the settings. You will be returned back to the **Settings > Date / Time** screen.

Set Date Format

1. On the **Date Format** line, tap the  button.
2. A pop-up will appear displaying the available date formats.
 - ◆ MM / DD / YYYY
 - ◆ DD / MM / YYYY
 - ◆ YYYY / MM / DD
3. Tap the desired format. To exit the pop-up without selecting a format tap the  button.
4. You will be returned to the **Settings > Date / Time** screen.
5. The selected format will now be displayed on the **Date Format** line.



Main Menu screen



Settings > Date / Time screen



Date / Time > Date screen

Calendar Preview

On the **Home Screen**, you can tap the area outlined in red to switch between the **Date Display** and the **Month Display**.

Using the Calendar preview

1. On the **Home Screen**, tap the **Calendar** to view in full screen.
2. The calendar will be displayed in the day or month mode depending on how it is set in the **Home Screen**.
3. Use the buttons listed below to change the calendar view.



Month button - change to month display



Day button - change to day display



Today button - jump to today display



Next button - Go to next day, next month or next year



Previous button - Go to previous day, previous month or previous year



Calendar: Month Display



Calendar: Day Display


Setting up the Clock

1. On the **Home Screen**, tap the **Menu** button.
2. On the **Main Menu** screen, tap the **Settings** icon.
3. On the **Settings** screen, tap the **clock** button.
4. The **Settings > Date / Time** screen will appear.





Main Menu screen

Set the Time

1. On the **Time** line, tap  to open the **Date / Time > Time** screen.
2. Tap the **up** and **down arrows** to set the **hour**, **minute**, and **AM / PM**.
3. Tap **Yes** to save the settings or **No** to cancel the settings. You will be returned back to the **Settings > Date / Time** screen.

Select Time Format


1. On the **Time Format** line, tap the  button.
2. A pop-up will appear displaying the available time formats: **12 hours** or **24 hours**.
3. Tap on the desired format. To exit the pop-up without selecting a format, tap the  button.
4. You will be returned to the **Settings > Date / Time** screen.
6. The selected format will now be displayed on the **Time Format** line.

Select Internet Time Synchronization

- If you select **ON**, the system time of your device would be synchronized with network GMT time. The network GMT time is from the internet.
- If you select **OFF**, this function will be disabled and the **Clock** will use local settings.

Select Time Zone

You only need to set the **Time Zone** when **Internet Time Synchronization** is set to **ON**. Your Time Zone setting is used for adjusting the GMT time over the internet.

1. On the **Time Zone** line, tap the  button.
2. The **Date / Time > Time Zone** screen appears.
3. Tap on the up and down arrows to select the available selections:
 - ◆ GMT+00 to GMT+13 or GMT-01 to GMT-12



Settings > Date / Time screen



Date / Time > Time screen


 


Date / Time > Time Zone screen





Setting up and using the Clock Alarm


To set an Alarm

You can set up to a maximum of four alarms.

1. Open the **Clock**
 - ◆ On the **Home Screen**, tap the **Clock** to view in full screen.
 - ◆ On the **Home Screen**, tap Menu. **Main Menu** screen appears. Tap **Tools** icon. **Tools** screen appears. Tap **Clock** icon.
2. Tap the **Clock** screen to bring up the **Alarm** and **Back** button icons.
 - ◆ **Alarm**  icon - enter **Alarm Settings**.
 - ◆ **Back**  icon - go back to previous page.

Note: The **Alarm On/Off**  icon is on when alarm is active.

3. On the **Clock** face, tap the  icon to open the **Alarm Settings** screen.
4. Tap the **ON/OFF** button to select turn ON/OFF the alarm.
5. Tap the  button to open the **Alarm Settings > Edit** screen.
6. On the **Title** line tap the  button to open the **Keyboard**. Type in the title of the alarm. Tap **OK** when you are finished.
7. To set the alarm time, tap the  button on the **Alarm Time** line. The **Alarm Settings > Edit > Alarm Time** screen appears.
8. Adjust the time by tapping the **up** or **down arrow button**.

 
If user selects 24 hours time format in Settings > Date/Time > Time Format, AM / PM will not be displayed.
9. Tap the **Yes** button to save settings or **No** to cancel settings. When finished you will be returned to the **Alarm Settings > Edit** screen.
10. To have the alarm repeat, tap the  button on the **Repeat Alarm** line.
11. A pop-up will appear. Select how you want the alarm to be repeated. Available settings are **Once / Every Day / Weekdays**.






Clock



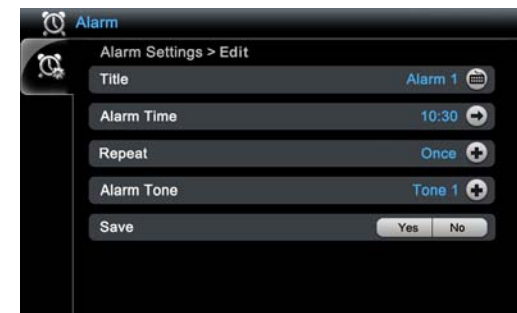


Alarm Settings screen



Alarm Settings > Edit screen

12. To set the alarm tone, tap the  button on the **Alarm Tone** line.
13. A pop-up will appear. Select which tone you want from a list of 5 alarm tones.
14. Back on the **Alarm Settings >Edit** screen, tap **Yes** to save your alarm settings or **No** to cancel settings. You will then be returned to the **Alarm Settings** screen.
15. To exit the **Alarm Settings** screen, tap the  button.
16. To exit the **Clock**, tap the clock's face and then tap the  button.

To change an alarm

1. Tap the **ON/OFF** button to select turn ON/OFF the alarm.
2. To change an alarm's settings, tap the  button on the alarm line you want to change. Repeat the above step to change the alarm settings.
3. To exit the **Alarm Settings** screen, tap the  button.
4. To exit the **Clock**, tap the clock's face and then tap the  button.

Alarm Control

1. When the alarm time is reached, the selected alarm tone will be heard. At the same time, the **Alarm Control** buttons are shown.
 - ◆ **Snooze** button – Tap this button to snooze the alarm. The alarm tone will stop and then turn on again after 5 minutes.
 - ◆ **Stop** button – tap this button to turn the alarm off.
2. If you don't tap any control button, it will beep the alarm tone for 5 minutes and then stop. After 5 minutes, it will beep again. The alarm will repeat this sequence for 40 minutes. Afterwards, it will turn off automatically.



Alarm Settings > Edit > Alarm Time screen



Alarm Settings



Clock with Alarm Controls

Frame Tools

Main Menu

1. On the **Home Screen**, tap the **Menu** button.
2. The **Main Menu** screen appears. From here, you can enter the different applications the frame has to offer.
 - ◆ **Photo** – tap to open the **Photo** application.
 - ◆ **News** – tap to open the **RSS News Reader** application.
 - ◆ **Media** – tap to open the **Media Player** application.
 - ◆ **Tools** – tap to go to the **Tools** application.
 - ◆ **Settings** – tap to open the **System Settings** screen.



Main Menu screen

Tools Screen

In **Main Menu**, tap the **Tools** button to open the **Tools** screen. It includes two applications:

- **Clock** – The clock application lets you add, change, delete and control an alarm. You can set up a maximum of 4 alarms. For more details on using the alarm function see [Setting up and using the Clock Alarm](#) section.

You cannot use this application to set up the **Home Screen** clock's time, format, or time zone.

- **Calendar** – The **Calendar** application allows you to use the calendar to preview future, or past dates. For more details on using the **Calendar** preview function, see [Setting up the Calendar](#) section.

You can not use this application to set the **Home Screen** calendar's date.




Tools screen

Keyboard

The **Keyboard** is used throughout the frame as a means to enter information such as titles, names, etc.

It is based on the **QWERTY** layout used on standard keyboards. As you type in your information, it will be displayed in the top half of the keyboard.

 button – tap to accept your input.

 button – tap to exit the Keyboard without saving your input.

Additional keys:

 **Special / Additional Characters** key

 
 **Accent / Special Characters** for Latin alphabets




Keyboard



Keyboard – Special / Additional Characters

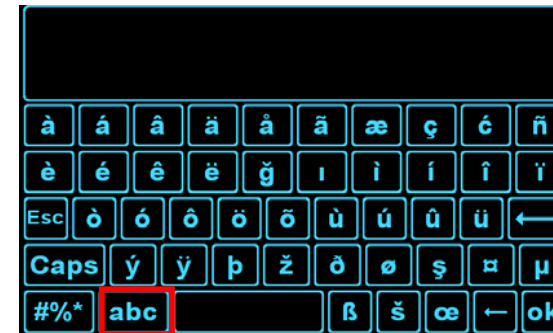

 Keyboard - Accent / Special Characters (lower case)

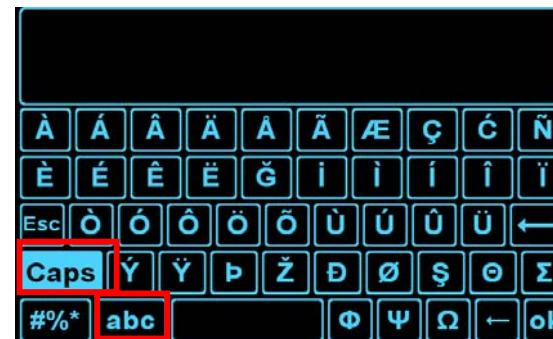

Keyboard - Accent / Special Characters (upper case)

On-Screen Display Bar

 
Use the **On-Screen Display bar** to easily navigate between applications without closing a running application and to have easy access to key settings like **brightness, volume control** and **screen lock**.

Open and close the On-Screen Display (OSD) Bar





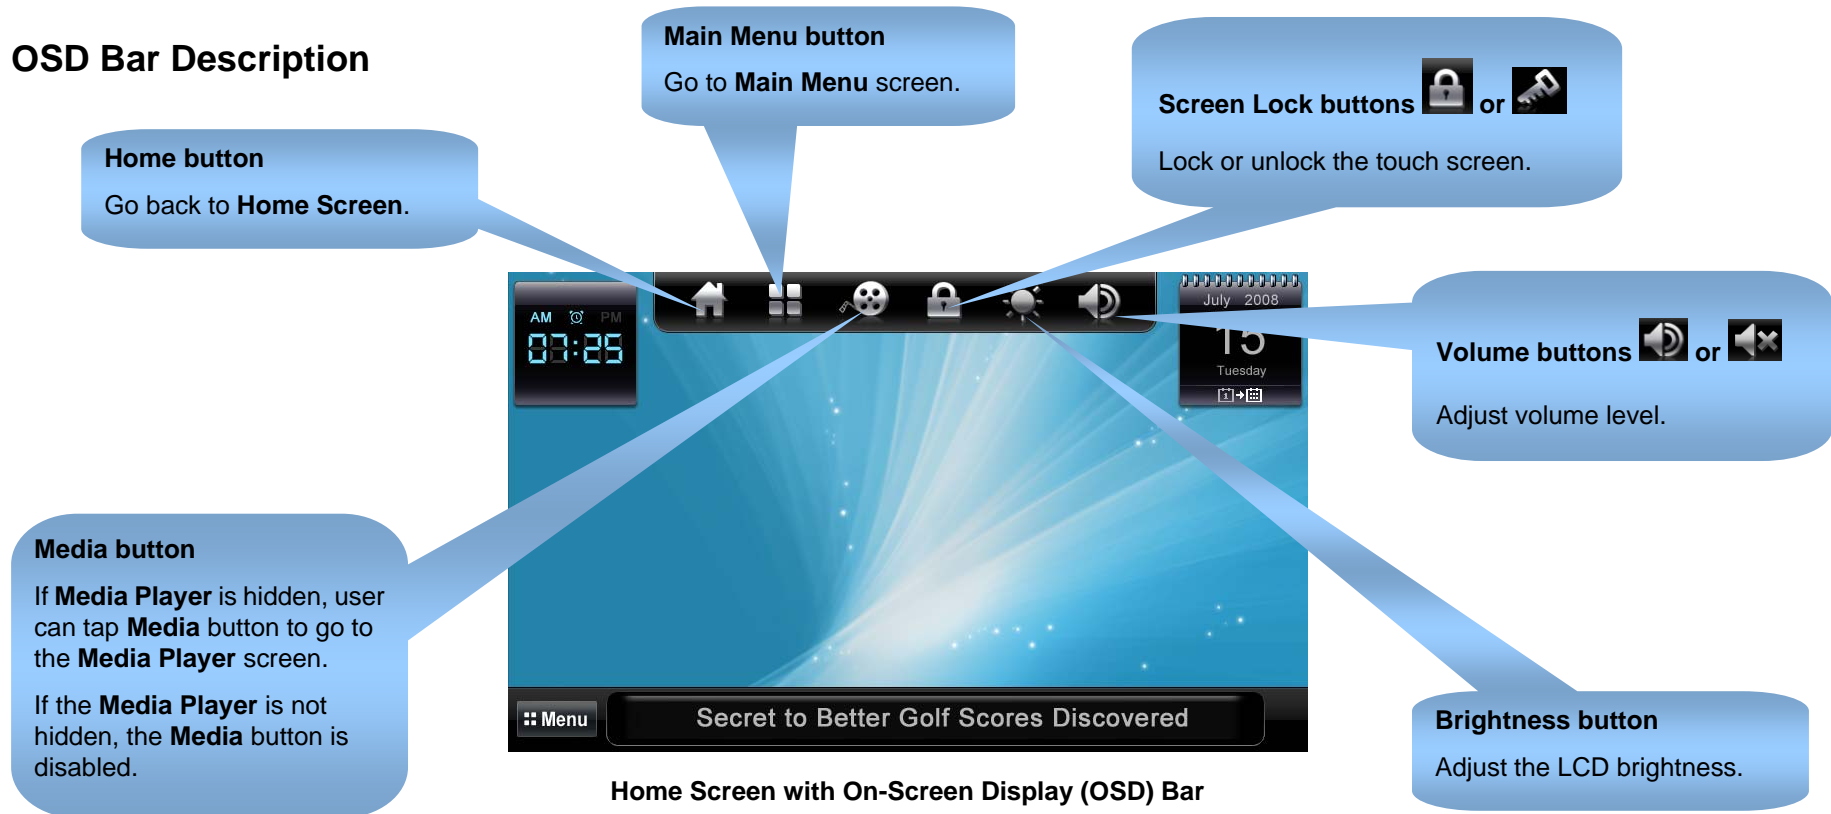

1. Open the **OSD Bar** by pressing the **MODE** button on the back of the frame. The **OSD Bar** will appear on the **Home Screen**.
2. Press **Mode** button again or tap the **Home Screen** wallpaper area to close the **OSD Bar**.

Note: The OSB Bar can only be accessed in some applications.










OSD Bar Description



Adjust LCD Brightness using OSD Bar

1. Tap the  icon once to open the **LCD Brightness OSD** buttons.
2. Tap the  icon or  icon to adjust the LCD brightness.
 - ◆  **Night** icon: Adjust to this level for a darker environment.
 - ◆  **Sun** icon: Adjust to this level for a brighter environment.
3. Tap the  icon to close the **LCD Brightness OSD**.

Adjust Volume Level using OSD Bar

1. Tap the  icon or  icon once to open the **Volume OSD** buttons.
2. Tap the  icon or  icon to adjust the volume level.
3. Tap the  icon to mute the speaker. The  icon will be shown. Tap the  again to turn off mute.
4. Tap the  icon or  icon once again to close **Volume OSD** buttons.

Lock / Unlock the screen using OSD Bar

Lock or unlock the screen by tapping the respective icon on the **OSD Bar**:

 **Lock** icon - locks the touch screen

 **Key** icon – unlocks the touch screen



OSD Bar – Brightness selected



OSD Bar – Volume Level selected



OSD Bar – Lock

Settings

1. On the **Home Screen**, tap the **Menu** button.
2. The **Main Menu** screen appears. Tap on the **Settings** icon.
3. The **Settings** screen appears.



Network button – configure your wireless network



Date / Time button – configure the **Home Screen** clock and calendar



Display button – make screen settings



System button – make system settings



Power Management button – make power management settings



Main Menu screen






Settings screen (default view)

Network


Notes:

 
- 1) The frame does not support Hotspot login or web browser internet login.
- 2) Please make sure the Wi-Fi network is connected successfully before you use any network related applications, e.g. Web Photo, Internet Radio, or RSS News Reader.

Setup Wi-Fi Network - Access Point's DHCP settings is On and the AP SSID is not hidden

1. On the **Setting** screen, tap the  button. The **Network** screen appears.
2. On the **WiFi** line, tap the **On** button to turn on **WiFi**.
3. Next, on the **Search WiFi Network** line, tap  to begin searching for all available **Access Points (AP)**.
 - ◆ All the available access points and their signal strength are listed in **Network > Search** screen.
 - ◆ If the access point has a network key, the  icon will be displayed.
4. On the **SSID Name** line for the network you want to connect, tap **Connect**.
 - ◆ If the access point has a network key, a screen will be prompt to remind user to input the network key.

If you are using a Wi-Fi network other than your own, then you must consult the Network Administrator for that network to get access (i.e. network key).

Note: If the **AP Network Key Mode** is WEP, a pop-up menu will appear after tapping the **Connect** button. User must select the shared key or open key and key 1.2.3.4. Tap  to confirm.

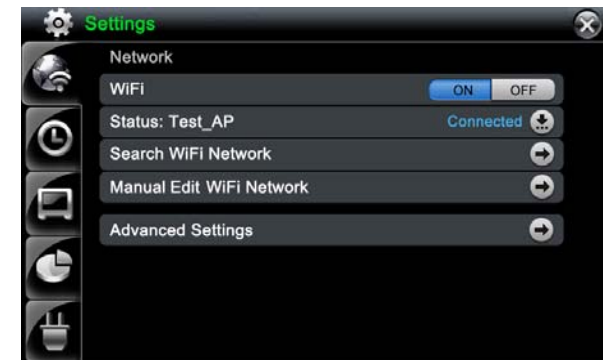

Network screen



Network Search screen



5. Tap  button to bring up the **Keyboard** and type in the network key.

Step 5 will be skipped if connecting to an unsecured network.

6. Tap  to confirm.

7. A “**Connecting...**” dialog box appears.

8. After successfully connecting to the access point, you should see a green checkmark icon next to **AP SSID name**.

9. Tap the  button to refresh the **Wi-Fi AP list** or tap the  button to return to **Network** screen.

10. Tap **Clear** button to disconnect current AP connection and clear all of the settings in current AP, including the network key.

11. If connection fails, a pop up message, “**Network Connection Failed**”, will appear. Tap **OK** and try connecting to the access point again.

Note: If the WiFi network can not work, please tap the **Reset** button. A pop up message “**Do you want to reset WiFi settings?**” will appear. Tap  button to reset the WiFi settings and user must restart the frame. WiFi Reset will clear the network key contents. Tap  button to cancel the reset the WiFi settings.



WEP Security Setting box



Network Key Input box



Wi-Fi Network Search Screen



Wi-Fi settings Reset









 
Network Connection Failed

Setup Wi-Fi Network - Access Point's DHCP settings is ON but the AP SSID is hidden and no encryption key is needed

Note: 1) Follow these steps **ONLY** if your AP SSID name is hidden. If you are using a Wi-Fi network other than your own, then you must consult the Network Administrator for that network to get access (i.e. network key).

2) Since your AP SSID is hidden, you can't see your AP in Wi-Fi Network Search Screen. After you input your AP details in Manual Edit Wi-Fi Network Screen, your AP can be shown in Wi-Fi Network Search Screen.


1. On the **Setting** screen, tap the  button. The **Network** screen appears.
2. On the **WiFi** line, tap the **On** button to turn on **WiFi**.
3. On the **Manual Edit Wi-Fi Network** line, tap  button. The **Network > Edit** screen appears.
4. Tap  to open the **Keyboard** screen. Type in your Wi-Fi AP SSID name and then tap **OK** to save.
5. On the **Network Key Mode** line tap the  button. A pop-up list will appear. Tap on the network key mode you want. Available modes are:
 - ◆ No
 - ◆ WEP
 - ◆ WPA
 - ◆ WPA2
6. On the **Authentication Type** line tap the  button. A pop-up list will appear. Tap the **authentication type** you want. If Network Key Mode is WPA or WPA2, the **Authentication Type** and **Transmit Key** can not be selected.
7. On the **Network Key** line tap  to open the **Keyboard** screen. Type in your network key and then tap **OK** to save.
8. On the **Save** line tap Yes to save or tap No to cancel. You will be returned to the **Network** screen.

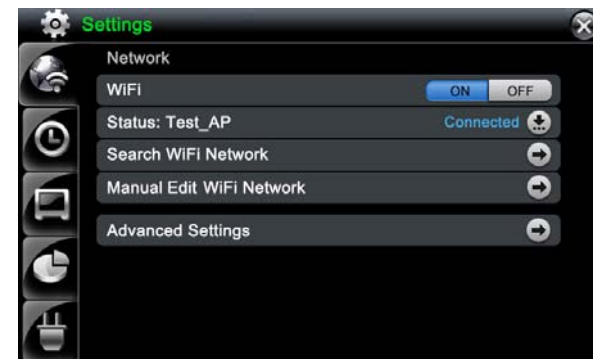








Network screen



 
Network Edit screen

9. On the **Search WiFi Network** line tap  to open the **Network Search** screen. You should see the newly entered Wi-Fi network name.
10. Tap **Connect** button to connect the newly added Wi-Fi network.

Manual Edit Wi-Fi Network Screen

1. On the **Setting** screen, tap the  button. The **Network** screen appears.
2. On the **WiFi** line, tap the **On** button to turn on **WiFi**.
3. On the **Manual Edit Wi-Fi Network** line, tap  button. The **Network > Edit** screen appears.
4. Tap  to open the **Keyboard** screen. Type in your Wi-Fi AP SSID name and then tap **OK** to save.
5. On the **Network Key Mode** line tap the  button. A pop-up list will appear. Tap on the network key mode you want.
6. On the **Authentication Type** line tap the  button. A pop-up list will appear. Tap on the **Authentication Type** you want. If Network Key Mode is WPA or WPA2, the **Authentication Type** and **Transmit Key** can not be selected.
7. On the **Network Key** line, tap  to open the **Keyboard** screen. Type in your network key and then tap **OK** to save.
8. On the **Save** line tap **Yes** to save or tap **No** to cancel. You will be returned to the **Network** screen.
9. On the **Search WiFi Network** line, tap  to open the **Network Search** screen. You should see the newly entered Wi-Fi network name.
10. Tap **Connect** button to connect the newly added Wi-Fi network.

If you are using a Wi-Fi network other than your own, then you must consult the Network Administrator for that network to get access (i.e. network key).

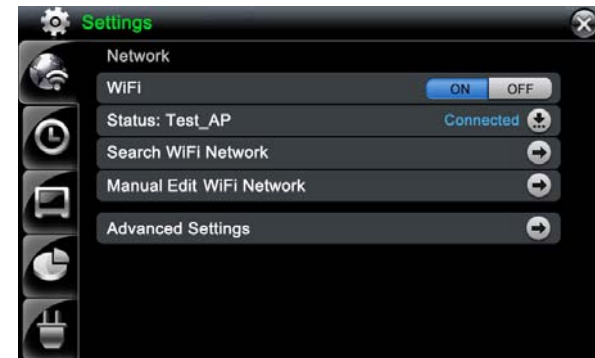




Network screen



Network Edit screen

 
Advanced Settings

Notes:

 
- 1) Follow the steps of **Advanced Settings ONLY** if your access point's **DHCP** setting is **OFF**. The frame needs to use a fixed IP address to connect to the **AP**.
 - 2) If you are using a Wi-Fi network other than your own, then you must consult the Network Administrator for that network to get access (i.e. network key).
1. On **Network** screen, tap the  button on the **Advanced Settings** line. The **Advanced Settings** screen will appear.
 2. On the **DHCP** line, select **On** or **Off**. Normally the **DHCP** is **ON** and the frame can get the IP address assigned by the access point. If the **DHCP** is **OFF**, the frame will use a fixed IP address to connect to the access point.
 3. If the **DHCP** is **OFF**, then you need to input the following settings:
 - ◆ IP Address
 - ◆ Subnet Mask
 - ◆ Default Gateway
 - ◆ DNS Server
 4. Tap  to open the **Keyboard** and type in the required settings. Tap **OK** to save your entries.
 5. On the **Save** line:
 - ◆ Tap **Yes** to save the advanced network settings and go back to the Network screen.
 - ◆ Tap **No** to cancel without saving and go back to the **Network** screen.
 6. On the **WiFi** line, tap the **On** button to turn on **WiFi**.
 7. Next, on the **Search WiFi Network** line, tap  to begin searching for all available **Access Points (AP)**.
 - ◆ All the available access points and their signal strength are listed in **Network > Search** screen.




Advanced Settings screen (DHCP is OFF)

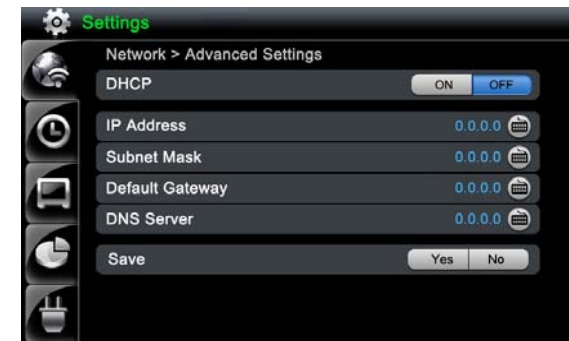

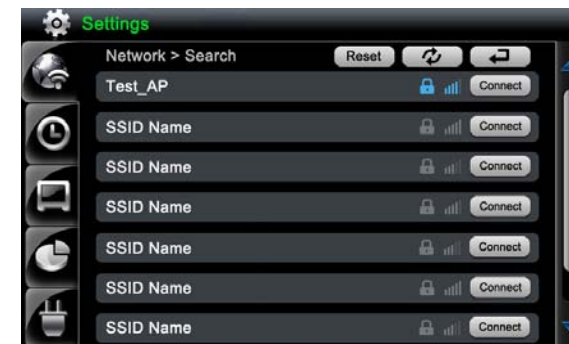

Network Settings screen



Wi-Fi Network Search screen

- ◆ If the access point has a network key, the  icon will be displayed.
8. On the **SSID Name** line for the network you want to connect to, tap **Connect**.
 - ◆ If the access point has a network key, the user will be prompted by a pop-up screen to input the network key.

Note: If the **AP Network Key Mode** is **WEP**, a pop-up menu will appear after tapping the **Connect** button. User must select the shared key or open key and key 1.2.3.4. Tap  to confirm.

 
9. Tap  button to bring up the Keyboard and type in the network key.
10. Tap  to confirm.
11. A **“Connecting...”** dialog box appears.
12. After successfully connecting to the access point, you should see a green checkmark icon next to AP SSID name.
13. If connection fails, a pop up message **“Network Connection Failed”** will appear. Tap **OK** and try connecting to the access point again.



WEP Security Setting box




Network Key Input box

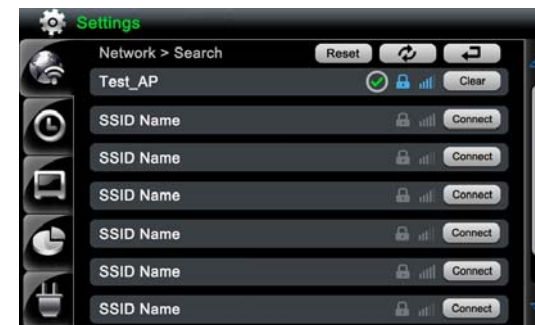

Wi-Fi Network Search screen

Notes:

- 1) If the connection is failed, the **Status bar** displays **“Not Connected”**
- 2) When the **Status** is showing **“Connecting”**, the device has just finished the association with AP and is trying to make connection. Please be patient until it shows **“Connected”**.
- 3) Tap the  button to view the network details, including **IP Address**, **Subnet Mask**, **Default Gateway** and **DNS Server**.

-
- 4) If you are using a Wi-Fi network other than your own then you must consult the Network Administrator for that network to get access (i.e. network key).

Date / Time


See the [Clock and Calendar](#) section for instructions on the **Date / Time** settings.

Display


On the **Settings** screen, tap  button to enter the **Display** Screen.

Screen Calibration

 
You can calibrate the touch screen to have a greater sensitivity.

1. Tap the  button to start calibrating the screen.
2. There are five (5) points (+) needed to tap to calibrate the touch screen. The first point (+) is in the middle of the screen and there is one (1) point (+) in each corner. Follow the on screen instructions to calibrate the frame.

Brightness

1. On the **Brightness** line, tap the  button. A pop-up list will appear. There are eight (8) levels of brightness you can select from.
2. Tap on the brightness level you want.

You can also set the LCD brightness using the **On-Screen Display Bar**. See [Adjust LCD Brightness using OSD](#) section.

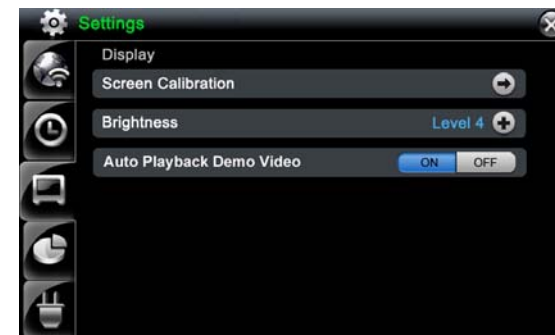

Display screen

Auto Playback Demo Video

1. On the **Auto Playback Demo Video** line, select **ON** or **OFF**.
 - ◆ If the user turns **OFF** the Auto Playback Demo Video, operation of frame is normal.
 - ◆ If the user turns **ON** the Auto Playback Demo Video, the frame will continuously play the demo video until the user touches the screen.
 - ◆ If no one touches the device for 3 minutes, even during slide show, music or video playback the device will automatically return to playing the demo video repeatedly.

Note: When the demo video plays, all functions of the frame are disabled. For example: Alarm, Sleep mode, Auto check firmware upgrade...won't work.

2. When the demo video is played, tap the screen. The video will be paused and will display two icons.
3. Tap the **Play** icon to resume demo video playback. Tap the **Back** icon return to Home screen.

Note: If the user deletes the "Intouch Video Demo" in the media application, the function of "Auto Playback Demo Video" will be disabled.

The application recognizes the "Intouch Video Demo" by file name. So if the user deleted the preset "Intouch Video Demo", and then added a new video named "Intouch Video Demo" into the media application, this video will also be automatically played repeatedly.




Demo Video Screen

System Settings

On the **Settings** screen, tap the  button to enter **System** screen.

Language


1. On the **Language** line, tap the  button to open the language pop-up.
2. Next, tap on the desired language. Available languages are:
 - ◆ English
 - ◆ French
 - ◆ Spanish
 - ◆ German
 - ◆ Italian
 - ◆ Dutch
 - ◆ Portuguese

To exit the pop-up without selecting a language, tap the  button.

3. You will be returned to the **System** screen and the selected language will now be displayed on the **Language** line.

 
Firmware Upgrade

Manual Firmware Upgrade


1. On the **System** screen, tap the  button on the **Firmware Upgrade** line to start checking for an upgrade.

You must be connected to the internet to check for a firmware upgrade.

2. If your current firmware version is the most current available, then you do not have to do anything.

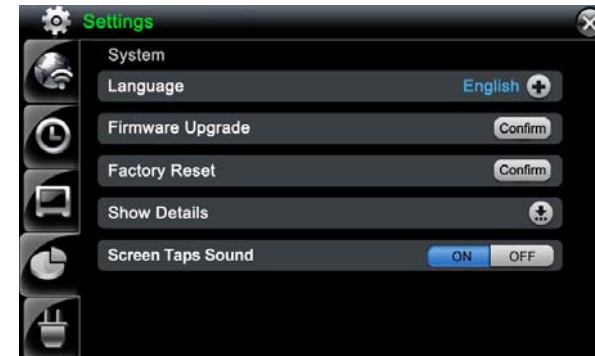

System screen

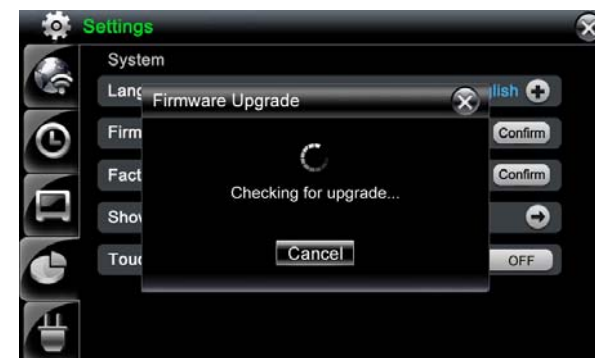 

Check for firmware upgrade dialog box

3. If there is a newer firmware version available, the dialog box appears asking "Do you want to upgrade now?"
 - ◆ Tap **Yes** to download the new firmware and the frame will start downloading the new firmware.
 - ◆ Tap **No** to cancel the download. You will be returned to the **System** screen.
4. After downloading the firmware successfully, you will be required to restart the frame. A dialog box will appear asking "New firmware downloaded successfully! Do you want to restart to install new firmware?".
 - ◆ Tap **Yes** to restart now.
 - ◆ Tap **No** to restart later.
5. The new firmware will be automatically installed next time the frame is turned on. Please wait while the firmware installs.

Warning: When the new firmware is installing, user can't shut off the frame.

6. Tap **OK** to return to **Home Screen** after the upgrade process.

Note: In the process of upgrading, if the frame memory is not enough for downloading the new firmware, a dialog box "No disk space!" will appear.

Auto Firmware Upgrade

The device automatically checks for firmware updates when connected to the internet. If new firmware has been found, then please follow the on-screen instructions to complete the upgrade.



Firmware Found acceptance dialog box



Firmware Upgrade acceptance dialog box



Firmware Upgrade acceptance dialog box



Factory Reset

1. On the **Setting** screen, tap the **Confirm** button.
2. A pop-up dialog box will appear asking "**Do you want to reset factory settings?**"
3. Tap **Yes** to reset the factory settings or **No** to cancel the reset. You will then be returned to the **System** screen.

Note: Please do not Power Off during factory resetting!

Show Details

You can review system details using the **System > Show Details** screen. Details that can be displayed are:

- **Software Version** – displays the software version installed
- **MAC Address (Wireless)** – displays the MAC address of the wireless network
- **End User License Agreement** – tap the  button to open the EULA. Tap the  button to exit the **EULA**.

Frame Memory


- ◆ **Used** – displays amount of used memory
- ◆ **Unused** – displays amount of unused memory
- ◆ **Total** – total amount of frame memory



System screen



System > Show Details screen

Tap the  button to return to the **System** screen.

Motion Sensor (Model IT7350 only)

You can turn the Motion Sensor on or off using the buttons on the **Motion Sensor** line.

If user selects [ON]

In Home Slideshow and Photo Slide show:

When playing slide show in Home screen and Photo Application, user can switch to next picture by shaking his hand in front of the sensor, and there will be a “tick” sound if the motion is recognized successfully.

If user taps the screen, slide show will be paused and control bar will appear. User can also switch to next picture by shaking his hand in front of the sensor, and there will be a “tick” sound if the motion is recognized successfully.

Note: The sensor’s effective space is 10cm. The Motion Sensor indicator will be on only when slide show is started.

If user selects [OFF].

Motion sensor will be turned off, and will not response to hand shaking.

Screen Taps Sound

You can turn the screen tap sound on or off using the buttons on the **Screen Taps Sound** line on the **Settings** screen.





System screen

Power Management


The **Power Management** screen is where you can set the Sleep Mode and Interval Time. During the sleep time, the frame will be turned off to save power. The alarm is still active during sleep mode. To wake up the frame press the **Mode** button on the frame's back panel.

 
Sleep Mode

1. On the **Settings** screen, tap the  button.
2. Tap the  button to select a sleep mode.
 - ◆ **Off** – turns Sleep Mode off
 - ◆ **Once** – activates Sleep Mode once
 - ◆ **Everyday** - activates Sleep Mode every day

Interval Time (Sleep Interval Time)

This function is disabled when **Sleep Mode** is turned off.

1. On the **Power Management** screen, tap the  button on the Interval Time line to open the **Interval Time Settings** screen.
2. Use the **up** and **down arrows** to set the desired interval time.

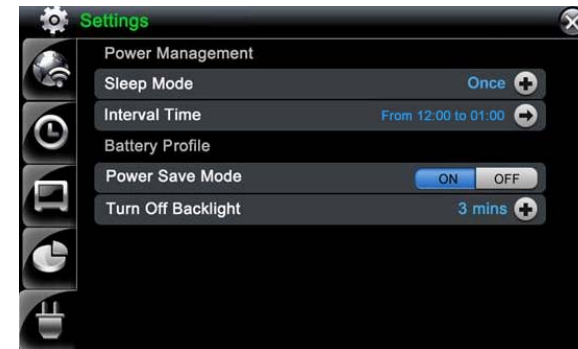



Power Management Settings screen



Power Management > Interval Time Settings screen

Battery Profile

If the unit does not have a rechargeable battery, the unit will be powered by AC adaptor.

1. On the Settings page, tap the  button to open the **Battery Profile Settings** screen.
2. On the **Power Save Mode** line select either **ON** or **OFF**.
3. On the **Turn Off Backlight** line, tap the  button to set the time limit for the screen's backlight to remain lit.



Battery Profile Settings screen

Photo / Content Service

The **Photo Player** application lets you view, add, delete, and configure your photos. Photos can be viewed in a still picture or slide show configuration.

You can store photos internally to the frame, access them from an external disk or flash drive, another PC on your home network, or from a photo hosting/sharing web site.

1. To open the **Photo Player** application, on the **Home Screen** tap the **Menu** button to open the **Main Menu** page.
2. Next, tap the **Photo/Content Service** icon to open the **Photo /Content Service** application.




Main Menu screen




Photo / Content Service screen

Photo Player Main Page controls


The following controls are used on the **Photo Player Main** screen.

 closes the left sidebar

 opens the left sidebar

 opens the **Photo Setup** drop down menu

 returns to the **Main Menu** screen

 Slide bar – allows you to move up or down on the page


 Frame displays internally stored photos




Photo Player Main screen (left side bar open)



 displays photos stored on an external disk or flash drive



 displays photos stored on another PC or server on your network



display photos stored on a photo hosting/sharing web site



Photo Player Main screen (left sidebar closed)

Photo

1. To open the **Photo Player** application, on the **Home Screen** tap the **Menu** button to open the **Main Menu** page.
2. Next, tap the **Photo/Content Service** icon to open the **Photo /Content Service** screen.
3. Tap the **Photo** icon to enter into the photo screen



Photo / Content Service screen

Frame

 
The **Frame** is the internal memory of the device. To manage your photo files in internal memory, you can connect to PC, with the USB cable provided.

1. Tap on the photo you want to open in a full screen.
2. Tap the screen to open **Slide Show Control** buttons.

Slide Show Control Buttons



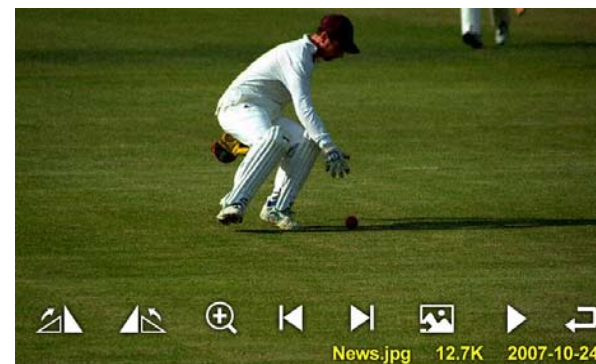

Rotate left button




Slide Show Control Buttons


 **Rotate** right button

 **Previous** button – display the previous picture

 **Next** button - display the next picture

 **Wallpaper** button – sets current picture as the **Home Screen** wallpaper

 **Play** button – start slide show playback

 **Back** button – go back to Photo Player Screen


Note: If user selects the Motion Sensor on when playing slide show in Photo application, user can also control to move to next picture by shaking his hand in front of the sensor. Tap the screen, the control button will appear. Motion sensor is effective either when slide show is being played or being paused (**Only for IT7350**).

 
Zoom Control Buttons

 **Actual** size button – display actual size of the picture

 **Zoom** in button

 **Zoom** out button

 moves up, down, left, right on the picture

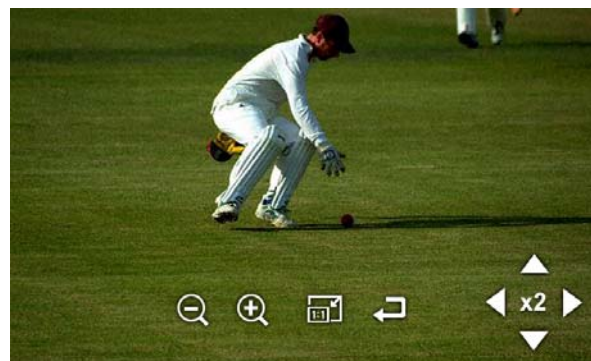

Zoom Control Buttons

Disk

1. On the **Photo Main** screen tap on **Disk** to display all external memory cards or USB devices currently connected to the frame.
2. Double tap on the external device to display the photos or the photo files.



Photo screen

 
Home Network

Adding Photos to the Library

Notes:

The following procedure can be used for wireless networks.

- 1) For wireless connection, access to shared folders on the PC when connected via the Wi-Fi network.
 - 2) The procedure assumes you are using the Microsoft Windows firewall. If you are using a different firewall application, please refer to its documentation for setup. For additional information please go to: <http://www.microsoft.com/windows/windowsmedia/player/faq/sharing.msp>
 - 3) **Windows Media Player v11** is recommended.
1. On your **PC**, open the **Windows Media Player**.
 2. Click the **Library** tab at the top.

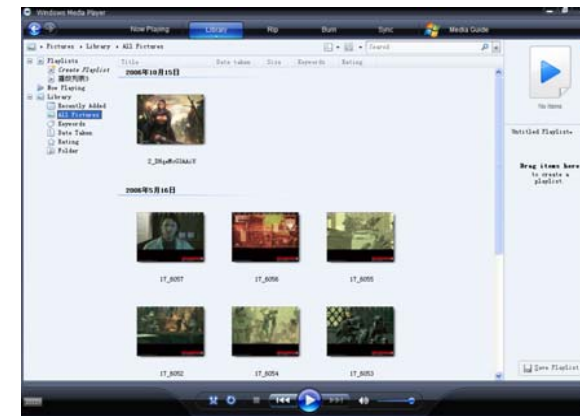


Windows Media Player

- In the Library drop down menu, click **Add to Library**.



Windows Media Player – Library drop down menu

 - In the **Add To Library** screen, under the **Select the folders to monitor** section, select **My personal folders**.
- Click **Add**, a pop-up dialog "Add Folder" will appear.

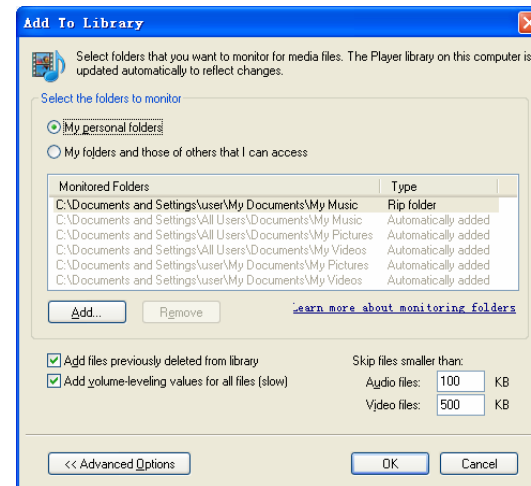

Add to Library dialog box

6. In the **Add Folder** dialog box select the folder you want to share and then click **OK** to add it.

 


Add Folder dialog box

7. When user clicks **OK**, the **Add To Library** window will close and the **Add to Library by Searching Computer** dialog box is displayed.
8. Wait until it finishes and then click **Close**.


Tip: To ensure that the frame can handle the amount of pictures you have stored on your computer in a timely matter it is recommended that you do the following:


1. On your computer in the **My Documents** folder, create a new folder with only those pictures you would like to display.
2. Open **Windows Media Player** and go to the **Add to Library dialog box**. Click the **Add** button.
3. Select the folder you just created.
4. Ignore all the other folders by highlighting the monitored folder and select the ignore button on all but the one you want to display.

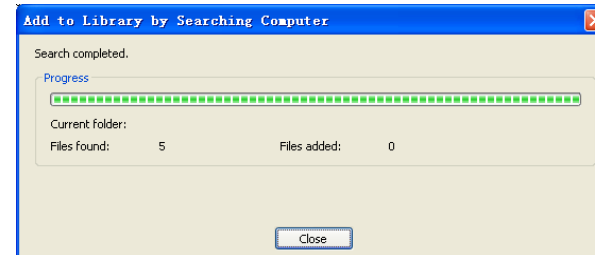

Add to Library by Searching Computer dialog box


Checking Shared Photos

 1. In the **Windows Media Player**, set the **Category**, which is under the  symbol at the top left to **Pictures**.

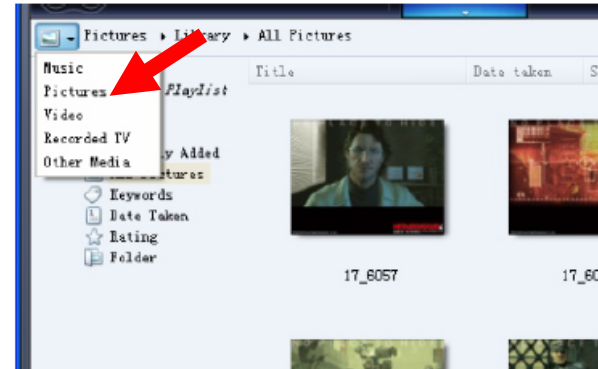

Windows Media Player – Category drop down menu

 
2. Under **Library**, select **All Pictures**, **Keywords**, **Date Taken**, **Rating**, **Folder** settings.
3. Check whether the added photos exist in the library.

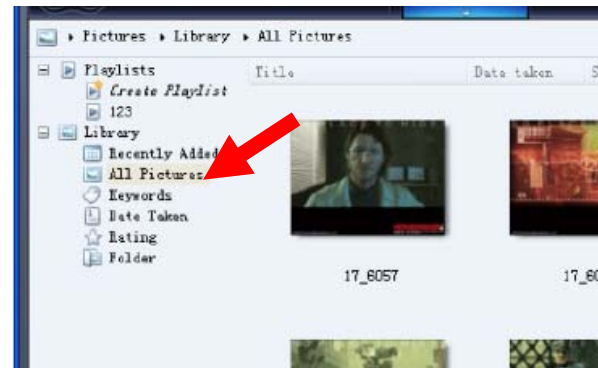

Windows Media Player – Library drop down list


Sharing Settings for Accepting Connections from Your Frame

 1. In the **Library** tab click on **Media Sharing**.
2. If your network is a **Private** network, then the **Available Device list** and the **Settings** button will be displayed in the **Library Sharing window**.

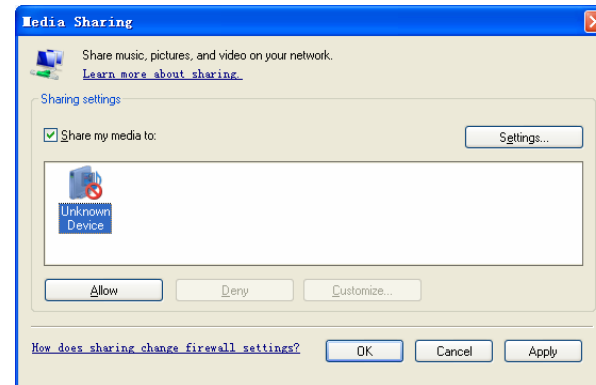


Media Sharing dialog box

 3. In the **Available Device** list, select **WiFi DPF**.
4. Click the **Allow** button.

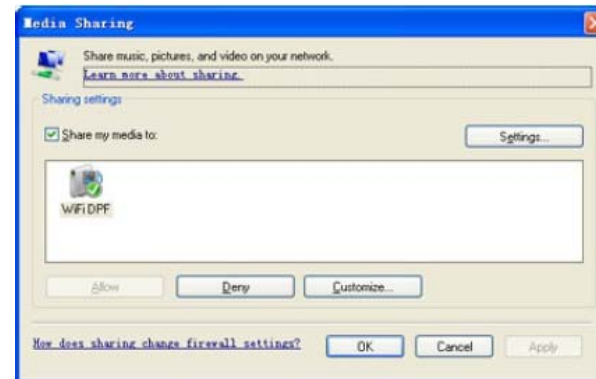

Media Sharing dialog box

 5. In the **Library Sharing** window, click on the **Settings** button. The **Library Sharing-Default Settings** window appears.
6. In the **Library Sharing-Default Settings** window:
 - ◆ for **Media Type** select **Pictures**.
 - ◆ for **Star Ratings** select both **All ratings** and **Only**.
 - ◆ for **Parental ratings** select **All ratings** or a required rating under the **Default Settings** section.
7. To add a device or computer to connect automatically to the library, check the **Allow new devices and computers automatically (not recommended)** checkbox.

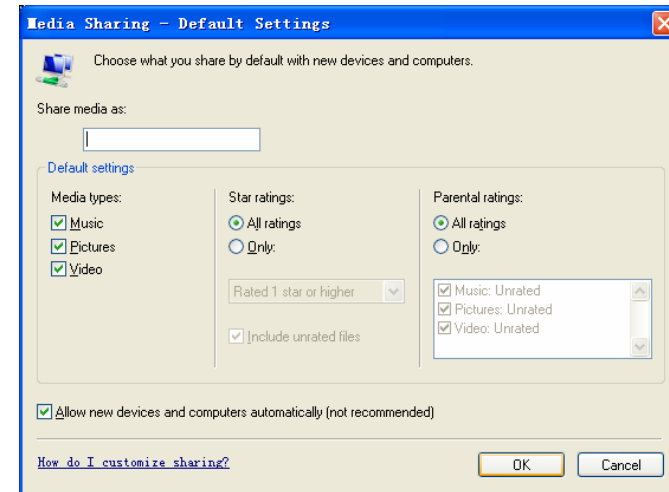

Media Sharing – Default Settings

View for Sharing the Photos on your frame

1. Tap the **Home Network** button. You will see the PCs connected to your home network.
2. Double tap the **PC icon** you want. You can view the photos in this **PC** just like in **Frame** and **Disk**.



Photo screen – Home Network

Web

1. On the **Photo** screen, tap the **Web** button.
2. Next, tap the **Web** icon you want. You can now view photos in it.
3. Supported web album account sites are:
 - ◆ Picasa
 - ◆ Windows Live Space
 - ◆ other sites
4. For the other web album accounts, the device may not display perfectly.



Photo screen – Web

Photo Setup

Slide Show

You can show a slide show on the **Home Screen** or within the **Photo** application. For detailed instructions on how to setup the slide show please refer to [For a slide show as the wallpaper](#).

Slide Show Settings






1. On the **Photo** screen, tap the  button. The **Setup** drop down menu appears.
2. Tap **Setup**. The **Slide Show** screen appears.
3. On the **Display Mode** line, tap the  button. The **Display Mode drop down list** appears.
4. Select which display mode you want. Available modes are **Original**,



Photo screen

Auto fit, Fit to width and Fit to screen.

 5. On the **Transition Type** line, tap the  button. The **Transition Type drop down list** appears.
6. Select which transition type you want. Available types are: **Dissolve, Slide, Blind, Wipe, Random** and **None**
7. On the **Photo Interval** line, tap the  button. The **Photo Interval drop down list** appears.
8. Select which interval you want. Available intervals are: **5 Seconds, 15 seconds, 30 Seconds** and **1 Minute**
9. On the **Repeat** line, tap **ON** to have all the photos in the current folder play repeatedly. Tap **OFF** to turn off the **Repeat** feature.
10. On the **Shuffle** line, tap **ON** to have all the photos in the current folder played randomly. Tap **OFF** to turn off the **Shuffle** feature.
11. On the **Background Music** line, tap **ON** to select a music file to use as the background music for the slide show. Tap **OFF** to turn this feature off.

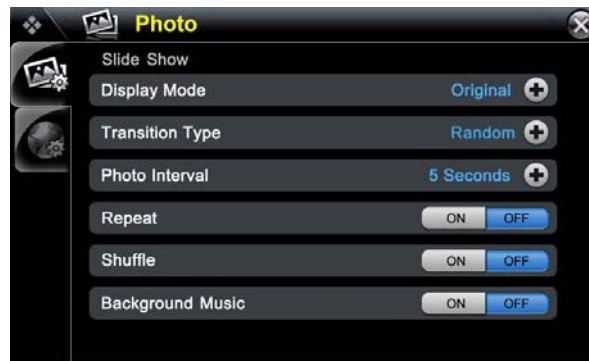


Slide Show screen

If you want to change the slide show background music (Music repeat / shuffle playback) please go to [Media Setup](#) to change the settings.

Setup Web Photo Account

 Add Web Photo Account

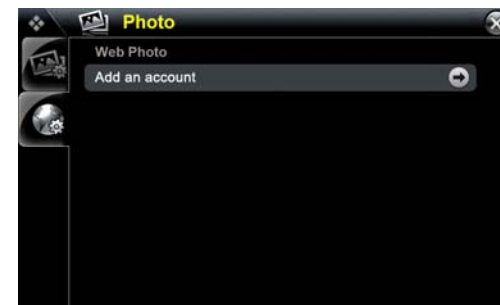

1. On the **Photo** screen, tap the  button. The **Setup** drop down menu appears. Tap the **Setup** icon.
2. Tap **Web Photo setup**  button The **Web Photo** screen appears.
3. On the **Web Photo > Add an account** line, tap the  button. The **Link drop down list** appears.



Web Photo screen

4. Tap on the sharing site you want. Current selections are **Picasa**, **Windows Live Space** and **Other**.

Note: If your account is not one of the above listed, then your web photos may not be displayed accurately. To learn how to get the web photo RSS address from internet see [Add RSS News Feed](#).


5. On the Title line, tap the  button to open the **Keyboard**. Type in your desired **Title** and tap **OK** to save.
6. For both **User Name (Option)** and **Pin (Option)**, on their respective line, tap the  button to open the **Keyboard**. Type in the **User Name** and **Pin code**. Tap **OK** to save.

Note: For **Picasa** and **Windows Live Space**, user only needs to input username. For **Other**, you need to input the whole **RSS link** in **Link**.


Note: If the **User Name** entered contains invalid characters, then a pop up dialog will appear to prompt you re-enter the information.

7. The new created account will be displayed in Web photo setup screen, like this:
8. On the **Save** line, tap **Yes** to save the web photo account settings or tap **No** to cancel your settings. You will be returned to the **Web Photo** screen.

Edit Web Photo Account

1. On the **Photo** account screen, tap the  button in the account line that you want to edit. The **Web Photo > Add** screen appears.
2. Follow the steps in [Add Web Photo Account](#) section to change current settings.

Delete Web Photo Account

On the **Photo** account screen, tap the  button. A pop-up dialog box appears asking "**Do you want to delete the link?**". Tap **Yes** to delete or **No** to cancel without deleting.



Add Web Photo Account Screen



Invalid input pop-up

 


Photo account

Content Service (Windows Live Framelt)

1. To open the **Photo Player** application, on the **Home Screen** tap the **Menu** button to open the **Main Menu** page.
2. Next, tap the **Photo/Content Service** icon to open the **Photo /Content Service** screen.
3. Tap the **Windows Live Framelt** icon to enter into the Windows Live Framelt screen.



Photo / Content Service screen



Account

1. On the **Windows Live Framelt** screen tap the **Account** button to display all account folder currently registered to the frame.
2. Double tap the **Account folder** to display some folders about the photo category.
3. Select the category folder you want to display and tap the folder. The frame will automatically slide show.




Windows Live Framelt screen

 
Setup Windows Live Framelt Account

1. Tap the  button a drop down menu will appear.
2. Tap **Setup** to open the **Add an account** screen.
3. Tap the  button on Add an account line.



Add an account screen

4. On the **Account Name** line tap  to open the **Keyboard** screen. Type in your account name and then tap **OK** to save.
5. Tap the **Register** button.

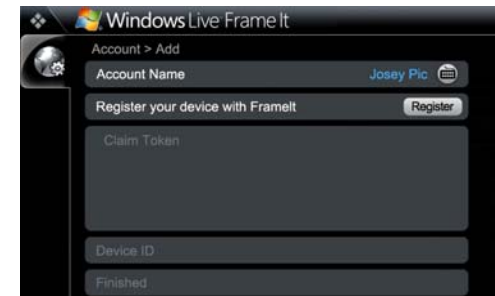

Add the Framelt account screen

6. After Tap the **Register** button, server will send a token to the frame. If the Claim Token invalid, tap the **Start Over** Button can request a fresh claim token. After finish website sign in or sign up, tap the **Continue** button to continue.
7. Server will send a Device ID after user taps **Continue** button. If fail to get the Device ID, the frame will appear a pop up screen "Failed to get Device ID, please Start over again." If succeed to get the Device ID, tap **Yes** to finish the account settings or tap **No** to cancel your settings. You will be returned to the **Add an account** screen.



Add the Framelt account screen



Add the Framelt account screen

-
- After a new account is added, user can see the added account in Add an account screen.

Edit the Framelt Account

On the **Add an account** screen, tap the  button in the Account Name line that you want to edit the Account Name.

Delete the Framelt Account

On the **Add an account** screen, tap the  button. A pop-up dialog box appears asking " **Do you want to delete the link?**". Tap **Yes** to delete or **No** to cancel without deleting.



Add an account screen

Content Service (Framechannel)

- To open the **Photo Player** application, on the **Home Screen** tap the **Menu** button to open the **Main Menu** page.
- Next, tap the **Photo/Content Service** icon to open the **Photo /Content Service** screen.
- Tap the **Windows Live Framelt** icon to enter into the Windows Live Framelt screen



Photo / Content Service screen

Account

1. On the **Framechannel** screen tap the **Account button** to display all account folder currently registered to the frame.
2. Double tap the **Account folder** to display the folder about the photo category.
3. Select the category folder you want to display and tap the folder. The frame will display the photo thumbnail.

Note: If user taps the folder of **Play All**, the frame will automatically slide show.







Framechannel screen



Framechannel account screen

Setup Framechannel Account

On the **Photo** screen, tap the  button. The **Setup** drop down menu appears. Tap the **Setup** icon.

1. Tap **Setup** to open the **Add an account** screen.
2. On the Add an account line, tap the  button.
3. On the Title line, tap the  button to open the **Keyboard**. Type in your desired **Title** and tap **OK** to save.
4. For both **User Name** and **Pin**, on their respective line, tap the  button to open the **Keyboard**. Type in the **User Name** and **Pin code**. Tap **OK** to save.




Add the Framechannel account

Note: If the **User Name** entered contains invalid characters, then a pop up dialog will appear to prompt you re-enter the information.

 
5. On the **Save** line, tap **Yes** to save the account settings or tap **No** to cancel your settings. You will be returned to the **Add an account** screen.
6. The new created account will be displayed in **Add an account** screen, like this:

Edit the Framechannel Account

1. On the **Add an account** screen, tap the  button in the account line that you want to edit.

Delete the Framechannel Account


1. On the **Add an account** screen, tap the  button. A pop-up dialog box appears asking "Do you want to delete the link?". Tap **Yes** to delete or **No** to cancel without deleting.

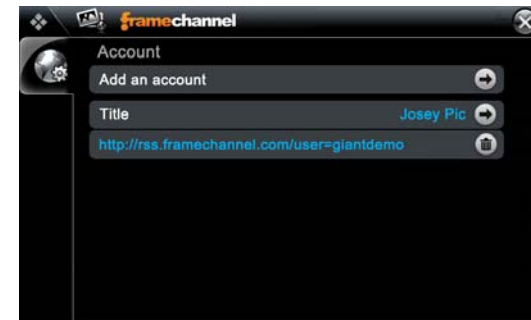

Add an account screen

Copy/ Delete Photos


Copy One

1. In the left side of the **Photo** screen, tap the location where the photo is that you want to copy.
2. Select the photo you want to copy. Tap the  button, a drop down menu will appear.
3. Tap **Copy One** to copy the selected photo. A dialog box will appear asking you to "Choose a device for file copy".
4. Tap your destination memory.
5. Tap **Yes** to confirm the copy or **No** to cancel.




Choose a device for file copy dialog box – Copy One


Copy All

1. In the left side of the **Photo** screen, tap the location where the photos are that you want to copy.
2. Select any photo. Tap the  button, a drop down menu will appear.
3. Tap **Copy All** to copy the selected photos. A dialog box will appear asking you to “**Choose a device for file copy**”.
4. Tap your destination memory.
5. Tap **Yes** to confirm the copy or **No** to cancel.

Delete One

1. In the left side of the **Photo** screen, tap the location where the photo is that you want to delete.
2. Select the photo you want to delete. Tap the  button, a drop down menu will appear.
3. Tap **Delete One** to delete your selected photo.
4. Tap **Yes** to confirm the deletion or **No** to cancel.

Delete All

1. In the left side of the **Photo** screen, tap the location where the photos are that you want to delete.
2. Select any photo. Tap the  button, a drop down menu will appear.
3. Tap **Delete All** to delete all the photo files in the selected directory.
4. Tap **Yes** to confirm the deletion or **No** to cancel.
5. In **Home Network** and **Web**, **Delete One** and **Delete All** buttons are disabled.



Choose a device for file copy dialog box – Copy All



Do you want to delete this file? dialog box

RSS News Reader (RSS2.0)

Notes:


1. To ensure you can view RSS news normally, the feed you added should comply with the standard RSS 2.0 protocol. You can search a feed link on the internet with your PC, and then add it to your RSS News Reader.
2. ATOM and KML format cannot be supported

RSS News Feed screen

1. On the **Main Menu** screen, tap the **News** icon. The **RSS News Feed** screen appears.

By tapping different categories, the **RSS News Feed** is sorted in each category. You can add a **RSS feed** to a specific category. See the [News Setup](#) section.

RSS News Feed Control Buttons / Icons

- ◆ **All** button – shows all RSS News feeds.
 - ◆ **Local / World / Business / Science / Entertainment / Sports / Society / Other** buttons – these are the **RSS News** categories provided with the frame.
 - ◆ **More** button – shows additional categories that are not displayed in the current page.
 - ◆ **RSS Feed**  icon - represents one news feed. The **News Feed name** is shown next to **News Feed icon**.
2. Double tap the **News Feed name** to open a News feed. The **RSS News List** screen appears.

 


News Feed List screen

The **RSS News List screen** displays the news headlines of one feed. It includes **News Type icon**, **News Headlines**, **Date** and **Time** of the news.

- ◆ **News Type icon** > **Text** icon - the RSS News is text based with photo or without photo.
- ◆ The unread news is in white color. The read news is in grey color. If it's today news, it displays "**Today**" in date display. The time is from the RSS News Feed, it represents the posted time of the news.

Double tap the news headline to read the details of the news in **RSS News Reader**.

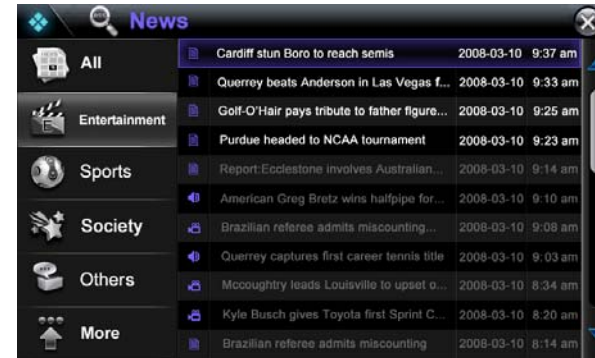




RSS News List screen

RSS News Reader



The **RSS News Reader** displays the news text content and the media files of news.

RSS News Reader Control Buttons / Icons





-  **Previous** button – review previous news
-  **Next** button – review next news
-  **News List** button – return to **RSS News List** screen

News Text Content

Red Circle Area /Grey Arrow – This is an enlarge button that closes the **News Media Player** area, which then enlarges the **News Text Content** to full screen.

-  **Up arrow** button – page up the news content
-  **Down arrow** button – page down the news content


News Media Player

-  **News Type** icons – Supports news photo only.
-  **Play** button – plays the media file of news
-  **Mute** button – turns on / off mute
-  **Volume level** buttons – adjusts volume

Note: The device is only capable of showing photos with the news article.
Video and Audio are not functional.



RSS News Reader > News Text Content

1. In **RSS News Reader** screen, tap the red circle area to close the **News Media Player** area and display the **News Text Content** area full screen.
2. Tap the red circle area again to close the full screen **News Text Content** area and open the **News Media Player** area.
3. Tap the **News List**  button to go back to the **RSS News List** screen.




News Text Content – full screen

Grey Arrow

Refresh / Delete News

Note: If your RSS news can't be refreshed successfully, it might be because the RSS feed is not in RSS 2.0 standard, or your RSS feed might be experiencing technical difficulties.


Refresh RSS News Feed screen

1. On the **RSS News List** screen, tap the  button to open the **Setup** drop down menu.
2. Tap **Refresh** to refresh all of the RSS news feeds.




RSS News Feed screen


Delete One RSS News Headline

1. On the **RSS News List** screen, tap on the headline that you want to delete.
2. Tap the  button to open the drop down menu.
3. Tap on **Delete One** to remove the selected news headline.


Delete All RSS News Headlines

1. On the **RSS News List** screen, tap the  button to open the drop down menu.
2. Tap on **Delete All** to remove all news headlines of the one feed.

 
Delete All RSS News Read Headlines

1. On the **RSS News List** screen, tap the  button to open the drop down menu.
2. Tap on **Delete All Read** (in grey color) to remove all read news.

Delete One in RSS News Reader Screen

1. On the **RSS News Reader** screen, tap the  button to open drop down menu.
2. Tap **Delete One** to delete the news current in the **RSS News Reader**.


Note: Refresh / Delete All / Delete All Read is not supported in the RSS News Reader Screen.

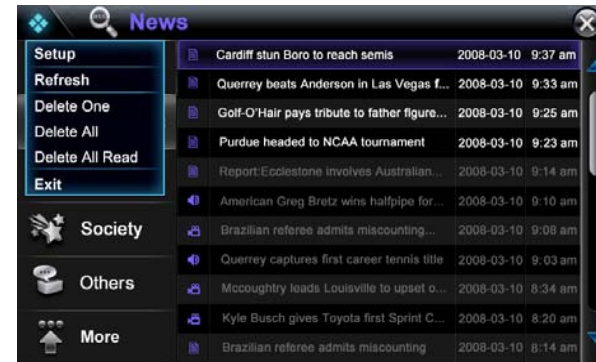

RSS News List Screen – drop down menu

News Setup

Set General Settings


1. In the **RSS News Reader** screen, tap the  button to open the drop down menu.
2. Tap on **Setup**. The **News > General** screen appears.

Auto Download Media File

You can select to turn on or off the automatic download media files feature when reading the news.


Keeps News For

You can choose how many days you want to keep the news history.

Tap the  button on the **Keep News For** line to open the drop down list. You can select from one (1) to seven (7) days.

Update Interval

You can choose how often you want the news to be updated.

Tap the  button to open the drop down list. You can select from the following:

- ◆ **Manually**
- ◆ **5 minutes**
- ◆ **10 minutes**
- ◆ **30 minutes**
- ◆ **1 Hour**
- ◆ **12 Hours**
- ◆ **24 Hours**


 


News > General Screen

Add / Edit RSS News Feeds (Support RSS2.0 Format only)

Get RSS News Feed Address from Internet

Note: The Yahoo News website will be used for demonstrating how to add a RSS News Feed.

1. On your PC, connect to <http://www.yahoo.com/>.
2. Click on **News**.
3. Scroll down to **News Services** (usually located near the bottom of the page).
4. Click on  **RSS**.
5. The **Yahoo News - RSS** page will appear. All Yahoo news feeds will be listed.
6. Click on the  **RSS** icon next to the news category you want.



 
NEW: Photo thumbnails in Yahoo! News' RSS feeds! We're now offering thumbnails of related photos for stories in our experience. (Note: your RSS reader may not support the viewing of thumbnails.)

What kind of content does Yahoo! News syndicate via RSS?



Yahoo! News is offering many feeds in the RSS format. The feeds are free of charge to use for individuals and non-profit or (included in each feed) is required.



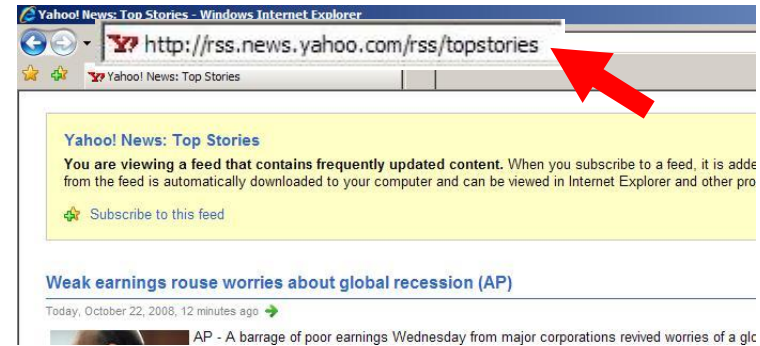


- The selected RSS news feed page (or XML page) appears.
- Copy the RSS address displayed in the **Internet Explorer Address box**. This is the RSS link you need to enter on the frame. Make sure this is **RSS2.0 format**.



Add a new RSS News Feed

- On the **RSS News > General** screen, tap the  button. The **News > Feeds** screen will appear.
- On the **Add a News Feed (Support RSS2.0 format)** line tap the  button. The **Feeds > Add New** screen appears.

Note: You can add up to 256 news feeds.

- On the **Link** line, tap the  button to open the **Keyboard**. Enter the RSS news feed address link. Tap **OK** to save. The **RSS news feed address** will now appear in the **Link** line.
- On the **Title** line, tap the  button to open the **Keyboard**. Enter a title for the RSS news feed. Tap **OK** to save. The **RSS news feed title** will now appear in the **Title** line.
- On the **Category** line, tap the  button. A drop down list will appear containing the categories you can select from. They are: **Local, World, Business, Science, Entertainment, Sports, Society** and **Other**.
- Tap which category you want the RSS news feed to be located. The selected category will now appear in the **Category** line.
- When you are finished entering the information, tap the **Yes** button to save or the **No** button to exit without saving.








News > Feeds screen



Feeds > Add New screen

 
-
8. The newly created RSS news feed will now be displayed in **News > Feeds** screen. It will be the last entry on the screen.

Edit a RSS News Feed

1. On the **RSS News > General** screen, tap the  button. The **News > Feeds** screen will appear.
2. On the news feeds line that you want to edit tap the  button. The **Feeds > Edit** screen appears.
3. On the **Link** line, tap the  button to open the **Keyboard**. Make your changes to the RSS news feed address link. Tap **OK** to save. The updated **RSS news feed address** will now appear in the **Link** line.
4. On the **Title** line, tap the  button to open the **Keyboard**. Make your changes to the RSS news feed title. Tap **OK** to save. The updated **RSS news feed title** will now appear in the **Title** line.
5. On the **Category** line, tap the  button. A drop down list will appear containing the categories you can select from. They are: **Local, World, Business, Science, Entertainment, Sports, Society** and **Other**.
6. Tap which category you want the RSS news feed to be located. The selected category will now appear in the **Category** line.





News > Feeds screen



News Feed items

-
7. When you are finished entering the information tap the **Yes** button to save or the **No** button to exit without saving.

Delete a RSS News Feed

1. On the **RSS News > General** screen, tap the  button. The **News > Feeds** screen will appear.
2. On the news feeds line that you want to delete tap the  button.
3. A pop-up dialog box will appear asking “**Do you want to delete this link?**”.
4. Tap **Yes** to delete the link or **No** to exit without deleting. If you selected **Yes**, then the link will be removed from the **News > Feeds** list.


Media Player

You can enjoy music and internet radio while using other applications.


The **Media Player** consists of three (3) features:

- ◆ **Music** – plays audio files
- ◆ **Video** – plays video files
- ◆ **Internet Radio** – plays internet radio stations

You can play audio and video files that are stored on the frame, from external disks, or your home network.


1. To access the **Media Player**, from the **Main Menu**, tap the **Media** icon.
2. To hide the **Media Player** tap the  button on the **Media** screen.


Playback Control Buttons

 **Search** button – only the internet radio stations supplied by vTuner can be searched


 **Now Playing** button – switches from **Play List** screen to **Now Playing** screen


 **List** button – switches from **Now Playing** screen to the **Play List** screen

 **Previous** button – goes to previous media file or previous station

 **Next** button – goes to next media file or next station

 **Play** button – plays media file or internet radio station

 **Pause** button – pauses the playback

 **Speaker** button – tap once to mute

 **Silence** button – tap once to cancel mute

 **Increase volume** button – increases volume level

 **Decrease volume** button – decreases volume level



Media Player



Playback Control Bar

Music / Video

Frame

Frame is the internal memory of the device. You can connect to a PC with the provided mini-USB cable to manage your audio and video files. Once you have successfully connected to your PC, you should see a new **Removable Disk** under **My Computer** in your PC.

Disk

After you insert an external memory card or USB device into the frame, tap the **Disk** button to display the external memory disk.

Home Network

For more detailed information on **PC control**, please see [Home Network section](#).

To access and play music or videos:

1. On the **Media** screen:
 - ◆ Tap **Music** to open the **Music** screen.
 - ◆ Tap **Video** to open the **Video** Screen.
2. Tap once on the **file / disk / folder** you want to open
3. Double tap again to open a **disk / folder** or **start playback** media file.
4. The **Now Playing** screen for the selected music or video file will appear.

Notes:

- 1) When video file is playing, simply tap the video playback area once to scale to full screen. Tap anywhere again to exit full screen mode.
- 2) In order to provide the best video performance, the suggested video resolution is 320x240 or below and frame rate is 25fps or below.



Audio Now Playing screen

Internet Radio and Web TV

Stations, Podcast or Web TV

1. On the **Media Player** screen, tap the **WebTV / i. Radio** tab. The **WebTV / i.Radio** screen appears.
2. Tap the **Stations, Podcast or Web TV** button to display a list of all internet categories. This list is from the **internet radio Server**.

Note: Use the **Scroll bar** to move up or down to see additional listings.

1. Double tap on the category you want. It may take additional screens to get to the actual program that you want to play. Make your selection (double tap) on each screen until you get to the program to play.
2. Double tap on the station to begin play.
3. If the content does not load immediately, then a **Loading** prompt will appear. Wait for the **Loading** prompt to close.
4. When you are connected to a station, the **Now Playing Screen** will be displayed. You can monitor the connecting status message or buffering status message on this screen.
5. If the program does not start playing it may be because the link is not valid, the player might not support this format, or the network is busy at the moment. Please select another program or try again later.

More

1. Tap the **More** button to show a list of your added stations.
2. Double tap a station to begin play.

Note: To add additional stations to the **More** category please refer to the [Add a Station](#) section.




WebTV / i.Radio screen




Now Playing screen

Add to Favorites


1. Select a station, procast or Web TV. Tap the  button and a drop down menu will appear.
2. Tap the **Add to My Favorite** button to add the current radio station. This radio station can now be found in **My Favorite Stations**.

Media Setup

Setup Media Playback

 
1. In **Media** screen, tap the  button. A drop down menu will appear.
2. Tap **Setup** to open the **Music/Video Setting** screen.

Repeat Mode

1. On the **Music/Video Setting** screen, tap the  button. A pop-up menu will appear.
2. Select the repeat mode for media playback. Selection are:
 - ◆ **None**
 - ◆ **Repeat One** – repeats current music/video file repeatedly.
 - ◆ **Repeat All** – repeats all songs/video in the current play list.

Shuffle

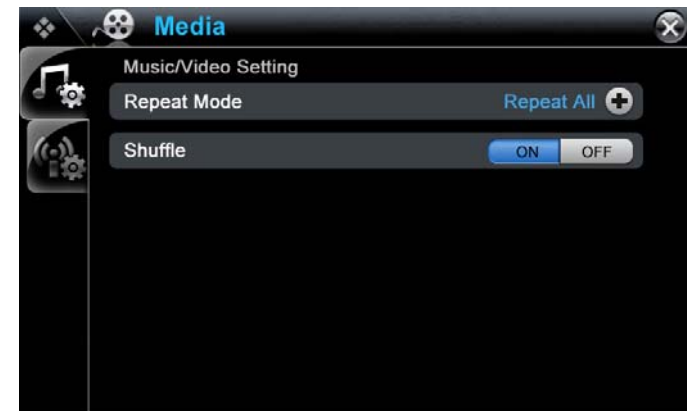


1. On the **Music/Video Setting** screen, on the **Shuffle** line:
2. Tap **ON** to play the media files randomly.
3. Tap **OFF** to play the media files in sequence. The playback sequence is sorted by file name.

 


Music / Video Setting screen

Add a Station

Note: You can add up to a maximum of 256 stations.

1. In **Media Setup**, tap the  button to open **My Added Station** screen.
2. On the **Add a Station** line, tap the  button. The **My Added Station > Add** screen appears.
3. On the **My Added Station > Add** screen, tap the  button to open the **Keyboard**. Using the **Keyboard** you can input the following internet radio station information:
 - ◆ **Title**
 - ◆ **Link**
 - ◆ **Country**
 - ◆ **Genre**
 - ◆ **Language**
4. Enter in the information you want then tap **OK** when you are finished.
5. To save the internet radio and it's information, on the **Save** line:
 - ◆ Tap **Yes** to save the newly added internet radio stations.
 - ◆ Tap **No** to exit without saving.
6. The newly added internet radio station(s) will be listed in **My Added Station** screen.

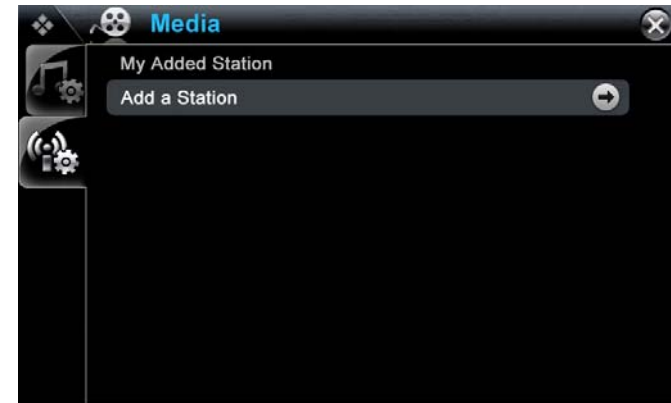



My Added Stations screen



My Added Stations > Add screen


Edit an added Internet Radio Station

1. To edit an internet radio station, on the **My Added Station** screen tap the  button on the **radio station name** line. **The My Added Station > Add** screen appears.
2. On the **My Added Station > Add** screen, tap the  button to open the **Keyboard**. Using the **Keyboard** you can change the following internet radio station information:
 - ◆ **Title**
 - ◆ **Link**
 - ◆ **Country**
 - ◆ **Genre**
 - ◆ **Language**
3. Enter in the information you want, then tap **OK** when you are finished.
4. The updated information will be displayed in the **My Added Station** screen.




My Added Station screen

Delete an added Internet Radio Station

On the **My Added Station** screen, tap the  button on the **radio link** line. The radio station will be deleted from the **My Added Station** screen list of stations.

Copy / Delete Media Files


Copy One

1. In the left side of the **Media** screen, tap the location where the media file is that you want to copy.
2. Select a media file you want to copy. Tap the  button. A drop down menu will appear.
3. Tap **Copy One** to copy the selected media file. A dialog box will appear asking you to “**Choose a device for file copy**”.
4. Tap your destination memory.
5. Tap **Yes** to confirm the copy or **No** to cancel.



Copy One Media screen


Copy All

1. In the left side of the **Media** screen, tap the location where the media files are that you want to copy.
2. Select any media file. Tap the  button. A drop down menu will appear.
3. Tap **Copy All** to copy all the media files in the current folder. A dialog box will appear asking you to “**Choose a device for file copy**”.
4. Tap your destination memory.
5. Tap **Yes** to confirm the copy or **No** to cancel.




Copy All Media screen

Delete One

1. In the left side of the **Media** screen, tap the location where the media file is that you want to delete.
2. Select a media file you want to delete. Tap the  button. A drop down menu will appear.
3. Tap **Delete One** to delete your selected media file.
4. Tap **Yes** to confirm the deletion or **No** to cancel.

Delete All

1. In the left side of the **Media** screen, tap the location where the media files are that you want to delete.
2. Select any media file. Tap the  button. A drop down menu will appear.
3. Tap **Delete All** to delete all the media files in the selected directory.
4. Tap **Yes** to confirm the deletion or **No** to cancel.

Note: In **Home Network** and **Web**, the **Delete One** and **Delete All** buttons are disabled.



Delete One Media screen

Specifications

Item		Specification
Panel	Type	7" TFT display with touch panel
	Resolution	800X480
Built-in memory		256 MB of internal memory (some is reserved for internal use)
Network	Standard	WiFi IEEE 802.11b/g, 2.4GHz, 54Mbps
	Network Security	Non, WEP, WPA, WPA2
	Internet Protocol	DHCP / Fixed IP
	Channels	Support 1-14 channels, subject to country regulation
USB	Standard	USB2.0 (Full Speed)
	Port	USB port (Host) and Mini USB port (Slave)
Memory Card	4 in 1 Card Slot	Support SD, MMC, MS/MS Duo, XD *Suggest to use 2GB or below
	CF Card Slot	Support CF Card *Suggest to use 2GB or below
Audio		1W x 2 built-in stereo speakers
Power Adaptor	Adaptor Manufacture Name	E-TEK Electronics Manufactory Ltd.
	Model No.	ZDA050300US
	Output	5.0V / 3.0A
	Input	AC 100 -240V ~ 50 / 60 Hz 0.8A

Item		Specification
Battery	Battery model	A0427-LF
	Battery Manufacturer Name	EVE Energy CO., LTD.
	Battery Capacity	2100mAh
	Battery Voltage	3.7V
Language		English, French, Spanish, German, Italian, Dutch and Portuguese.
Format	Photo	JPEG, BITMAP, GIF
	Audio	WMA
	Internet Radio	WMA
	Video	WMV, MPEG1(320x240, 25fps)
	RSS News	RSS2.0 standard
Photo Slide Show		Slide show with music / internet radio
Stream Photos/Music/Video from PC		Support Microsoft Windows Media Player 11

Troubleshooting

This section lists various problems and solutions encountered by users while using the Wireless Internet Frame. When encountering a problem, first check the list below and follow the suggested action if one matches your problem. If the problem still persists, contact or visit the nearest service center.

Symptom	Suggested Actions
The Wireless Internet Frame does not turn on.	Check the power connection between the Wireless Internet Frame and the power adapter.
The power turns on but the screen is blank.	The Wireless Internet Frame may be in sleep mode. Press [Mode] button to turn on the product
It takes some time to display an image.	<ol style="list-style-type: none"> 1. Loading an image from an external memory disk may take several seconds depending on the file format and photo resolution. 2. It is recommended that the maximum of one photo resolution is 12 Mega pixels. If the photo resolution is larger than 12 Mega pixels, it takes more time to load.
In Home Network, nothing displayed in "Home Network" of Photo Player / Media Player.	<ol style="list-style-type: none"> 1. Make sure your Wireless Internet Frame is connected to the same wireless network with your PC. 2. Make sure you have added some photos / Media files to your sharing center through Windows Media Player11 and have allowed the Wireless Internet Frame to visit them.(see the Photo Player -> Home Network part in the manual) 3. In Home Network, if the shared folders contain more files than the frame memory limit, it may not display the files on frame or it will display "Too many files". Please remove some files from shared folders.
I added a web photo account but the photos cannot be displayed on the Wireless Internet Frame.	<ol style="list-style-type: none"> 1. Make sure your Wireless Internet Frame has been connected to a network which can access Internet. 2. Make sure the link you added is correct. 3. Check whether the web photo link you added is RSS 2.0 format and the account is Picasa/ /Windows Live Space.
Some photos in my web account cannot be displayed.	<ol style="list-style-type: none"> 1. It may be related to your photo format and size. 2. We suggest the photo format is JPEG. 3. We suggest the maximum web photo resolution is 800 x 480 or below. If the resolution is larger than 800 x 480, it takes more time to download.
The Wireless Internet Frame cannot detect the U disk or memory card I inserted.	<ol style="list-style-type: none"> 1. Restart the Wireless Internet Frame. 2. Reinsert the U disk / memory card.

Symptom	Suggested Actions
	<ol style="list-style-type: none"> 3. Make sure your memory card is SD, MMC, MS, xD or CF. 4. Make sure the U disk or memory card has been inserted into the correct slot.
It takes some time to load the news	<ol style="list-style-type: none"> 1. Confirm the network strength you connected is strong enough. 2. Close the News application and open again.
The news feed cannot be refreshed successfully.	<ol style="list-style-type: none"> 1. Confirm your WiFi network can access internet. 2. Try to refresh again by selecting "Refresh" in the drop down menu. 3. Check whether the feed can be visited normally in your computer, if not, the Wireless Internet Frame cannot be displayed also, please contact the provider or wait for some time and try again.
The news feed I added can not be played.	Make sure the feed is in RSS 2.0 format.
If the video can not play smoothly.	Please make sure the video format is WMV or MPEG1 and the resolution less than or equal to 320X240, 25fps.
It may response slowly when connecting to the internet radio.	<ol style="list-style-type: none"> 1. Make sure the Wireless Internet Frame has been connected to a network which can access the internet, and the network is in a good status. 2. Make sure the internet radio format is supported.
The internet radio station may stop playing when network connection is good.	<ol style="list-style-type: none"> 1. Try to pause the playing and play again. 2. The digital photo frame needs some time to buffering the audio source, please be patient. 3. The buffering status is subject to station provider's server loading and network status. 4. Some radio stations do not broadcast 24 hours per day, and some stations are not always on-line. Please try again later.
If the internet radio connect fails.	<ol style="list-style-type: none"> 1. It may the internet radio server is shut down temporarily 2. Confirm your Wi-Fi network can access internet.
The internet radio I added cannot be played.	Make sure the format of the station is WMA, if not, the station cannot be supported.
In WiFi settings, when the user enter the correct network Key, but the unit can not be connected.	Check that your firewall is not blocking any outgoing ports. To configure the Access Port Control, you must read the instructions supplied with the wireless access point.

Notes:

-
1. Under the influence of electrical fast transient phenomenon, the product may malfunction and require user to power reset.
 2. Under the influence of electrostatic phenomenon, the product may malfunction and require user to power reset.
 3. Under the environment with Voltage Dips and Interruptions, the communication link of the sample may loss and require user to reset the sample.

