



 
## Owner's Manual

### Introduction

#### Making Life Easier and Safer

Staying in touch with your family and friends is convenient and easy when using your microTALK® radio. Some of the many uses you will discover include:

Communicating with others while hiking, biking, and working; keeping track of family and friends at a crowded public event; checking with travel companions in another car; talking with neighbors; arranging meeting spots with others while shopping at the mall.

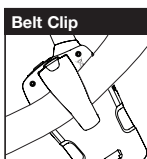

**Secure your microTALK® radio while on the go.**

Carrying your microTALK® radio with you is easy when using the belt clip or optional wrist strap.

The belt clip easily attaches to your belt, purse, or backpack.

### Customer Assistance

#### Product Service & Support

 
For any questions about operating this new Olympia branded product, PLEASE CONTACT US FIRST... do not return this product to the retail store. The contact information for support will vary depending on the country in which you purchased and utilize the product.

To obtain warranty service or other information for products purchased from us itself or through its authorized reseller or agent and utilized in the U.S.A., please call our consumer support line at **(866) 721-3805**. You will receive instructions on how to ship the products at your expense to an our Authorized Service Center. To obtain service, you must include: (a) a copy of your receipt, bill of sale or other comparable proof of purchase; (b) a written description of the problem; and, most importantly; (c) your address and telephone number.

For warranty and customer service information outside the US, please contact your local dealer.


### Introduction

#### Product Features

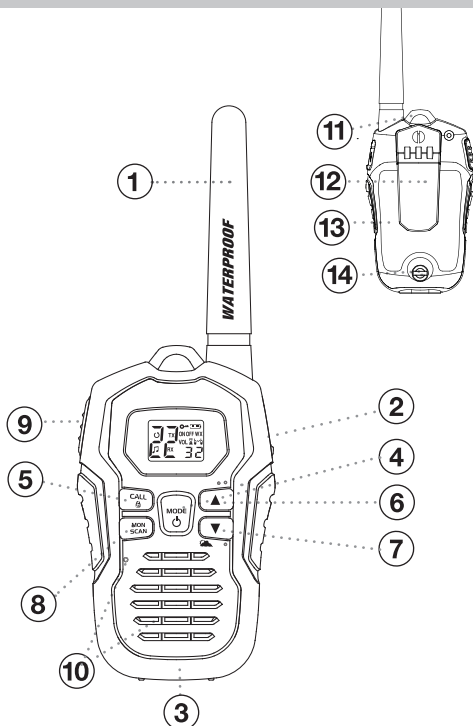

1. Antenna
2. External Speaker/Microphone Jack
3. Charge Jack
4. **Mode/Power** Button
5. **Call/Keypad** Button
6. **Up** Button
7. **Weather/Down** Button
8. **Monitor/Scan** Button
9. **Talk** Button
10. Speaker/Microphone
11. Wrist Strap Connection
12. Belt Clip
13. Battery Compartment
14. Battery Door Screw

#### LCD Display

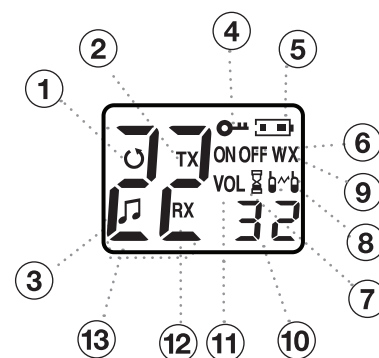 

1. Scan Icon
2. Transmitting Icon
3. Call Tone/Keypad Tone Icon
4. Keypad Lock Icon
5. Battery Meter Icon
6. On/Off for each feature Icon
7. Auto Power Off Icon
8. Roger Beep Icon
9. Weather Alert Icon
10. Privacy Code Numbers
11. Volume Icon
12. Receiving Icon
13. Channel Numbers



Maximum range may vary and is based on unobstructed line-of-sight communication under ideal conditions.

### Operation

#### Using Your Radio



##### Quick Start

1. Press and hold the **Mode/Power** button to turn on your radio.
2. Press once on the mode button to change channels.



Both radios must be tuned to the same channel / privacy code to communicate.

3. Press and hold the **Talk** button while speaking into the microphone.
4. When finished talking, release the **Talk** button and listen for a response.

#### Getting Started

**Waterproof** This radio is waterproof to IP54 standards. It is dust/splashproof from any direction. The radio is resistant to water and rain splashes only when the battery cover, headset accessory and micro-USB ports are sealed. Open the battery compartment door or headset port cover only when the radio is dry. Use of a headset accessory should be in dry environments only. The micro-USB cable and plug is not waterproof. Do not expose the charger to rain or snow. Charge the radios only in a dry location. The battery door must be tightly closed with the screw to maintain the weatherproof seal of the radio.

#### Installing NiMH Rechargeable Batteries

1. With the radio off. Ensure that the belt clip is not attached to the radio.
2. With the back of the radio facing you, loosen the retaining screw on the battery door and open the cover.
3. Remove the NiMH batteries from its packaging.
4. Insert the NiMH batteries with + and - polarity as shown inside the battery compartment. (The ribbon should be underneath the batteries and should wrap around the right side of the batteries for easy removal.)
5. Reposition the battery door onto the radio and tighten the screw.

#### Radio Battery Meter

The radio battery icon shows the radio battery charge level, from full to empty . When the radio has one segment left , the radio chirps periodically or after releasing the **Talk** Button. (see Low Battery Alert section)

#### Removing the NiMH or AA Alkaline Batteries

1. With the radio off. Ensure that the belt clip is not attached to the radio.
2. With the back of the radio facing you, loosen the retaining screw on the battery door and open the cover.
3. Remove the NiMH battery or Alkaline AA batteries by gently pulling the ribbon attached to the radio.
4. Reposition the battery door onto the radio and tighten the screw.

of other Olympia models, code 40 is same as CDCSS code 2, and so on.

To set the code for a channel:

1. Press twice until the code starts to flash.
2. Press or to select the code.
3. Press the **Talk** Button to save the code setting or to continue set up.

You can set a different code for each channel using this procedure. An extended press of or allows you to scroll through the Interference Codes rapidly so you can quickly reach the code you want.

**Note:** You must set the code to 0 on a radio that uses codes to communicate with radios that do not have Codes. Select 0 for "no tone, no code" and OFF will flash on the radio's display.

#### Setting and Transmitting Call Tones

The radio can transmit different call tones to other radios in your group so you can alert them that you want to talk. You have 10 call tones from which to choose.

To set a call tone:

1. With the radio on, briefly press until appears. The current call tone setting flashes.
2. Press or to change and hear the call tone.
3. Press the **Talk** Button to set the new call tone or to continue set up.

To transmit your call tone to other radios set to the same channel as the radio, press .

**Note:** Setting the call to 0 disables the call tone feature.

### Operation

#### Mode Functions

There are 6 options you may set to your preferences. Each press of the Mode key advances you to the next option setting. Press the or keys to change the setting. The menu will automatically close 5 seconds after the last press of any button. After the last menu item, the radio exits MENU mode and returns to operation of the radio. A press of the **Talk** button while setting any menu option will immediately save all your settings and return to operation of the radio.

1. Channel (1-22)
2. Codes
3. Call Tone (1-10 or OFF)
4. Roger Beep (ON/OFF)
5. Keypad Tones (ON/OFF)
6. Auto Power Off (30/60/90 minutes or OFF)

##### Selecting the Channel

The radio has 22 channels that are compatible with all brands of 2-Way radios. The channel is the frequency the radio uses to transmit. (See the **Channels and Frequencies** table) Channels are shared by other radio users and channel selection will vary based on your location. Select a channel that is not being used from the 22 available simplex channels:

1. Briefly press and release . The channel number flashes.
2. Press or to select a channel.
3. Press the **Talk** Button to confirm or to continue set up.

##### Selecting the Tone/Code

This radio has 121 code settings. When a channel is in use by 2 or more groups, this feature blocks the reception of signals that do not carry the matching tone or code. There are 121 privacy codes. 0 is the off position, no analog or digital codes are enabled and all users of that channel will be heard. Codes 1-38 are the standard analog (CTCSS) codes that appear on other radios. Codes 39-121 are 83 additional digital (CDCSS) codes added for superior interference protection. 0 is the off position. Code 39 is same as CDCSS code 1

#### Notes:

- Non-rechargeable Alkaline batteries can also be used in your radio.
- AA Alkaline batteries are optional accessories and are sold separately.
- Exercise care when removing NiMH or AA batteries. Do not use sharp or conductive tools to remove either of these batteries.
- Do not attempt to charge Alkaline batteries.
- Do not mix old and new batteries.
- Do not mix Alkaline, standard (carbon-zinc), or rechargeable(Ni-Cd, Ni-MH, etc) batteries.
- Use only the supplied rechargeable batteries and charger for recharging your Olympia radio
- Remove the batteries before storing the radio for extended periods of time. Batteries corrode over time and may cause permanent damage to the radio.
- The battery door must be tightly closed with the screw to maintain the water resistant seal of the radio.

#### Using the micro-USB Charging Connector

The micro-USB charging connector is a handy port that allows you to conveniently charge the rechargeable NiMH batteries. If using a computer, the computer must be turned on.

1. Plug the micro-USB cable or charger into a power source as is appropriate for your accessory.
2. Plug the cable into the micro-USB port on the bottom of the radio.
3. An empty battery will be fully charged in 14 hours.
4. The battery icon will scroll as the battery is being charged. The scrolling icon will stop when the battery is fully charged.

A-1

A-2

A-3

1

2

#### Notes

- Olympia recommends your radio is turned off while being charged.
- When moving between hot and cold temperatures, do not charge the NiMH battery until the battery temperature acclimates (usually about 20 minutes).
- For optimal battery life, remove the radio from the charger within 16 hours. Do not store the radio while connected to the charger.
- If the radio is kept on while charging, the charging time will be extended.
- Even though the charger is connected, you may not be able to transmit a message if the battery is completely empty . Allow time for the battery to charge to 1 bar before attempting to transmit a message.

#### Low Battery Alert

In addition to the battery meter which visually shows the current battery charge level, the Low Battery Alert feature produces an audible chirp when the batteries are low.

#### Attaching and Removing the Belt Clip

1. Align the belt clip post with the groove on the back of the radio and slide it into place.
2. Gently push until the clip clicks in place.

To remove:

1. Push down on the release tab at the top of the belt clip to release the latch.
2. Slide the belt clip away from the back of the radio.

#### Turning the Radio On and Off

In the ON position, the radio chirps and briefly shows all feature icons available on the radio. The display screen then shows the current channel, code and all features that are enabled.

1. To turn on, press and hold until a channel number appears and the radio beeps.
2. To turn off, press and hold until the display goes blank.

#### Setting the Volume

The radio has 16 volume levels controlled by the or .

1. Press to increase volume.
2. Press to decrease volume.
3. Hold or to rapidly increase or decrease volume.

Do not hold the radio close to your ear. If the volume is set to an uncomfortable level, it could hurt your ear.

3

4

5

6

7

8

