

Gigaset

S79H

Issued by

Gigaset Communications GmbH

Frankenstr. 2a, D-46395 Bocholt

Manufactured by Gigaset Communications GmbH

under trademark license of Siemens AG.

As of 1 Oct. 2011 Gigaset products bearing the trademark 'Siemens' will exclusively use the trademark 'Gigaset'.

© Gigaset Communications GmbH 2010

All rights reserved. Subject to availability.

Rights of modification reserved.

www.gigaset.com

GIGASET. INSPIRING CONVERSATION.
MADE IN GERMANY



SIEMENS

Gigaset S79H – more than just a telephone

Your telephone sets new standards for the way you communicate at home. The configuration and user interface of the cordless phone are excellent, providing you with first-class voice quality in speaker mode, while the USB port offers you enormous flexibility.

The large TFT display, user-friendly keypad and clearly laid out menu are very simple to use.

Your phone can do a whole lot more:

- ◆ You can synchronise the Directories on your telephone, mobile phone and PC via the USB port using the Gigaset QuickSync software (→ page 49).
- ◆ You can save appointments (→ page 35) and anniversaries, e.g., birthdays (→ page 30), in your phone and it will remind you of them in advance.
- ◆ You can designate important people as VIPs to identify important calls from the ringtone (→ page 28).
- ◆ You can assign a picture to entries in the Directory – in the future the picture will appear every time you receive a call from this number (→ page 28).
- ◆ If you do not want to take calls where the caller has withheld their number, just set your handset to only ring if Calling Line Identification (CID) has not been blocked (→ page 44).
- ◆ If you do not wish to be disturbed, you can simply set up a time control so that your phone will only ring when it is convenient (→ page 43). VIP calls are still connected during this time.
- ◆ You can assign important numbers to the number keys on your phone. The number is then dialed by simply pressing a key (→ page 40).
- ◆ Adapt your Gigaset to suit your handsfree requirements (→ page 43).
- ◆ View your personal pictures as a screensaver slide show (→ page 41).
- ◆ You can set the display to large font to increase readability in particularly important situations (e.g. the Directory and lists) (→ page 41).
- ◆ You can adapt the menu display to suit your individual requirements so that only the most important functions (**standard mode**) or all functions (**expert mode** ) display (→ page 24). Menu options that are only available in expert mode are marked with the  icon.
- ◆ Gigaset Green Home – Be environmentally aware when using your phone. Details about our ECO DECT products can be found at www.gigaset.com/customercare.

You can find additional information about your phone at www.gigaset.com/gigaset79h.

Have fun using your new phone!

The handset at a glance




- 1 **Display** in idle status
- 2 **Battery charge status** (→ page 14)
- 3 **Side keys**
Set call (→ page 42) or
ringtone volume (→ page 43)
- 4 **Display keys** (→ page 19)
- 5 **Message key** (→ page 33)
Access to Call and Message Lists;
Flashes: new message or new call
- 6 **End call key, On/Off key**
End call, cancel function, go back one menu
level (press briefly), back to idle status
(press and hold), activate/deactivate handset
(press and hold in idle status)
- 7 **Pound key**
Keypad Lock on/off (press and hold in
idle status);
Toggles between upper/lower case and digits
- 8 **MUTE key** (→ page 27)
Mute the microphone
- 9 **Microphone**
- 10 **FLASH key**
- Flashes: Consultation call
- Insert a dialing pause (press and hold)
- 11 **Star key**
Ringtone on/off (press and hold);
with an open connection: switch between
pulse dialing/tone dialing (press briefly);
text input: open table of special characters
- 12 **Headset connection** (→ page 16)
- 13 **Key 1**
Dial Network Mailbox (press and hold)
- 14 **Talk key**
Flashes: incoming call;
Accept a call; open Redial List (press briefly);
start dialing (press and hold)
- 15 **Speaker key**
Switch between earpiece and speaker mode
- 16 **Control key** (→ page 18)
- 17 **Signal strength** (→ page 14)
Green: Eco Mode (→ page 35) activated



Display symbols

The following symbols may display, depending on the settings and the operating status of your telephone:

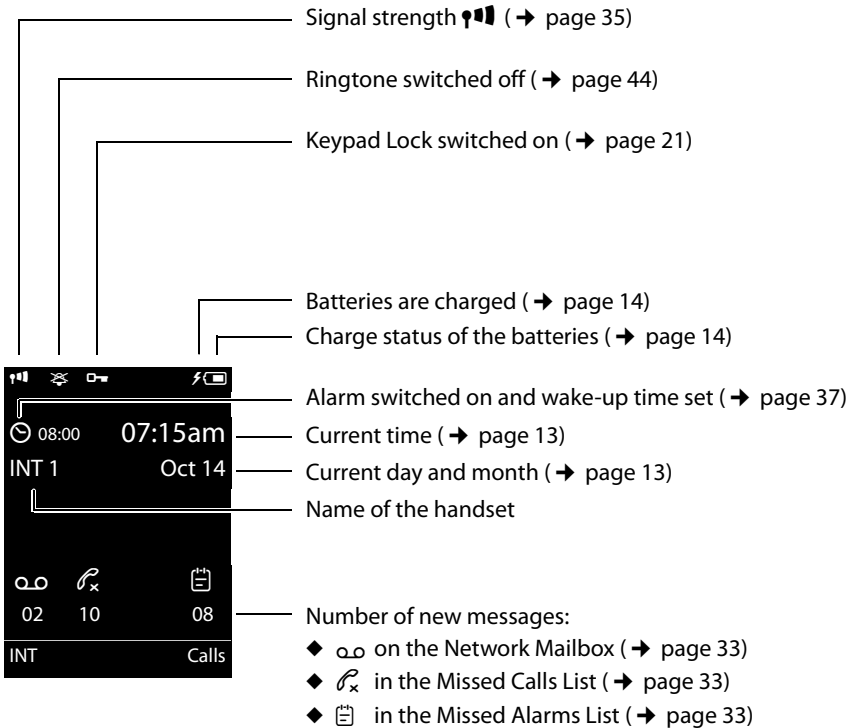

Signaling

External call (→ page 26)



Internal call (→ page 27)



Alarm (→ page 37)



Anniversary (→ page 36)



Appointment (→ page 36)



Contents

Gigaset S79H – more than just a telephone	1
The handset at a glance	2
Display symbols	3
Safety precautions	6
First steps	7
Checking the package contents	7
Setting up the charger	8
Connecting the charger	8
Setting up the handset	9
Registering the handset	11
Setting the date and time	13
Setting up area codes	15
Connecting the headset	16
Connecting the USB data cable	16
What would you like to do next?	17
Using the phone	18
Using the control key	18
Using the display keys	19
Using the keys on the keypad	19
Using the side keys	19
Correcting incorrect entries	19
Using the menus	20
Activating/deactivating the handset	21
Activating/deactivating Keypad Lock	21
Using this guide	22
Menu overview	24
Making calls	26
Making an external call	26
Ending a call	26
Accepting a call	26
Using speaker mode	27
Switching to mute	27
Making internal calls	27
Using the Directory and lists	28
Using the Directory	28
Using the Redial List	31
Using the Call Lists	32
Opening lists with the message key	33
Using the Missed Alarms List	33

Using the Network Mailbox	34
Configuring fast access for the Network Mailbox	34
Viewing the Network Mailbox message	34
ECO DECT	35
Setting an appointment (Calendar)	35
Displaying missed appointments, anniversaries	37
Setting the Alarm Clock	37
Using a handset as a Room Monitor	38
Setting up the handset	40
Quickly accessing numbers and functions	40
Changing the display language	41
Setting the display	41
Setting keypad illumination	42
Activating/deactivating Auto Answer	42
Changing the speaker/earpiece volume	42
Setting a handsfree profile	43
Changing ringtones	43
Using the Resource Directory	44
Activating/deactivating Advisory Tones	45
Setting long-distance and area codes	46
Restoring the handset default settings	46
Troubleshooting	47
Appendix	47
Caring for your telephone	47
Contact with liquid	47
Specifications	48
Writing and editing text	48
Accessing additional functions via the PC interface	49
Industry Canada Certification	51
FCC / ACTA Information	51
Safety precautions	53
Service (Customer Care)	54
End-user limited warranty	54
Accessories	57
Mounting the charger on the wall	57
Index	58

Safety precautions

Warning

Be sure to read this user guide and the safety precautions before using your telephone. Explain their content and the potential hazards associated with using the telephone to your children.



Use only the power adapter supplied, as indicated on the underside of the base.



Use only **rechargeable batteries** that correspond to the **specification provided on page 48**, as this could otherwise result in significant health risks and personal injury. Do not charge the handset in charging unit or base station while the headset is connected.



Using your telephone may affect nearby medical equipment. Be aware of the technical conditions in your particular environment, e.g., doctor's surgery.



Do not hold the rear of the handset to your ear when it is ringing or when speaker mode is activated. You risk serious and permanent damage to your hearing.

Your Gigaset is compatible with the majority of digital hearing aids on the market. However, perfect function with all hearing aids cannot be guaranteed.

The handset may cause an unpleasant humming or whistling noise in hearing aids or cause them to overload. For assistance, please contact the hearing aid supplier.



Do not install the charger in bathrooms or shower rooms. The charger is not splash-proof (→ page 47).



Do not use your phone in environments with a potential explosion hazard (e.g., paint shops).



If you give your telephone to a third party, make sure you also give them the user guide.



Remove faulty bases from use or have them repaired by our Service, as they could interfere with other wireless services.

Please note

Not all of the functions described in this user guide are available in all countries.

First steps

Checking the package contents



- 1 One Gigaset S79H handset
- 2 Two batteries
- 3 One battery cover
- 4 One charger
- 5 One power adapter
- 6 One belt clip
- 7 One plastic headset connection cover
- 8 One user guide

Setting up the charger

The charger is designed for use in dry rooms in a temperature range of +41°F to +113°F.

- ▶ Place the charger on a level, non-slip surface or mount it on the wall (→ page 57).

Please note

Pay attention to the range of the base.


This is up to 984 feet in unobstructed outdoor areas and up to 165 feet inside buildings. The range is reduced when Eco Mode (→ page 35) is activated.

The phone's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on today's furnishings, the occurrence of marks on the surfaces cannot be completely ruled out.

Please note:


- ◆ Never expose the telephone to the influence of heat sources, direct sunlight or other electrical devices.
- ◆ Protect your telephone from moisture, dust, corrosive liquids and fumes.

Connecting the charger

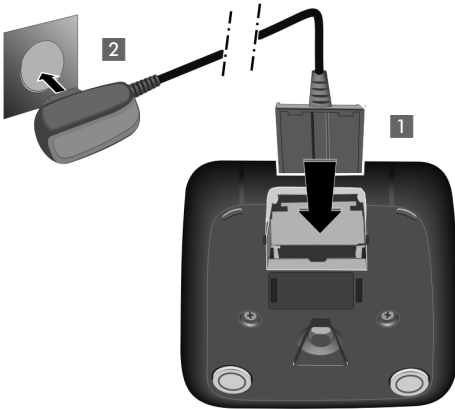

- ▶ Connect the flat plug from the power adapter **1**.
- ▶ Plug the power adapter into the plug socket **2**.

To disconnect the plug from the charger, press the release button **1** and disconnect the plug **2**.

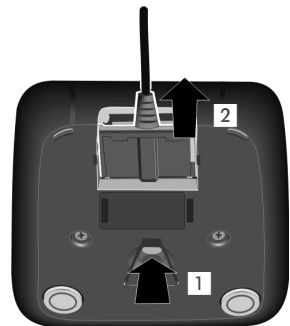

Setting up the handset


The display and keypad are protected by plastic films.
Remove the protective films!

Inserting the batteries and closing the battery cover

Warning


Use only rechargeable nickel-metal hydride (NiMH) UL-approved AAA batteries. Never use a conventional (non-rechargeable) battery, as this could result in significant health risks and personal injury. For example, the outer casing of the batteries could be damaged or the batteries could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type.

- ▶ Insert the batteries with the polarity in the correct direction. The polarity is indicated in/on the battery compartment.

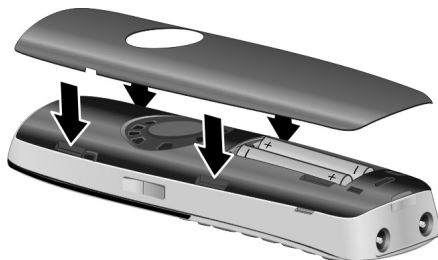

- ▶ First insert the battery cover at the top (a).
- ▶ Then press the cover (b) until it clicks into place.

To open the battery cover, for instance to replace the batteries, insert a coin into the cavity on the left-hand side of the casing, then pull the battery cover in an upward direction.

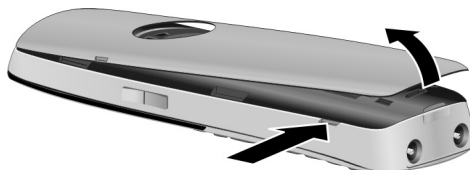

First steps


- ▶ Insert the plastic cover provided for the headset socket to ensure optimum sound in speaker mode.



Attaching the belt clip

The handset has notches on each side to attach the belt clip.

- ▶ **To attach** – press the belt clip onto the back of the handset so that the protrusions on the belt clip engage with the notches.
- ▶ **To remove** – press the center of the belt clip firmly with your right thumb, push the fingernail of your left index finger up between the clip and the housing and pull the clip in an upward direction.

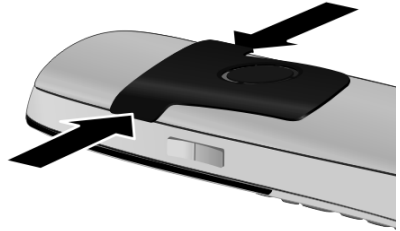

Placing the handset in the charger

- ▶ Place the handset in the charger with its **display facing forward**.

To charge the batteries, leave the handset in the charger.

Please note

Only place the handset in the charger included with the handset that is intended for it.

Registering the handset

A Gigaset S79H handset can be registered on up to four bases. You must initiate handset registration on the handset (1) and on the base (2).

When the registration process has completed successfully, the handset returns to idle status. The handset's internal number is shown in the display, e.g., **INT 1**. If not, repeat the procedure.

1) On the handset



- ▶ Press the key below **Register** on the display screen.

A message appears stating that the handset is searching for a base that is ready for registration.

Please note

If the handset is already registered **to at least one base**, start the registration process as follows:

 →  → **Registration** → **Register Handset**

If the handset is already registered to **four bases**, select the required base.

2) On the base


Within 60 sec. press and **hold** the registration/paging key on the base (approx. 3 sec.).

Please note

For instructions on deregistering the handsets, please consult the base user guide.

Initial charging and discharging of the batteries

The correct charge level can only display if the batteries are first fully charged **and** discharged.

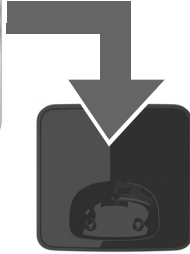

▶ Charge the handset for **8.5 hours** in the charger.



▶ Then remove the handset from the charger and do not replace it until the batteries are fully discharged.

Please note

- ◆ After the first battery charge **and** discharge, you may place your handset in the charger after every call.
- ◆ Always repeat the charging and discharging procedure if you remove the batteries from the handset and reinsert them.
- ◆ The batteries may warm up during charging. This is not dangerous.
- ◆ After a while, the charge capacity of the batteries will decrease for technical reasons.

Setting the date and time

Set the date and time so that the correct date and time can be assigned to incoming calls, and so that the alarm can be used.



- ▶ Press the key below **Time** on the display to open the input field.
If you have already set the time and date, open the input field via the menu (→ page 25.)



The **Date/Time** submenu displays.


- ▶ The active input position flashes.
Enter the month, day and year as an 8-digit number via the keypad, e.g.,

1	0	1	4
OPR	OPR	OPR	CHI



2	0	0
ABC	OPR	OPR

9
WXYZ

 for 10/14/2009.

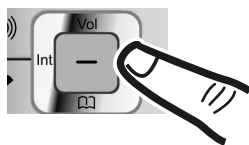

Press the **right** or **left** control key to change the input position and correct an entry.

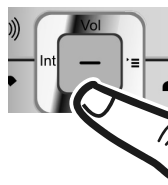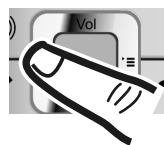

- ▶ Press **down** on the control key to switch to the Time input field.

- ▶ When you switch to time entry, the Back display key turns to AM/PM. Enter the hours and minutes as four digit numbers via the keypad, e.g.,


0	7	1	5
OPR	PRS	OPR	JKL

 for 07:15 am. If necessary, press the AM/PM display key to change the time setting from AM to PM. Change the input position with the control key if necessary.





► Press the key below **Save** on the display to confirm your entry.

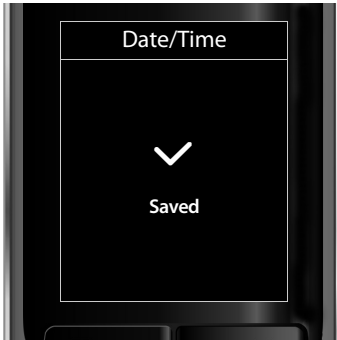

The display shows **Saved**. You will hear a confirmation tone and the handset automatically returns to idle status.

Display in idle status

After registering the phone and setting the time, the idle status shows as in this example.

Displays

◆ Reception between the base and the handset:

- Poor to good: 📶 📶 📶 📶 📶
- No reception: 📶 flashes


Green: Eco Mode (→ page 35)

◆ Charge status of the batteries:

- 🔋 🔋 🔋 🔋 (empty to full)
- 🔋 flashes red: batteries almost empty
- 🔌 🔋 🔌 🔋 🔌 🔋 (charging)

◆ INT 1

Internal name of the handset

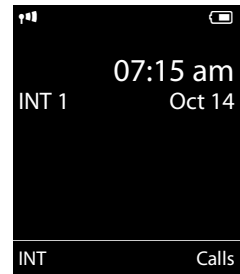

Your phone is now ready to use!

Setting up area codes

Before you can return a call from the Calls list (→ page 32), you must store the local area code of the area in which your phone is being used. If your phone is in a multiple area code area, you must also store the extra codes for that area.

Local Area Code

 →  → Telephony → Local Area Code



Enter the local area code.



Press the Display key.



When the Saved message displays, press and hold to return to idle status.

Extra Codes

 →  → Telephony → Extra Codes



Enter the extra code.



Press the Display key.



When the Saved message displays, press and hold to return to idle status.

Repeat the above steps until all the extra codes have been entered for your area. A maximum of five (5) extra codes can be stored.

Connecting the headset



After removing the plastic cover, you can connect a headset to the left-hand side of your handset with the 2.5 mm jack connector.

See the relevant product page at www.gigaset.com for information on recommended headsets.

The headset volume corresponds to the settings for the handset volume (→ page 42).

After using the headset, replace the plastic cover to enable optimum sound in speaker mode.

Warning

Do not charge the handset in charging unit or base while the headset is connected.

Connecting the USB data cable

To connect the handset to a PC, you can connect a standard USB data cable with a mini-B connector to the back of your handset (→ page 49).

- ▶ Remove the belt clip (if attached) (→ page 10).
- ▶ Remove the battery cover (→ page 9).
- ▶ Connect the USB data cable to a USB socket **1**.



Please note

Please connect your handset **directly** to the PC; do **not** connect via a USB hub.

What would you like to do next?

Now that you have successfully set up your phone, you will certainly want to adapt it to your personal requirements. Use the following guide to quickly locate the most important subjects.


 
If you are unfamiliar with menu-driven devices such as other Gigaset telephones, read the section entitled "Using the phone" first (→ page 18).


Information about go to...
Setting the ringtone and volume	page 43
Setting the earpiece volume	page 42
Setting Eco Mode	page 35
Transferring Directory entries from existing Gigaset handsets to new handset(s)	page 30
Connecting the phone to the PC	page 49

If you have any questions about using your phone, please read the tips on troubleshooting (→ page 47) or contact our Customer Care team (→ page 54).

Using the phone




Using the control key

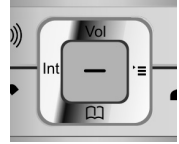The side of the control key that you must press in the respective operating situation is marked in black below (top, bottom, right, left, center), e.g.,  for "press right on the control key" or  for "press the center of the control key".







The control key has a number of different functions:

When the handset is in idle status

-  Open the Directory.
-  Open the main menu.
-  Open the Handsets list.







In the main menu

-    or 
- Navigate to the required function.




In submenus and lists

-  /  Scroll up/down line by line.

In input fields

Use the control key to move the cursor up , down , right  or left . Press and hold  or  to move the cursor **word by word**.

During an external call

-  Open the Directory.
-  Initiate an internal consultation call.
-  Adjust the volume for earpiece and speaker mode.

Functions when pressing the middle of the control key

Depending on the operating situation, the key has different functions.


- ◆ **In idle status**, the key opens the main menu.
- ◆ **In submenus, selection and input fields**, the key takes on the function of the display keys **OK**, **Yes**, **Save**, **Select** or **Change**.

Please note

These instructions demonstrate the main menu being opened by pressing the right of the control key and functions being actuated by pressing the appropriate display key. However, if you prefer, you can use the control key as described above.

Using the display keys

 

 

The functions of the display keys change depending on the particular operating situation. Example:

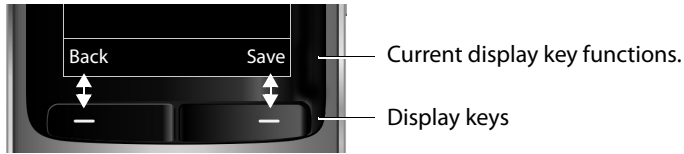



Some important display keys:

Options	Open a menu for further functions.
OK	Confirm selection.
< C	Delete key: delete character by character/word at a time from right to left.
Back	Go back one menu level or cancel operation.
Save	Store entry.
Redial	Open the Redial list.

Using the keys on the keypad

-  /  /  etc.
Press the matching key on the handset.
-  Enter digits or letters.

Using the side keys

-  /  Press the keys on the right of the handset to set the volume for the **handset, ringtone, speaker, alarm**, signaling of **appointments** and the **headset** depending on the situation.


Correcting incorrect entries


You can correct characters in the input fields by navigating to the incorrect entry using the control key. You can then:

- ◆ Delete the **character** to the left of the cursor with the display key or delete the entire word by pressing and holding **< C**
- ◆ Insert characters at the cursor position
- ◆ Overwrite the highlighted (flashing) character, e.g., when entering time and date.

Using the menus


You can access your telephone's functions using a menu that has a number of levels.

The menu display can be complete (**expert mode** ) or restricted (**standard mode**). Expert mode is the default setting.

Settings or functions that are only available in expert mode are marked in these instructions with the  icon.


For more information regarding "switching" between standard mode/expert mode and Menu Overview, please refer to page 24 (→ page 24).

Main menu (first menu level)


- ▶ When the handset is in idle status, press the **right** control key  to open the main menu.

The main menu functions display with icons. The icon for the selected function is highlighted and the name of the associated function appears in the display header.

To access a function, i.e., to open the corresponding submenu (next menu level):

- ▶ Use the control key  to select the required function and press the display key **OK**.


Briefly press the display key **Back** or the end call key  to revert back to idle status.

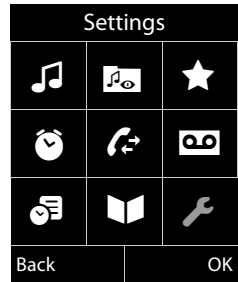


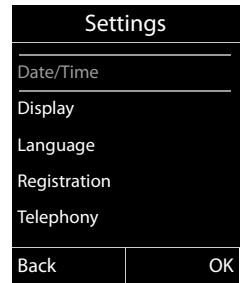
Submenus

The functions in the submenus are displayed as lists (as shown on the right).

To access a function:


- ▶ Scroll to the function with the control key  and press **OK**.

Briefly press the display key **Back** or the end call key  to return to the previous menu level/cancel the operation.



Reverting to idle status

You can revert to idle status from anywhere in the menu as follows:

- ▶ Press and **hold** the end call key .

or:

- ▶ Do not press any key: after 2 minutes the display will **automatically** revert to idle status.

Settings that have not been saved by selecting the display keys **OK**, **Yes**, **Save** or **Change** are lost.

For an example of the display in idle status (→ page 14).

Activating/deactivating the handset



With the phone in idle status, press and **hold** the end call key (confirmation tone) to switch off the handset.

Press and **hold** the end call key again to switch the handset on.

Please note

When the handset is switched on, an animation showing the **Gigaset** logo displays for several seconds.

Activating/deactivating Keypad Lock

Keypad Lock prevents any unauthorized or accidental use of the phone.



Press and **hold** the pound key in idle status to activate or deactivate Keypad Lock. You will hear the confirmation tone.

If Keypad Lock is activate, you will see a message when you press a key.

Keypad Lock deactivates automatically when you receive a call. It is reactivated when the call is finished.

Please note

When Keypad Lock is active, you cannot call emergency numbers.

Emergency numbers cannot be dialed if the keypad lock is activated!

Using this guide


The operating steps are shown in abbreviated form.


Example:

The illustration:


 →  → **Display** → **Large Font** (☑ = on)

means:

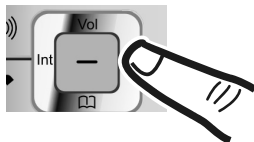


- ▶ Press **right** on the control key  to open the main menu.



- ▶ Press right, left, down and up on the control key  to navigate to the **Settings** submenu.


- ▶ Press the display key **OK** to confirm your selection.



- ▶ Press down on the control key  until the **Display** menu option appears on the display.

- ▶ Press the display key **OK** to confirm your selection.




- ▶ Press down on the control key  until the **Large Font** menu option appears on the display.

- ▶ Press the display key **Change** to activate/deactivate the function.





The change is effective immediately and does not need to be confirmed.



- ▶ Press the key below **Back** on the display to jump back to the previous menu level.
- or
- Press and **hold** the end call key  to return to idle status.

Menu overview




Setting standard mode or expert mode

The menu display can be Complete (**expert mode** ) or Simplified (**standard mode**). Menu options that are only available in expert mode are marked with the  icon.

To change these settings:

Select  →  → **Menu View** → **Simplified** (standard mode) or **Complete** (expert mode) → **Select** (the active mode is marked with )

To open the main menu: Press  when the phone is in idle mode.

 Audio Settings	Handset Volume	→ page 42
	Handsfree Profiles	→ page 43
	 Advisory Tones	→ page 45
	Ringtones(Handset)	→ page 43
	Ringtones (Base)*	(dependent on base)
	 Music on Hold	(dependent on base)

Resource Directory

Screensavers	→ page 45
Caller Pictures	→ page 45
Sounds	→ page 45
Capacity	→ page 45

Additional Features

Room Monitor	→ page 38
--------------	-----------

 Alarm Clock	→ page 37
---	-----------

Call Lists

All Calls	→ page 32
Outgoing Calls	→ page 32
Accepted Calls	→ page 32
Missed Calls	→ page 32




Voice Mail (Menu dependent on base)

Organizer

Calendar	→ page 35
Missed Alarms	→ page 37

Directory → page 28

 Settings

Date/Time	→ page 13
Display + Keypad	Screensaver → page 41
	Large Font → page 41
	Color Schemes → page 41
	 Display Backlight → page 42
	Keypad Illumination → page 42
Language	→ page 41
Registration	Register Handset → page 11
	De-reg. Handset (dependent on base)
	Select Base → page 11
 Telephony	Auto Answer → page 42
	(further submenus dependent on base)
 System	Local Area Code
	Handset Reset → page 46
	(further submenus dependent on base)
Menu View	Simplified → page 24
	Complete → page 24
Eco Mode	Eco Mode (dependent on base)

Making calls

If the backlight is deactivated (→ page 42) it is switched on by pressing any key. In this case the pressed key has no other function.

Making an external call

External calls are calls using the public telephone network.



Enter the number and press the talk key.

or:



Press and **hold** the talk key and then enter the number.

You can cancel the dialing operation with the end call key.

You are shown the duration of the call while the call is in progress.

Please note

Dialing with the Directory (→ page 28), Call List (→ page 32), Redial List (→ page 31) and Automatic Redial (→ page 31) saves you from repeatedly keying in phone numbers.

Ending a call



Press the end call key.

Accepting a call

The handset indicates an incoming call in three ways: by ringing, by a display on the screen and by the flashing talk key.

Accept the call by:

- ▶ Pressing the talk key.
- ▶ Pressing the speaker key.
- ▶ Press the **Accept** display key.

If the handset is in the charger and the **Auto Answer** function is activated (→ page 42), the handset automatically answers the call when you remove it from the charger.

To deactivate the ringtone, press the **Silence** display key. You can accept the call as long as it displays on the screen.

Using speaker mode

In speaker mode, instead of holding the handset to your ear you can put it down, for example on the table in front of you. This allows others to participate in the call.

Activating/deactivating speaker mode

Activating while dialing



Enter the number and press the speaker key.

- ▶ Inform your caller before you use the speaker function so that they know a third party may be listening.


Switching between earpiece and speaker mode



Press the speaker key.

Activate/deactivate speaker mode during a call.

To place the handset in the charger during a call:

- ▶ Press and hold the speaker key  while placing the handset in the base/charger and for a further 2 seconds.

For instructions on adjusting the speaker volume (→ page 42).

Please note

If you have a headset connected, you can switch between the headset and speaker mode.

Switching to mute


 
You can deactivate the microphone in your handset during an external call.



Press key to mute the handset. The display shows **Microphone is off**.

Press the key again to unmute the microphone.

Please note

- ◆ If the telephone is muted, all keys except the MUTE key  and the end-call key  will not work.
- ◆ A connected headset will also be muted.

Making internal calls

Internal calls to other handsets registered on the same base are free.

Calling a specific handset



Initiate internal call.



Enter the number of the handset.

or:



Initiate internal call.



Select handset.



Press the talk key.

Calling all handsets ("group call")



Press and hold.

or:



Initiate internal call.



Press the star key.

or

Call All

Select



Press the talk key.

All handsets are called.

Ending a call



Press the end call key.

Using the Directory and lists

The options are:

- ◆ Directory
- ◆ Redial List
- ◆ Call Lists
- ◆ Missed Alarms List

You can create a personalized Directory for your own handset. You can also send lists/entries to other handsets (→ page 30).

Using the Directory

You can save up to 500 entries in the Directory.


Please note

To quickly access a number from the Directory, (Quick Dial), you can assign the number to a key (→ page 40).

Directory

In the **Directory**, you can save:

- ◆ For each directory entry, one first name, one surname, and up to three telephone numbers.
- ◆ E-mail addresses
- ◆ Anniversaries with reminder
- ◆ VIP ringtone with VIP icon
- ◆ Caller Pictures (CID pictures)

Open the Directory in idle status using the  key.

Length of the entries

3 numbers: each max. 32 digits
First name and surname: each max. 16 characters
E-mail address: max. 64 characters

Saving a number in the Directory

 → <New Entry>

▶ You can enter data in the following fields:

First Name: / Last Name:


 

Enter first names and/or surnames.

If both name fields are left blank, the telephone number displays as the surname. (For instructions on entering text and special characters.) (→ page 48)

Phone (Home): / Phone (Office): /

Phone (Mobile):

Enter a number in at least one of the fields.

When scrolling through the Directory, the entries are highlighted by a prefixed symbol:  /  / .

E-Mail:

Enter the e-mail address.

Anniversary:

Select **On** or **Off**.

With setting **On**:

Enter **Anniversary Date** and **Anniv.**

(**Time**) and select reminder type: **Anniv. (Signal)** (→ page 30).

Caller Picture:


If required, select a picture to be displayed when this person calls (see Using the Resource Directory, page 44).

Prerequisite:

Caller ID service subscription.


Caller Melody (VIP):

Mark a Directory entry as a **VIP** (Very Important Person) by assigning a specific ringtone to it. VIP calls are recognised by the ringtone.

When scrolling through the Directory, VIP entries are highlighted by the  icon.

Prerequisite:

Caller ID service subscription.

 Press the display key.

Order of Directory entries

Directory entries are generally sorted alphabetically by surname. Spaces and digits take first priority. If only the first name was entered in the Directory, this is incorporated into the sort order instead of the surname.

The sort order is as follows:



1. Space
2. Digits (0–9)
3. Letters (alphabetical)
4. Other characters

To force an entry to appear at the beginning of the list, insert a space or digit in front of the first letter of the surname.

Selecting a Directory entry



 Open the Directory.




You have the following options:

- ◆ Use  to scroll through the entries until the required name is selected.
- ◆ Enter the first letters of the name (max. 8), if necessary scroll to the entry with the  key.

The Directory searches for the surname. If a surname has not been entered, the Directory searches for the first name.



Selecting from the Directory

 →  (Select entry)

 Press the talk key.
(If several numbers are entered, select the required number by pressing  and press the talk key  again).
The number is dialed.


Managing Directory entries

Viewing entries


 →  (Select entry)

View Press the display key. The entry displays.

Options Press the display key.

The following functions can be selected with :

Display Number

To edit or add to a saved number, or to save it as a new entry, press  after the number displays.



Delete Entry

Delete selected entry.

Copy Entry

to Internal: Send a single entry to a handset (→ page 30).



Editing entries

 →  (Select entry)


View Edit Press the display keys one after the other.

- ▶ Make the necessary changes and save.



Using other functions

 →  (Select entry)

→ **Options** (Open menu)

The following functions can be selected with :

Display Number

Edit or add to a saved number and then dial with  or save as a new entry; to do so, press  after the number displays.

Edit Entry

Edit selected entry.

Delete Entry

Delete selected entry.

Copy Entry

to Internal: Send a single entry to a handset (→ page 30).

Delete All

Delete **all** entries in the Directory.

Copy All

to Internal: Send the complete list to a handset (→ page 30).

Available Memory

Display the number of entries that are still available in the Directory (→ page 28).



Using Quick Dial keys


- ▶ Press and hold the required Quick Dial key (→ page 40).

Transferring the Directory to another handset

Prerequisites:

- ◆ The sending and receiving handsets must both be registered to the same base.
- ◆ The other handset and the base can send and receive Directory entries.

 →  (Select entry) → **Options**
(Open menu) → **Copy Entry / Copy All**
→ **to Internal**

 Select the internal number of the receiving handset and press **OK**.

You can transfer several individual entries one after the other by responding to the **Entry copied - Copy next entry?** prompt with **Yes**.

A successful transfer is confirmed by a message and confirmation tone on the receiving handset.

Please note:

- ◆ Entries with identical numbers are not overwritten on the receiving handset.
- ◆ The transfer is cancelled if the phone rings or if the memory of the receiving handset is full.
- ◆ Pictures and sounds assigned to entries are not transferred.

Copying the displayed number to the Directory

You can copy numbers displayed in a list, e.g., the Call List or the Redial List, to the Directory.

If you have CID, the first 16 characters of the transmitted name are also copied to the **Last Name** line.



A number displays:


Options → **Copy to Directory**

- ▶ Complete the entry (→ page 28).

Copying a number or e-mail address from the Directory



In some operating situations, you can open the Directory to copy a number or e-mail address, for example. Your handset need not be in idle status.

- ▶ Depending on the operating situation, open the Directory with  or .


 Select entry (→ page 29).


Storing an anniversary in the Directory

For each number in the Directory, you can save an anniversary and specify a time at which a reminder call should be made on the anniversary (default setting: **Anniversary: Off**).

 →  (Select entry)

View Edit Press the display keys one after the other.

 Scroll to the Anniversary line.

 Select **On**.

- ▶ You can enter data in the following fields:

Anniversary Date

Enter day/month/year in 8-digit format.

Anniv. (Time)

Enter the hour/minute for the reminder call in 4-digit format.

Anniv. (Signal)



Select the reminder type.

Save Press the display key.


Please


You must specify a time for reminder calls. The exception is when you select a visual signal, which automatically sets the time to 00.00.

Deactivating anniversaries

 →  (Select entry)

View **Edit** Press the display keys one after the other.


 Scroll to the Anniversary line.

 Select **Off**.

Save Press the display key.



Scheduling a reminder call on an anniversary

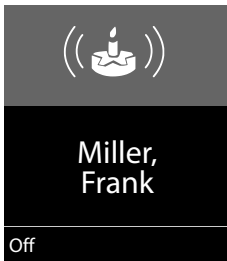In **idle status**, a reminder call is indicated on the handset display and by the selected ringtone and volume that has been set for internal calls (→ page 43).



You can:

Off Press the display key to acknowledge and end the reminder call.

During the reminder call, you can permanently change the volume by pressing the side keys  (louder) or  (quieter).


When you are on the phone, a reminder call is indicated on the handset with a **single** advisory tone.


Anniversaries that are indicated during a call and are not acknowledged are entered in the **Missed Alarms** List (→ page 33).


Using the Redial List

The Redial List contains the twenty numbers last dialed with the handset (max. 32 digits). If one of the numbers is in the Directory, the corresponding name displays.

Using manual redial


 Press the key **briefly**.


 Select entry.

 Press the talk key again.
The number is dialed.


When a name displays, you can display the corresponding phone number by pressing the display key **View**.

Managing entries in the Redial List

 Press the key **briefly**.

 Select entry.

Options Open menu.


The following functions can be selected with :

Copy to Directory

Copy an entry to the Directory (page 28).

Automatic Redial

The selected number is automatically dialed at fixed intervals (at least every 20 seconds). The speaker key flashes and "open listening" is activated.

- Party answers:
Press the talk key . The function is terminated.
- Party does not answer:
The call is terminated after approx. 30 seconds. The function is terminated after pressing any key or after ten unsuccessful attempts.

Display Number (as in the Directory, page 29)

Delete Entry (as in the Directory, page 29)

Delete All (as in the Directory, page 29)

Using the Call Lists

Prerequisite: Caller ID service subscription (CID).

Your telephone stores various types of calls:

- ◆ Accepted Calls
- ◆ Outgoing Calls
- ◆ Missed Calls

You can view each type of call separately or gain an overview of all calls. Each call record contains the last 20 numbers in its category.

When in idle status, open the Call Lists by selecting the **Calls** display key or via the menu:



Viewing a list entry

New messages are displayed at the top.

Example of list entries:

All Calls	
Frank	
10/14/09, 5:40pm	
9725551234	
10/14/09, 5:32pm	
...15125551234	
10/14/09, 5:07pm	
View	Options

- ◆ List type (in header)
- ◆ Status of entry
Bold: new entry
- ◆ Number or name of caller
- ◆ Date and time of call (if set, page 13)
- ◆ Type of entry:
 - Accepted Calls ()
 - Missed Calls ()
 - Outgoing Calls ()

Press the talk key to call the selected caller back.

Select the **View** display key to access additional information, including for example the number linked to the name. If you have CID, then the name and town/city that is registered with your network provider for this number displays. If the name and town/city are not shown, it means that the caller has not requested CID or that CID has been withheld.

Select the **Options** display key to select the following options:

Copy to Directory

Copy the number to the Directory.

Delete Entry

Delete selected entry.

Delete All


Delete all entries.




When you quit the Call Lists, all entries are set to the status "old", i.e., the next time you call up the list, they will no longer be shown in bold.

Opening lists with the message key

Use the message key  to open the following list selection:

- ◆ Answering Machine List (dependent on base) or Network Mailbox, if your network provider supports this function and fast access is set for the Network Mailbox (→ page 34).
- ◆ Missed Calls List
- ◆ Missed Alarms List (→ page 33)

An advisory tone sounds as soon as a **new message** arrives in a list. The  key flashes (it goes off when the key is pressed). In **idle status**, the display shows an icon for the new message:


Icon	New message...
	... on the Network Mailbox
	... in the Missed Calls List
	... in the Missed Alarms List

The number of **new** entries displays under the corresponding icon.

		
02	10	08

Please note

If calls are saved in the Network Mailbox, you will receive a message if the appropriate settings have been made (see your network provider user guide).

After pressing the message key , you can see all lists containing messages and the Network Mailbox List.


Lists containing new messages are at the top of the list and are marked in a bold font.

Messages & Calls	
Calls:	(3)
Missed Alarms	(1)
Back	OK

Select a list with . To open, press **OK**.

Using the Missed Alarms List

Missed (unacknowledged) appointments from the Calendar (→ page 35) and anniversaries (→ page 30) are saved in the **Missed Alarms** List under the following circumstances:

- ◆ You do not accept an appointment/anniversary.
- ◆ The appointment/anniversary was signaled during a phone call.
- ◆ The handset is deactivated at the time of the appointment/anniversary.
- ◆ Automatic Redial was activated at the time of an appointment/anniversary (→ page 31).
- ◆ Open the list by pressing the **message key**  (→ page 33).

Each entry displays with:

- ◆ Number or name
- ◆ Date and time

The most recent entry is at the head of the list.

Press the display key **Delete**, to delete the selected entry.

If ten entries are already stored in the list, the next appointment reminder will delete the oldest entry.

Using the Network Mailbox

The Network Mailbox is your network provider's Answering Machine within the network. You cannot use the Network Mailbox unless you have **requested** it from your network provider.


Configuring fast access for the Network Mailbox

With fast access, you can dial the Network Mailbox directly.

Fast access is set for the Network Mailbox. You only need to enter the number of the Network Mailbox.

Configuring fast access for the Network Mailbox and entering the Network Mailbox number

Bases **with** an Answering Machine:

 →  → **Set Key 1**

Network Mailbox

Select **Network Mailbox** and press **Select** (● = selected).

Bases **without** an Answering Machine:

 →  → **Network Mailbox**

To continue:

 




Enter the number for the Network Mailbox.

Save Press the display key.

The setting for fast access applies to all Gigaset S79H handsets.

Calling the Network Mailbox

 Press and **hold**. You are connected directly to the Network Mailbox.

 Press speaker key  if required. You will hear the Network Mailbox announcement.

Viewing the Network Mailbox message

When a message is recorded, you receive a call from the Network Mailbox. If you have requested Calling Line Identification, the Network Mailbox number displays. If you accept the call, the new messages are played back. If you do not accept the call, the Network Mailbox number is saved in the Missed Call List and the message key flashes (→ page 33).

Please note

Enter the Network Mailbox phone number into your Directory along with the designation "Network Mailbox"; the display and the Call List will then show this designation.

ECO DECT

You are helping to protect the environment with your Gigaset handset.

Reducing energy consumption

By using an energy-saving power supply, your telephone consumes less power.

Reducing radiation (dependent on base)

The radiation can only be reduced if your base supports this function.

The transmission power of your telephone is **automatically** reduced depending on the distance to the base.

You can reduce the radiation of the handset and base even further by using **Eco Mode** or **Eco Mode+**. For further information, please refer to your base user guide.


Setting an appointment (Calendar)

You can use your handset to remind yourself of up to **30 appointments**. Anniversaries (→ page 30) entered in the Directory are automatically recorded in the Calendar.

Saving an appointment

Prerequisite: The date and time have already been set (→ page 13).

 →  → Calendar

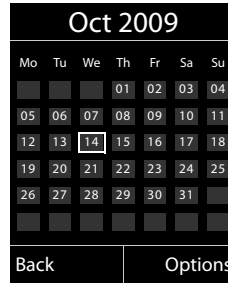

- ◆ The current day is selected (highlighted in white).
- ◆ Days on which appointments have already been saved are highlighted in white.



Select the required day in the graphical calendar.

The selected day is highlighted in white. The current day is no longer highlighted.



Press the center of the control key.

- ◆ If appointments have already been entered, this will open the list of saved appointments on that day. Select **<New Entry>** → **OK** to open the data input window.
- ◆ If no appointments have been entered, the data input window will open immediately to add the new appointment.

Setting an appointment (Calendar)

- ▶ You can enter data in the following fields:

Activation:

Select **On** or **Off**.

Date:

Enter day/month/year in 8-digit format.

Time:

Enter hours/minutes in 4-digit format, then select AM/PM.

Text:

Enter text (max. of 16 characters). The text appears as the appointment name in the list and displays on the screen during the appointment reminder. If you do not enter any text, only the date and time of the appointment are displayed.

Signal:

Select the reminder type.



Save

Press the display key.


Please note

If you have already saved thirty appointments, you will need to delete an existing appointment before adding a new one.

Signaling appointments and anniversaries

An appointment reminder is signaled in idle status for 60 seconds with the selected ringtone at the volume that has been set for internal calls (→ page 43). **During the reminder call**, you can permanently change the volume by pressing the side keys  (louder) or  (quieter).

The name displays for anniversaries, while the entered text displays for appointments along with the date and time.

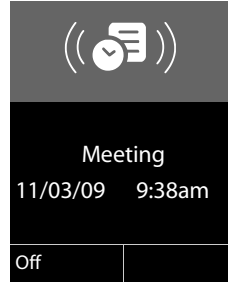

You can either deactivate or answer an appointment reminder:



Off

Press the display key to deactivate the appointment reminder.

Please note


During a call, the appointment reminder is only signaled by a short tone.

Managing appointments

 →  → **Calendar**

Editing individual appointments



Select a day in the graphical Calendar and press the control key . (Days on which appointments have already been saved are highlighted in white in the Calendar).



Select appointment for the day.

You have the following options:

View

Press the display key and edit or confirm the entry.

or

Options

Open the menu for editing, deleting and activating/deactivating.

Deleting all appointments for one day

Options → **Delete all Appts.** → **OK**


Confirm the security prompt with **Yes**.


All appointments are deleted.

Displaying missed appointments, anniversaries

Missed appointments/anniversaries (→ page 30) are displayed in the **Missed Alarms** List if:

- ◆ You do not accept an appointment/anniversary.
- ◆ The appointment/anniversary was signaled during a phone call.
- ◆ The handset is deactivated at the time of the appointment/anniversary.
- ◆ Automatic Redial was activated at the time of an appointment/anniversary (→ page 31).

The icon  and the number of **new** entries are shown in the display. The most recent entry is at the head of the list.

Open the list by selecting the **message key**  (→ page 33) or via the **menu**:

 →  → **Missed Alarms**

Select appointment/anniversary.

Information about the appointment/anniversary displays. A missed appointment displays with the appointment name and a missed anniversary displays with the last name and first name. The date and time will also be given.

Delete



Delete appointment.

If ten entries are already stored in the list, the next appointment reminder will delete the oldest entry.

Setting the Alarm Clock

Prerequisite: The date and time have already been set (→ page 13).

Activating/deactivating the Alarm Clock and setting the wake-up time

 →  → **Alarm Clock**

▶ You can enter data in the following fields:

Activation:

Select **On** or **Off**.



Time:

Enter the wake-up time in 4-digit format, then select AM/PM.

Occurrence:

Select **Daily** or **Monday-Friday**.


Volume:

Set the volume (1–6). You can choose between five volumes (1–5; e.g., volume 3 = ) and the "crescendo" ringtone (6; volume increases with each ring = ).


 
Melody:

Select melody.

Save Press the display key.

In idle status, the  icon and wake-up time are displayed.

A wake-up call is signaled on the display and with the selected ringtone (→ page 3). The wake-up call sounds for 60 seconds. If no key is pressed, the wake-up call is repeated twice at five minute intervals and then switched off.

While the wake-up call sounds, you can permanently change the volume by pressing the side keys  (louder) or  (quieter).

During a call, the wake-up call is only by a short tone.

Using a handset as a Room Monitor

Deactivating the wake-up call/ repeating after a pause (Snooze mode)

Prerequisite: A wake-up call is sounding.

Off Press the display key. The wake-up call is deactivated.

or

Snooze Press the display key or any key. The wake-up call is deactivated and then repeated after 5 minutes. After the second repetition the wake-up call is deactivated completely.

Using a handset as a Room Monitor

If the Room Monitor is activated, a previously saved destination number is called as soon as a set noise level is reached. You can save an internal or external number in your handset as the destination number. All of the handset keys are deactivated, with the exception of the display keys.

The Room Monitor call to an external number is terminated after approximately 90 seconds. The Room Monitor call to an internal number (handset) is terminated after approximately 3 minutes (depending on the base). When the Room Monitor is activated, all keys are locked except the end call key. The handset's speaker is muted.

When the Room Monitor is activated, incoming calls to the handset are indicated **without a ringtone** and are only shown on the screen. The display and keypad are not illuminated and Advisory Tones are also turned off.

If you accept an incoming call, the Room Monitor is suspended for the duration of the call, but the function **remains** activated.

If you deactivate then reactivate the handset, the Room Monitor remains activated.

Warning!

- ◆ **Always check the operation of the Room Monitor before use. For example, test its sensitivity. Check the connection if you are diverting the Room Monitor to an external number.**
- ◆ When the function is switched on, the handset's operating time is considerably reduced. If necessary, place the handset in the charger. This ensures that the battery does not run down.
- ◆ Ideally the handset should be positioned 1 to 2 metres away from the baby. The microphone must be directed towards the baby.
- ◆ The connection to which the Room Monitor is diverted must not be blocked by an activated Answering Machine.

Activating the Room Monitor and entering the destination number

 →  → Room Monitor


- ▶ You can enter data in the following fields:

Activation:

Select **On** to activate.

Alarm to:

Select **Internal** or **External**.

External number: Select the number from the Directory (press display key ) or enter it manually.

Internal number: Select display key **Change** → . Select handset or **Call All** to call all registered handsets → **OK**.


In idle status, the destination number or the internal destination number displays.

Sensitivity:

Select noise level sensitivity (**Low** or **High**).

- ▶ Press **Save** to save the settings.

When the Room Monitor function is activated, the idle display appears as shown below:

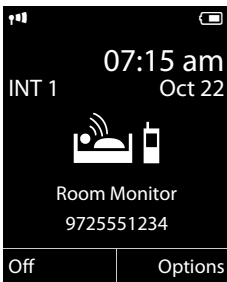

Changing the set destination number

 →  → Room Monitor

- ▶ Enter and save number as described in "Activating the Room Monitor and entering the destination number" (→ page 39).

Cancelling/deactivating the Room Monitor

Press the end call key  to cancel the call when the Room Monitor is activated.

In idle status, press the display key **Off** to deactivate Room Monitor mode.

Deactivating the Room Monitor remotely

Prerequisites: The phone must support tone dialing and the Room Monitor should be set for an external destination number.

- ▶ Accept the call from the Room Monitor and press keys  .

The Room Monitor function will deactivate after the call ends. There are no further Room Monitor calls. The other Room Monitor settings on the handset (e.g., no ring-tone) will remain activated until you press the display key **Off** on the handset.

To reactivate the Room Monitor with the same phone number:

- ▶ Turn on the activation again and save with **Save** (→ page 39).

Setting up the handset

Your handset is preconfigured, but you can change the settings to suit your individual requirements.

Quickly accessing numbers and functions

You can assign a **number from the Directory** to each of the **digit keys** **0 OPER** and **2 ABC** to **9 WXYZ**.

The left and right **display keys** have a default **function**. You can change the assignment (→ page 40).

The number is then dialed or the function started by simply pressing a key.

Assigning digit keys

Prerequisite: You have not yet assigned a number to the digit key.

- ▶ Press and **hold** the digit key
or
Press the digit key **briefly** and press the display key **QuickDial**.

The Directory opens.

- ▶ Select an entry and press **OK**.

The entry is saved to the corresponding digit key.

Please note

If you delete or edit the entry in the Directory at a later date, this will not affect the assignment to the number key.

Selecting numbers/changing an assignment

Prerequisite: The digit key already has a number assigned to it.

When the handset is in idle status

- ▶ Press and **hold** the digit key:
The number is dialed immediately.

or

- ▶ **Briefly** press the digit key.
Press the display key with the number/name (abbreviated if necessary) to select the number
or
press the display key **Change** to change the assignment or to delete the assignment.

Changing display key assignments

- ▶ Press and **hold** the left or right side of the display key.

The list of possible key assignments is opened. The following can be selected:

Room Monitor

Assign menu for setting and activating the Room Monitor to a key (→ page 38).

Alarm Clock

Assign menu for setting and activating the Alarm Clock to a key (→ page 37).

Calendar

Display graphical Calendar (→ page 35).

Redial

Display the Redial List.

More Functions...

More features are available:

Call Lists

Display Call Lists (→ page 32).

INT


Internal calls (→ page 27).


- ▶ Select an entry and press **OK**.

Changing the display language






You can view the display texts in different languages.


 →  → **Language**

The current language is indicated by .

 Choose language and press **Select**.

If you accidentally choose a language you do not understand:

 →  →  →  → 
Press keys in sequence and confirm by selecting **OK**.


 Select the correct language and press the **right display key**.

Setting the display

Setting the screensaver/slide show

When in idle state, a picture or a slide show (all the pictures are displayed one after the other) from the **Screensaver** folder of the **Resource Directory** (→ page 44) or the time can be displayed as a screensaver. This will replace the idle state display.

The screensaver is not displayed in certain situations, e.g., during a call or if the handset is de-registered.

If a screensaver is activated, the **Screensaver** menu option is marked with .

 →  → **Display + Keypad**
→ **Screensaver**

The current setting displays.

▶ You can enter data in the following fields:


Activation:

Select **On** (screensaver displays) or **Off** (no screensaver).


Selection:

Select screensaver or

View Press the display key. The active screensaver displays.

 Select screensaver and press **OK**.

Save Press the display key.

Briefly press the end call key  to return to the idle display.


Please note

If the **analogue clock** has been set as the screensaver, the **second hand** is shown only when the handset is **in the base**.

Setting Large Font

You can increase the font size of print and symbols in call lists and in the directory to improve readability. Only one entry is shown at a time on the display instead of several entries and names are abbreviated if necessary.

 →  → **Display + Keypad** → **Large Font**

Change Press display key ( = on).

Setting the Color Scheme

You can set the display to be shown in various colour combinations.

 →  → **Display** → **Color Schemes**

Select **Color Scheme** (1 to 5) and press **OK**.

Setting the display Backlight

Depending on whether or not the handset is in the charger, you can activate or deactivate the Backlight. If it is activated, the display is permanently dimmed. If the backlight is deactivated it is switched on by pressing any key. In this case the pressed key has no other function.

 →  → **Display + Keypad**
→ **Display Backlight**

The current setting displays.

▶ You can enter data in the following fields:

In Charger


Select **On** or **Off**.

Out of Charger

Select **On** or **Off**.

Please note

With the **On** setting, the standby time of the handset can be significantly reduced.

 Press the display key.

Setting keypad illumination

The brightness of the keypad illumination can be set to one of five levels.


 →  → **Display + Keypad**
→ **Keypad Illumination**

The current setting is displayed.


▶ You can enter data in the following fields:





Brightness:

Select **1** (darkest) to **5** (brightest).

 Press the display key.

Activating/deactivating Auto Answer




 
If this function is activated, you can simply lift the handset out of the charger without having to press the talk key  when you receive a call.

 →  → **Telephony** → **Auto Answer**
 Press display key ( = on).



Changing the speaker/earpiece volume

 
You can set the speaker volume for speaker mode and the earpiece volume to five different levels.


During a conversation via the earpiece or in speaker mode:


 /  Press the side key to call up the **Handset Volume** menu.
Change the volume by pressing  (louder) or  (quieter).

or

 Press the control key to call up the **Handset Volume** menu. Set the earpiece or speaker volume by pressing .

The setting will automatically be saved after approximately 3 seconds or press the display key .

If  is assigned a different function:

 Open menu.

Volume Select and press .

Configure setting (see above).

Please note

- ◆ The settings for the earpiece also apply to a connected headset.
- ◆ You can also set the call volume using the menu (→ page 24).

Setting a handsfree profile

In idle state, you can set various handsfree profiles to optimally adapt your phone to your environment.

Profile 1

The optimum setting for most connections and set as default.

Profile 2

Optimum volume in handsfree mode. However, this means that the participants cannot speak at the same time as the person speaking is given preferential transmission (making two-way conversations difficult).

Profile 3

Optimises two-way conversations, both callers can hear each other, even if they talk at the same time.

Profile 4


 
Optimised for special connections. If the default setting (profile 1) does not provide optimum sound, please give this a try.

 →  → **Audio Settings**
→ **Handsfree Profiles**

Select handsfree profile (1 to 4) and press **Select**.

Changing ringtones

◆ Volume:

You can choose between five volumes (1–5; e.g., volume 3 = ) and the "crescendo" ringtone (6; volume increases with each ring = .

◆ Ringtones:

You can select a ringtone from a list of pre-loaded melodies.


You can select various ringtones, melodies or any sound from the Resource Directory (→ page 44).


You can set different ringtones for the following functions:


- ◆ Intrnl Calls
- ◆ Ext. Calls


Setting volume/melodies

In idle status:



 →  → **Audio Settings**
→ **Ringtones(Handset)** → **Volume / Melodies**

 Setting volume/melodies for internal calls and anniversaries.

 Scroll to the next line.

 Setting volumes/melodies for external calls.

Save Press the display key to save the setting.

While the phone is ringing, you can permanently change the volume by pressing the side keys  (louder) or  (quieter).

Additionally for external calls:

You can specify a time period when you do not want the telephone to ring, e.g., during the night.

 →  → **Audio Settings**
→ **Ringtones(Handset)** → **Time Control**

Time Control:

Select **On** or **Off**.

If the Time Control is activated:

Suspend ring from:

Enter the start of the period in 4-digit format.

Suspend ring until:

Enter the end of the period in 4-digit format.

Please note

During this period, you will continue to receive calls from numbers to which you have assigned a personalized melody in the Directory (VIP).

Activating/deactivating the ringtone for anonymous calls

You can set your phone not to ring for calls where Calling Line Identification has been withheld. The call will only be signaled on the display.

In idle status:

 
 →  → **Audio Settings**
→ **Ringtones(Handset)** → **Anon. Calls Silent**

Press **Change** to activate or deactivate the function (= on).

Activating/deactivating the ringtone


You can deactivate the ringtone on your handset before you answer a call or when the handset is in idle status; the ringtone can be deactivated permanently or just for the current call. The ringtone cannot be re-activated while an external call is in progress.

Deactivating the ringtone permanently

 Press and **hold** the star key.

The  icon appears in the display.

 Reactivating the ringtone


 Press and **hold** the star key.

Deactivating the ringtone for the current call


Silence Press the display key.

Activating/deactivating the alert tone

 Instead of a ringtone, you can activate an alert tone. When you receive a call, you will hear a **short tone** ("Beep") instead of the ringtone.

 Press and **hold** the star key and **within 3 seconds**:

Beep Press the display key. A call will now be signaled by **one** short alert tone.

 appears in the display.

Using the Resource Directory

The Resource Directory on the handset manages sounds, which you can use as ringtones, and pictures (Caller Pictures and Screensavers).

Prerequisite: Caller ID service subscription (CID). The Resource Directory can manage the following media types:


Type	Format
Sound	
Ringtones	Internal
Monophonic	Internal
Polyphonic	Internal
Imported sounds	WMA, MP3, WAV
Picture	BMP, JPG, GIF
– Caller Picture	128 x 86 pixels
– Screensaver	128 x 160 pixels

Various mono and polyphonic sounds and pictures are preconfigured on your handset.


You can listen to the available sounds and view the pictures.

You can download pictures and sounds from a PC (→ page 49). If there is not enough memory available, you must first delete one or more pictures or sounds.

Playing back sounds/viewing Caller Pictures


 → → Screensavers / Caller Pictures / Sounds (select entry)

Pictures:

View Press the display key. The selected picture displays. Switch between pictures using the  key.

If you have saved a picture in an invalid file format, you will see an error message after selecting the entry.


Sounds:

The selected sound is played back immediately. Switch between the sounds using the  key.

You can set the volume during playback.

Options Open menu.

Volume Select and press **OK**.

 
 Set volume.

Save Press the display key.

Deleting/renaming a picture/sound

You have selected an entry.

Options Open menu.

If a picture/sound cannot be deleted () , these options are not available. You can select the following functions:

Delete Entry

The selected entry is deleted.

Rename

Change the name (max. 16 characters) and press **Save**. The entry is stored with the new name.

Checking the memory

You can check how much memory is available for Screensavers and Caller Pictures.



 → → Resource Directory
→ Capacity

Activating/deactivating Advisory Tones

Your handset uses Advisory Tones to tell you about different activities and statuses. The following Advisory Tones can be activated/deactivated independently of each other:

- ◆ **Key click:** every key press is confirmed.
- ◆ **Acknowledge tones:**
 - **Confirmation tone** (ascending tone sequence): at the end of an entry/setting and when a new entry arrives in the Call List
 - **Error tone** (descending tone sequence): when you make an incorrect entry
 - **Menu end tone:** when scrolling to the end of a menu
- ◆ **Battery tone:** the battery requires charging.

In idle status:

 →  → Audio Settings
→ Advisory Tones

▶ You can enter data in the following fields:

Key Tones:

Select **On** or **Off**.

Confirmation:

Select **On** or **Off**.

Battery:


Select **On** or **Off**.

Save Press the display key.

Setting long-distance and area codes

To transfer phone numbers via USB phone from your outlook (e.g., in vCards), it is essential that your area code (international and local area code) is saved on the phone.

Some of these numbers are already preset.


 →  → **Telephony** → **Area Codes**


Check that the preset area code is correct.


▶ You can enter data in the following fields:

 Select/change input field.


 
 Navigate to the input field.

 **< C** If necessary, delete number: press the display key.

 Enter number.

 **Save** Press the display key.

Example:

Area Codes	
International code:	011- 1
Local access code:	1-972
 	

Note:

If a long distance number is recorded in a vCard without the national access code "1" (i. e., 312 -555-1212 instead of 1-312-555-1212), please add the "1" in front of the telephone number before transferring the number to the S79H handset via USB.


Restoring the handset default settings

You can reset individual settings and changes that you have made.

When you perform a reset, the settings listed below are automatically retained.

- ◆ Registration to the base
- ◆ Date and time
- ◆ Entries in the Calendar
- ◆ Entries in the Directory, the Call Lists and the content of the Resource Directory

 →  → **System** → **Handset Reset**


 **Yes** Press the display key.

Troubleshooting

If you have any questions about the use of your telephone, you can contact us at any time at www.gigaset.com/customer-care.


The table below contains a list of common problems and possible solutions.

The display is blank.

1. The handset is not switched on.
 - ▶ Press and hold the end call key .
2. The battery is empty.
 - ▶ Charge the battery or replace it (→ page 9).

Not all menu items are displayed.

The menu display is Simplified (**standard mode**).

- ▶ Activate Complete menu display (**expert mode** ) (→ page 24).

No Base flashes on the display.

1. The handset is outside the range of the base.
 - ▶ Move the handset closer to the base.
2. The base's range is reduced because Eco Mode is activated.
 - ▶ Deactivate Eco Mode (→ page 35) or reduce the distance between the handset and the base.
3. The base is not switched on.
 - ▶ Check the base power adapter.

Please register handset flashes on the display.


Handset has not been registered with the base or has been deregistered.

- ▶ Register the handset (→ page 11).

Handset does not ring.

1. The ringtone is deactivated.
 - ▶ Activate the ringtone (→ page 44).
2. The phone only rings if the phone number has been transmitted.
 - ▶ Switch on the ringtone for anonymous calls (→ page 44).

The other party cannot hear you.

You have pressed the mute button . The handset is "muted".

- ▶ Unmute the microphone (→ page 27).

You hear an error tone when keying an input (a descending tone sequence).

Action has failed/invalid input.

- ▶ Repeat the operation. Watch the display and refer to the user guide if necessary.

Exclusion of liability

Some displays may contain pixels (picture elements), which remain activated or deactivated. As a pixel is made up of three sub-pixels (red, green, blue), it is possible that pixel colours may vary.

This is completely normal and does not indicate an error.

Appendix

Caring for your telephone

- ▶ Wipe the device with a **damp cloth** or an **antistatic cloth**. Do not use solvent or a microfiber cloth.
- ▶ Impairments in the high-gloss finish can be carefully removed using display polishes for mobile phones.

Never use a dry cloth as this can cause static.

Contact with liquid

If the device comes into contact with liquid:

1. **Unplug the power supply** and/or **remove the battery** from the handset **immediately**.
2. Allow the liquid to drain from the device.
3. Pat all parts dry. Place the device (handset with the battery compartment open and the keypad facing down) in a dry, warm place **for at least 72 hours (not in a microwave, oven etc.)**.
4. **Do not switch on the device again until it is completely dry.**

When it has fully dried out, you will normally be able to use it again.

Specifications

Batteries

Technology:

Nickel-metal-hydride (NiMH)

Size: AAA (Micro, HR03)

Voltage: 1.2 V

Capacity: 550 - 1000 mAh

The handset is supplied with nickel-metal hydride UL-approved AAA batteries.

Handset operating times/charging times

This telephone can charge batteries up to a capacity of 1000 mAh. The use of special high-performance batteries or batteries with high capacities is not recommended for cordless phones.

The operating time of your telephone depends on the capacity and age of the batteries and the way they are used. (All times are maximum possible times).

	Capacity (mAh) approx.			
	550	700	800	1000
Standby time (hours)*	140/ 50	165/ 58	185/ 67	230/ 83
Talktime (hours)	11	12	14	17
Operating time for 1.5 hrs of calls per day (hours)**	85	95	110	135
Charging time in charger (hours)	6.5	7.5	8.5	10.5

* without/with display Backlight

** without display Backlight
(Setting the display Backlight)

(→ page 42)







Due to the constant progression in battery development, the list of recommended batteries in the FAQ section of the Gigaset Customer Care pages is regularly updated.

General specifications

DECT standard	Is supported
GAP standard	Is supported
No. of channels	60 duplex channels
Radio frequency range	1880–1900 MHz
Duplex method	Time multiplex, 10 ms frame length
Channel grid	1728 kHz
Bit rate	1152 kbit/s
Modulation	GFSK
Language code	32 kbit/s
Transmission power	10 mW, average power per channel
Range	Up to 984 feet outdoors, up to 165 feet indoors
Environmental conditions in operation	+41°F to +113°F, 20% to 75% relative humidity
Dialing mode	DTMF (tone dialing)/ PD (pulse dialing)

Writing and editing text

 The following rules apply when writing text:

- ◆ Each key between **0 OPER** and **9 WXYZ** is assigned several letters and characters.
- ◆ Control the cursor with    . Press and **hold**  or  to move the cursor **word by word**.
- ◆ Characters are inserted at the cursor position.
- ◆ Press the star key *** Δ** to display the table of special characters. Select the required character and press the display key **Insert** to insert the character at the cursor position.
- ◆ Press and **hold** **0 OPER** to **9 WXYZ** to enter digits.
- ◆ Press display key **< C** to delete the **character** to the left of the cursor. Press and **hold** to delete the **word** to the left of the cursor.

- ◆ The first letter of the name of Directory entries is automatically capitalised, followed by lower case letters.

Setting upper/lower case or digits

Repeatedly press the pound key **# →** to change the text input mode.

123	Writing digits
Abc	Upper case *
abc	Lower case

* First letter in capitals, all others in lower case

The active mode is indicated at the bottom right of the screen.

Writing names

- ▶ Enter the individual letters/characters by pressing the corresponding key.

The characters assigned to the key are shown in a selection line at the bottom left of the screen. The selected character is highlighted.

- ▶ **Briefly** press the key several times in succession to select the required letter/character.

Standard characters

	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x
1 [OP]	[] ¹⁾	[] ²⁾	1							
2 [ABC]	a	b	c	2	ä	á	à	â	ã	ç
3 [DEF]	d	e	f	3	ë	é	è	ê		
4 [GHI]	g	h	i	4	ï	í	ì	î		
5 [JKL]	j	k	l	5						
6 [MNO]	m	n	o	6	ö	ñ	ó	ò	ô	õ
7 [PQRS]	p	q	r	s	7	ß				
8 [TUV]	t	u	v	8	ü	ú	ù	û		
9 [WXYZ]	w	x	y	z	9	ÿ	ý	æ	ø	å
0 [OPR]	.	,	?	!	0					

- 1) Space
- 2) Line break

Accessing additional functions via the PC interface

To enable your handset to communicate with the PC, the "**Gigaset QuickSync**" program **must be installed on your PC** (free to download at www.gigaset.com/gigaset79h).

After installing "**Gigaset QuickSync**", connect the handset to your computer using a USB data cable (→ page 16).

Please note

Please connect your handset **directly** to the PC; do **not** connect via a USB hub.

Transferring data

Start the "**Gigaset QuickSync**" program. You can now:

- ◆ Synchronise your handset Directory with Outlook. (period)
- ◆ Download Caller Pictures (.bmp, .jpg, .gif) from the computer to the handset. (period)
- ◆ Download pictures (.bmp, .jpg, .gif) as a screensaver from the computer to the handset
- ◆ Download sounds (ringtones) from the computer to the handset

During the transfer of data between handset and PC, you will see **Data transfer in progress** on the display. During this time the keypad is disabled, and incoming calls are ignored.



Completing a firmware update

- ▶ Connect your phone to your PC using a **USB data cable** (→ page 16).
- ▶ Start the "**Gigaset QuickSync**" program on your PC.
- ▶ Establish a connection to your handset.
- ▶ Select [**Settings**] → [**Device properties**] to open the [**Device**] tab.
- ▶ Click on [**Firmware update**].

This launches the firmware update.

The update process can take up to 10 minutes (not including the download time). **Do not interrupt the process or remove the USB data cable.**

The data is initially loaded from the update server on the Internet. The amount of time required depends on the speed of your Internet connection.

The display on your phone is switched off and the message key  and the talk key  start flashing.

When the update is complete, your phone will automatically restart.

 
 
Procedure in case of an error


If the update procedure fails or your phone does not work properly following the update, repeat the update procedure as follows:





- ▶ Close the "**Gigaset QuickSync**" program on the PC.
- ▶ Remove the USB data cable from the telephone.
- ▶ Remove the battery (→ page 9).
- ▶ Replace the battery.
- ▶ Complete the firmware update as described.

If the update procedure fails several times or you can no longer connect to the PC, proceed as follows (**emergency update**):

- ▶ Close the "**Gigaset QuickSync**" program on the PC.
- ▶ Remove the USB data cable from the telephone.
- ▶ Remove the battery (→ page 9).

  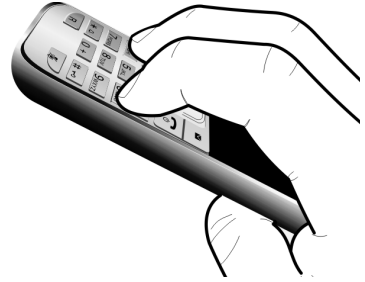- ▶ Press and hold keys  and  with the index and middle finger.



- ▶ Replace the battery.
- ▶ Release keys  and . The message key  and the talk key  will flash alternately.
- ▶ Complete the firmware update as described.

Please note

Personal pictures and sounds that you have loaded to your handset should always be saved on your PC as they will be deleted during an **emergency update**.

Industry Canada Certification

Operation is subject to the following two conditions (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

NOTICE: The Industry Canada label identifies certified equipment. This certification means that the equipment meets certain telecommunications network, protective, operational and safety requirements as prescribed in the appropriate Terminal Equipment Technical Requirements document(s). The Department does not guarantee the equipment will operate to the user's satisfaction. Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations.

Repairs to certified equipment should be coordinated by a representative designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment. Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas

NOTE: Users should not attempt to make such connections themselves, but should contact the appropriate electric inspection authority, or electrician, as appropriate. This product meets the applicable Industry Canada technical specifications.

The Ringer Equivalence Number is an indication of the maximum number of devices allowed to be connected to a telephone interface. The termination of an interface may consist of any combination of devices subject only to the requirement that the sum of the RENs of all devices does not exceed five.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

FCC / ACTA Information

Warning: Changes or modifications to this unit not expressly approved by Gigaset Communications USA LLC could void the FCC authority to operate the equipment. This includes the addition of any external antenna device.

This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. On the bottom of the base station is a label that contains, among other information, a product identifier in the format US:AAAEQ##TXXXX. If requested, this number must be provided to the telephone company.

A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. See installation instructions for details.

The REN is used to determine the number of devices that may be connected to a telephone line. Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming call. In most but not all areas, the sum of RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company. For products approved after July 23, 2001, the REN for this product is part of the product identifier that has the format US:AAAEQ##TXXXX. The digits represented by ## are the REN without a decimal point (e.g., 03 is a REN of 0.3). For earlier products, the REN is separately shown on the label.

A copy of the supplier's Declaration of Conformity (SDoC) is available at this Internet address: www.gigaset.com/docs.

If this equipment causes harm to the telephone network, the telephone company will notify you in advance, that temporary discontinuance of service may be required. But if advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operation of the equipment. If this happens the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service. If you experience trouble with this telephone system, disconnect it from the network

until the problem has been corrected or until you are sure that the equipment is not malfunctioning.

If trouble is experienced with this equipment, for repair or warranty information, please contact Support at 1-866 247-8758. If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved. This equipment is of a type that is not intended to be repaired by the Customer (user).

This telephone system may not be used on coin service provided by the telephone company. Connection to party line service is subject to state tariffs. Contact the state public utility commission, public service commission or corporation commission for information. Privacy of communications may not be ensured when using this phone.

If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this equipment does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

This telephone system equipment has been tested and found to comply with the limits for Class B digital device, pursuant to Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. These limits are designed to provide reasonable protection against harmful interference in a residential installation. Some cordless telephones operate at frequencies that may cause interference to nearby TV's and VCR's; to minimize or prevent such interference, the system base should not be placed near or on top of a TV or VCR; and, if interference is experienced, moving the base farther away from the TV or VCR will often reduce or eliminate the interference.

However, there is no guarantee that interference will not occur in a particular installation. If this telephone system does cause harmful interference to radio or television reception, which can be determined by turning the system off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the base station and receiver.
3. Connect the base station into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio TV technician for help.

Notice for Direct Inward Dialing ("DID")

ALLOWING THIS EQUIPMENT TO BE OPERATED IN SUCH A MANNER AS TO NOT PROVIDE FOR PROPER ANSWER SUPERVISION IS A VIOLATION OF PART 68 OF THE FCC'S RULES.

Notice to Hearing Aid Wearers:

This phone system is compatible with inductively coupled hearing aids.

Power Outage:

In the event of a power outage, your cordless telephone will not operate. The cordless telephone requires electricity for operation. You should have a telephone that does not require electricity available for use during power outages.

Notice:

The installation of the base unit should allow at least 8 inches between the base and persons to be in compliance with FCC RF exposure guidelines.

For body worn operation, the portable part (handset) has been tested and meets FCC RF exposure guidelines. Use with an accessory that contains metal parts may not ensure compliance with FCC RF exposure guidelines.

Notice to telephone company service:

If you need service from your telephone company, please provide them with the information

- Facility interface Code (FIC)
- Service Order Code (SOC)
- Universal Service Order Code (USOC)

as indicated on the label on the bottom side of the base station.

Safety precautions

Before using your telephone equipment, basic safety instructions should always be followed to reduce the risk of fire, electric shock and injury to persons.

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall telephone jack and power outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use damp cloth for cleaning.
4. Do not use this product near water, for example, near a bathtub, wash bowl, kitchen sink, or laundry tub, in a wet basement or near a swimming pool.
5. Place this product securely on a stable surface. Serious damage and/or injury may result if the unit falls.
6. Slots or openings in the cabinet and the back and bottom are provided for ventilation, to protect it from overheating. These openings must not be blocked or covered. This product should never be placed near or over a radiator or heat register, or in a place where proper ventilation is not provided.
7. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of AC line power to your home, consult your dealer or local power company.
8. Do not place objects on the power cord. Install the unit where no one can step or trip on the cord.
9. Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
10. Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in the risk of fire or electric shock. Never spill liquid of any kind on this product.
11. To reduce the risk of electric shock or burns, do not disassemble this product. Take it to a qualified service center when service is required. Opening or removing covers may expose you to dangerous voltages, dangerous electrical current or other risks. Incorrect reassembly can cause electric shock when the appliance is subsequently used.
12. Unplug the product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - a.) When the power cord is damaged or frayed.
 - b.) If liquid has been spilled into the product.
 - c.) If the product has been exposed to rain or water.

d.) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions because improper adjustment of other controls may result in damage and may require extensive work by a qualified technician to restore the product to normal operation.

e.) If the product has been dropped or physically has been damaged.

f.) If the product exhibits a distinct change in performance.

13. Avoid using a telephone (other than a cordless type) during a thunderstorm. There may be a remote risk of electrical shock from lightning. Therefore we suggest a surge arrester.

14. Do not use the telephone to report a gas leak in the vicinity of the leak.

15. Emergency/911 numbers may not be dialed if the keypad is locked.

16. Minimum No. 26 AWG telecommunication line cord must be used with this phone.

BATTERY SAFETY PRECAUTIONS

To reduce the risk of fire, injury or electric shock, and to properly dispose of batteries, please read and understand the following instructions.

CONTAINS NICKEL METAL HYDRIDE BATTERY. BATTERY MUST BE RECYCLED OR DISPOSED OF PROPERLY. DO NOT DISPOSE OF IN MUNICIPAL WASTE.

1. Only use the batteries specified for use with this product.
2. **DO NOT USE NICKEL CADMIUM OR LITHIUM BATTERIES**, or mix batteries of different sizes or from different manufacturers in this product. **DO NOT USE NONRECHARGEABLE BATTERIES.**
3. Do not dispose of the batteries in a fire; the cells may explode. Do not expose batteries to water. Check with local codes for special disposal instructions.
4. Do not open or mutilate the batteries. Released electrolyte is corrosive and may cause damage to the eyes or skin. The electrolyte may be toxic if swallowed.
5. Exercise care in handling the batteries in order not to short the batteries with conducting materials such as rings, bracelets, and keys. The batteries or conducting material may overheat and cause burns or fire.
6. Charge the batteries provided with, or identified for use with, this product only in accordance with the instructions and limitations specified in the user's manual. Do not attempt to charge the batteries with any means other than that specified in the users manual.
7. Periodically clean the charge contacts on both the charger and handset.

Service (Customer Care)

Customer Care Warranty for Cordless Products
To obtain Customer Care Warranty service,
product operation information, or for problem resolution, call:
Toll Free: 1-866 247-8758

End-user limited warranty

This product is covered by a one year limited warranty. Any repair replacement or warranty service, and all questions about this product should be directed to: 1-866 247-8758.

This limited, non-transferable warranty is provided to the original buyer/end-consumer ("you") for systems, handsets and accessories (collectively, "Product") provided by Gigaset Communications USA LLC or Gigaset Communications Canada Inc. (collectively "Gigaset NAM"). Gigaset NAM warrants to you that at the date of purchase, the Product is free of defects in workmanship and materials and the software included in the Product will perform in substantial compliance to its program specifications.

1. WARRANTY PERIOD

The Product warranty period is one (1) year from the original date of purchase by you. Proof of purchase (e.g., sales slip or invoice) must be provided with any Product returned during the warranty period. Batteries supplied with the Products are warranted to be free from defects at the time of purchase only.

2. EXCLUSIVE REMEDY

Gigaset NAM's entire liability and your exclusive remedy if the Product is defective in materials or workmanship during the warranty period and is returned shall be that the Product will be repaired or replaced as set forth in Section 4 below. Reconditioned replacement components, parts or materials may be used in the replacement or repair. Data in the memory of the Product may be lost during repair.

3. THIS LIMITED WARRANTY DOES NOT COVER AND IS VOID WITH RESPECT TO THE FOLLOWING:

- Products which have been repaired, maintained or modified (including the antenna) by anyone other than Gigaset NAM or a Gigaset NAM-approved repair facility, or that have been improperly installed.
- Cost of installation, removal or reinstallation.
- Damage due to any telephone, electronic, hardware or software program, network, Internet or computer malfunctions, failures, or difficulties of any kind, including without limitation, server failure or incomplete, incorrect, garbled or delayed computer transmissions.
- Equipment and components not manufactured, supplied or authorized by Gigaset NAM.
- Modification of the Product's components, or operation of the Product in an unsuitable environment or in a manner for which it is not intended, including but not limited to failures or defects caused by misuse, abuse, accidents, physical damage, abnormal operation, improper handling or storage, neglect, alterations, unauthorized installation, removal or repairs, failure to follow instructions, problems caused by the carrier's network coverage, exposure to fire, water or excessive moisture or dampness, floods, or extreme changes in climate or temperature, acts of God, riots, acts of terrorism, spills of food or liquids, viruses or other software flaws introduced into the Product or other acts which are not the fault of Gigaset NAM and which the Product is not specified to tolerate, including damage caused by mishandling or blown fuses.
- Products which have had warranty stickers, electronic serial number and/or serial number label removed, altered, rendered illegible or fraudulently applied to other equipment.
- Signal reception problems (unless caused by defect in material or workmanship in the Product).
- Products operated outside published maximum ratings.
- Performance of the Products when used in combination with other products or equipment not manufactured, supplied or authorized by Gigaset NAM.
- Consumables (such as batteries and fuses).
- Cosmetic damage, physical damage to the surface of the Product, including, without limitation, breakage, cracks, dents, scratches or adhesive marks on the LCD screen or outside casing of the Product.

- Payments for labor or service to representatives or service centers not authorized to perform product maintenance by Gigaset NAM.
- Loss of data.
- Testing and examination discloses that the alleged defect or malfunction in the Product does not exist.

This warranty does not cover customer education, instruction, installation or removal, set up adjustments, problems related to service(s) provided by a carrier or other service provider, and/or signal reception problems. Gigaset NAM shall not be responsible for software, firmware, information, or memory data contained in, stored on, or integrated with any Products returned for repair, whether under warranty or not. This warranty is valid only in the country in which it is purchased (*i.e.*, the United States of America or Canada respectively, but not both).

USE WITH ACCESSORIES NOT SUPPLIED BY GIGASET NAM OR NOT OTHERWISE EXPRESSLY AUTHORIZED BY GIGASET NAM MAY VOID WARRANTY.

4. WARRANTY CLAIM PROCEDURE

All warranty claims must be made by notifying Gigaset NAM prior to the expiration of the warranty period. Gigaset NAM's obligation to provide warranty support shall not extend past the end of the warranty period, except that any product repaired or replaced during the warranty period shall continue to be warranted for the balance of such warranty period or thirty (30) days, whichever is greater.

Support service will be provided for you by accessing the toll free customer service number:

1-866 247-8758

5. LIMITATION OF WARRANTY

Gigaset NAM makes no warranty or representation that the software in the Products will meet your requirements or will work in combination with any hardware or applications software products provided by third parties, that the operation of the software will be uninterrupted or error free, or that all defects in the software products will be corrected.

6. LIMITATION ON REMEDIES; NO CONSEQUENTIAL OR OTHER DAMAGES

Your exclusive remedy for any breach of this limited warranty is as set forth above. Except for any refund elected by Gigaset NAM, **YOU ARE NOT ENTITLED TO ANY DAMAGES, INCLUDING BUT NOT LIMITED TO CONSEQUENTIAL DAMAGES**, if the Product does not meet the limited warranty, and, to the maximum extent allowed by applicable law, even if any remedy fails of its essential purpose. The terms below ("Exclusion of Incidental, Consequential and Certain Other Damages") are also incorporated into this limited warranty. Some states/jurisdictions/provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This limited warranty gives you specific legal rights. You may have others which vary from state/jurisdiction/province to state/jurisdiction/province.

7. DISCLAIMER OF WARRANTIES

GIGASET NAM AND ITS SUPPLIERS PROVIDE THE PRODUCT AND SUPPORT SERVICES (IF ANY) AS IS AND WITH ALL FAULTS. THE LIMITED WARRANTY IS IN LIEU OF ANY OTHER EXPRESS WARRANTIES (IF ANY) CREATED BY ANY DOCUMENTATION OR PACKAGING EXCEPT FOR THE LIMITED WARRANTY, AND TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW IS IN LIEU OF ANY IMPLIED OR STATUTORY WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, OF ACCURACY OR COMPLETENESS OR RESPONSES, OF RESULTS, OF WORKMANLIKE EFFORT, OF LACK OF VIRUSES AND OF LACK OF NEGLIGENCE, ALL WITH REGARD TO THE PRODUCT, AND THE PROVISION OF OR FAILURE TO PROVIDE SUPPORT SERVICES. ALSO, THERE IS NO WARRANTY OR CONDITION OF TITLE, QUIET ENJOYMENT, QUIET POSSESSION, OR CORRESPONDENCE TO DESCRIPTION OR NON-INFRINGEMENT WITH REGARD TO THE PRODUCT. Some states/jurisdictions/provinces do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above exclusions or limitations may not apply to you. If an implied warranty or condition is created by your state/province and federal or state/provincial law prohibits disclaimer of it, you also have an implied warranty or condition, **BUT ONLY AS TO DEFECTS DISCOVERED DURING THE PERIOD OF THIS LIMITED WARRANTY (ONE YEAR)**. AS TO ANY DEFECTS DISCOVERED AFTER THE ONE YEAR PERIOD, THERE IS NO WARRANTY OR CONDITION OF ANY

KIND. This limited warranty gives you specific legal rights, and you may also have other rights which vary from state to state/province to province. In no event shall Gigaset NAM's liability exceed the cost of repairing or replacing defective Products as provided herein, and any such liabilities will terminate upon expiration of the warranty period.

Any supplements or updates to the Product or the software in the Product, including without limitation, any (if any) software fixes or upgrades or bug fixes provided to you after the expiration of the one year limited warranty period are not covered by any warranty or condition, express, implied or statutory.

8. EXCLUSION OF INCIDENTAL, CONSEQUENTIAL AND CERTAIN OTHER DAMAGES

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL GIGASET NAM, SELLER OR THEIR SUPPLIERS BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES WHATSOEVER (INCLUDING, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS OR CONFIDENTIAL OR OTHER INFORMATION, FOR BUSINESS INTERRUPTION, FOR PERSONAL INJURY, FOR LOSS OF PRIVACY, FOR FAILURE TO MEET ANY DUTY INCLUDING OF GOOD FAITH OR OF REASONABLE CARE, FOR NEGLIGENCE, AND FOR ANY OTHER PECUNIARY OR OTHER LOSS WHATSOEVER) ARISING OUT OF OR IN ANY WAY RELATED TO THE USE OF OR INABILITY TO USE THE PRODUCT, THE PROVISION OF OR FAILURE TO PROVIDE SUPPORT SERVICES, OR OTHERWISE UNDER OR IN CONNECTION WITH ANY PROVISION OF THIS LIMITED WARRANTY, EVEN IN THE EVENT OF THE FAULT, TORT (INCLUDING NEGLIGENCE), STRICT LIABILITY, BREACH OF CONTRACT OR BREACH OF WARRANTY OF GIGASET NAM OR SELLER OR ANY SUPPLIER, AND EVEN IF GIGASET NAM OR SELLER OR ANY SUPPLIER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. REPAIR OR REPLACEMENT, AS PROVIDED UNDER THE WARRANTY, IS YOUR SOLE AND EXCLUSIVE REMEDY FOR BREACH OF THE LIMITED WARRANTY.

9. LIMITATION OF LIABILITY AND REMEDIES

NOTWITHSTANDING ANY DAMAGES THAT YOU MIGHT INCUR FOR ANY REASON WHATSOEVER (INCLUDING, WITHOUT LIMITATION, ALL DAMAGES REFERENCED ABOVE AND ALL DIRECT OR GENERAL DAMAGES), THE ENTIRE LIABILITY OF GIGASET NAM, SELLER AND ANY OF THEIR SUPPLIERS UNDER ANY PROVISION OF THIS LIMITED WARRANTY AND YOUR EXCLUSIVE REMEDY FOR

ALL OF THE FOREGOING (EXCEPT FOR ANY REMEDY OF REPAIR OR REPLACEMENT ELECTED BY GIGASET NAM OR SELLER OR SUPPLIER WITH RESPECT TO ANY BREACH OF THE LIMITED WARRANTY) SHALL BE LIMITED TO THE GREATER OF THE AMOUNT ACTUALLY PAID BY YOU FOR THE PRODUCT OR FIVE DOLLARS (\$5.00 USD/CAN). THE FOREGOING LIMITATIONS, EXCLUSIONS AND DISCLAIMERS SHALL APPLY TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, EVEN IF ANY REMEDY FAILS ITS ESSENTIAL PURPOSE.

10. GOVERNING LAW

If this Product was purchased in the United States of America this limited warranty will be governed by the laws of Texas, and exclude the United Nations Convention on Contracts for the International Sale of Goods. If this Product was purchased in Canada this limited warranty will be governed by the laws of the Province of Ontario and the federal laws of Canada applicable therein, and exclude the United Nations Convention on Contracts for the International Sale of Goods.

If you want to learn more about Gigaset Service or for Support on your Gigaset phone, visit our web site at <http://www.gigaset.com> or please call 1-866 247-8758.

Issued by
Gigaset Communications GmbH
Frankenstr. 2a, D-46395 Bocholt
Manufactured by Gigaset Communications GmbH
under trademark license of Siemens AG.

© Gigaset Communications GmbH 2010
All rights reserved.

Subject to availability. Rights of modifications reserved.

Product attributes subject to change.

We reserve the right, to make changes without notice in equipment design and/or components.
Part Number: A31008-M2151-R301-2-3S19

© Copyright 2010.

Accessories


Ordering Gigaset products

You can order Gigaset products from your specialist retailer.

Gigaset
Original
Accessories

Use only original accessories. This will avoid possible health risks and personal injury, and also ensure that all the relevant regulations are complied with.

Mounting the charger on the wall

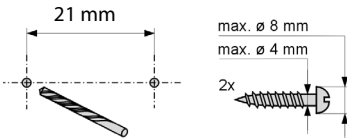

approx.
4 mm



Index

- A**
- Accessories 57
 - Acknowledge tones 45
 - Activating
 - advisory tones 45
 - appointment 35
 - handset 21
 - keypad lock 21
 - ring delay 42
 - room monitor 39
 - Advisory tones 45
 - Alarm Clock 37
 - Alert tone 44
 - Anniversary 30
 - deactivating 31
 - missed 33, 37
 - saving in the directory 30
 - Answering Machine List 33
 - Appointment 35
 - Appointment/anniversary
 - display missed 37
 - Appointments
 - activating/deactivating 36
 - deleting 36
 - managing 36
 - Area code
 - setting own area code 46
 - Area codes
 - extra codes 15
 - local area code 15
 - Assigning a number key 40
 - Automatic
 - redial 31
 - ring delay 26, 42
- B**
- Backlight
 - keypad 42
 - Base
 - setting up 8
 - Battery
 - charging 2, 3, 12
 - display 2, 3
 - icon 2, 3
 - inserting 9
 - tone 45
 - Birthday, see Anniversary
- C**
- Calendar 35
 - Call
 - accepting 26
 - ending 26
 - external 26
 - internal 27
 - Call duration 26
 - Call Lists 32
 - Caller Picture 28, 44
 - Calling
 - external 26
 - internal 27
 - Caring for your telephone 47
 - Changing
 - destination number
 - (Room Monitor) 39
 - display language 41
 - earpiece volume 42
 - ringtone 43
 - speaker volume 42
 - Character set 49
 - Charge status display 2, 3
 - Colour scheme 41
 - Confirmation tone 45
 - Connecting the headset 16
 - Control key 2, 18
 - Correcting incorrect entries 19
 - Customer Care 54
- D**
- Deactivating
 - advisory tones 45
 - appointment 35
 - handset 21
 - keypad lock 21
 - ring delay 42
 - room monitor 39
 - Delete key 19
 - Deleting characters 19
 - Destination number (Room Monitor) ... 39
 - Dialing
 - using Quick Dial 30, 40
 - using the directory 29

- Directory 28
 - copying number from text 30
 - managing entries 29
 - opening..... 18
 - order of entries 29
 - saving anniversary 30
 - saving entry 28
 - sending entry/list to handset..... 30
 - using to enter numbers..... 30
- Display
 - backlight..... 41, 42
 - changing display language 41
 - colour scheme..... 41
 - directory memory..... 29
 - in idle status..... 14, 21
 - memory (Resource Directory) 45
 - missed anniversaries 33
 - missed appointments/
 - anniversaries 37
 - network mailbox message 34
 - screensaver..... 41
 - setting 41
 - slide show..... 41
- Display keys 2, 19
 - assigning..... 40
- E**
- Earpiece volume 42
- ECO DECT 35
- E-mail address
 - copying from the directory 30
- End call key..... 2, 26
- Ending, call 26
- Entry
 - saving (Network Mailbox)..... 34
 - selecting from directory 29
- Error tone 45
- Expert mode..... 24, 47
- Extra codes 15
- F**
- Fast access
 - network mailbox..... 34
- Firmware update..... 50
- FLASH key 2
- G**
- Group call 27
- H**
- Handset
 - activating/deactivating..... 21
 - advisory tones 45
 - colour scheme..... 41
 - contact with liquid 47
 - de-registering 11
 - display Backlight..... 41
 - display backlight..... 41, 42
 - display language..... 41
 - earpiece volume 42
 - idle status 21
 - keypad backlight 42
 - large font..... 41
 - list 18
 - muting..... 27
 - registering 11
 - restoring to factory settings..... 46
 - screensaver..... 41
 - set up for use 9
 - setting 40
 - speaker volume..... 42
 - using Room Monitor 38
- Handset mode 27
- Handset operating time
 - in Room Monitor mode..... 38
- Handsfree
 - set profile 43
- Handsfree profile..... 43
- Headset socket 16
- Hearing aids 6
- I**
- Icon
 - alarm clock 37
 - for new messages..... 33
 - keypad lock 21
 - ringtone 44
- Idle status
 - display 14, 21
 - returning to 21
- Incorrect entries (correction) 19

Index

- Industry Canada Certification 51
- Installing, base 8
- Internal
 - call. 27
 - making calls 27
- K**
- Key
 - assigning to a function or number 40
- Key 1 (fast access) 2
- Keypad backlight 42
- Keypad Lock 21
- Keys
 - control key 2, 18
 - delete key 19
 - display keys 2, 19
 - end call key 2, 26
 - fast access 2
 - FLASH key 2
 - message key 2
 - on/off key 2
 - pound key 21
 - quick dial 30
 - side keys 2
 - speaker key 2
 - star key 2
 - talk key 2, 26
- L**
- Language, display 41
- Large font 41
- List
 - answering machine 33
 - call lists 32
 - handsets 18
 - missed calls 32
 - network mailbox 33
- Local area code 15
- Lock
 - activating/deactivating Keypad Lock . 21
- M**
- Making calls
 - accepting a call 26
 - external 26
 - internal 27
- Manual redial 31
- Medical equipment 6
- Memory
 - directory 29
 - resource directory 45
- Menu
 - end tone 45
 - opening 18
 - overview 24
 - using 20
- Menu display
 - expert mode 24, 47
 - standard mode 24, 47
- Message key 2
 - opening lists 33
- Microphone 2
- Missed
 - anniversary 37
 - appointment 37
 - calls 32
- Muting the handset 27
- N**
- Network Mailbox 34
- Number
 - as destination for Room Monitor 39
 - copying from directory 30
 - copying to the directory 30
 - entering Network Mailbox number ... 34
 - entering with directory 30
 - saving in directory 28
- O**
- On/Off key 2
- Order in directory 29
- P**
- Package contents 7
- PC interface 49
- Picture
 - caller 28, 44
 - deleting 45
 - renaming 45
- Pound key 21
- Power adapter 6

Q

Quick Dial 28, 40

R

Range 8

Redial 31

Registering (handset) 11

Reminder call 31

Resource Directory 44

Ring Delay 42

Ringtone

changing 43

setting volume 43

Ringtone deactivated for

anonymous call 44

Room Monitor 38

S

Screensaver 41

Search directory 29

Sending

directory entry to handset 30

Sensitivity (Room Monitor) 39

Service (Customer Care) 54

Setting the date 13, 25

Setting the time 13, 25

Setting up

handset 9

Side keys 2

Signal tone, see Advisory Tones

Slide show 41

Snooze mode 38

Sound, see Ringtone

Speaker

key 2

mode 27

Specifications 48

Standard mode 24, 47

Star key 2

T

Talk key 2, 26

Troubleshooting 47

U

Update 50

USB connection 16

V

Viewing the Network Mailbox

message 34

Volume

earpiece 42

handset speaker volume 42

loudspeaker 42

ringtone 43

W

Warning tone, see Advisory Tones

Writing and editing text 48