

Attention:

This handbook contains important security measures and the correct use of the product information, in order to avoid accidents. Pls make sure to reading the manual carefully before use the device.

- Please don't be in high temperature, moisture or very dust place
- Please don't be in high temperature, Especially in summer don't put the device in the car when Windows closed.
- Avoid fall or Violent collision of the device, don't make the TFT display screen were violent tremor, This could cause TFT display screen abnormal or damage.
- Please choose the appropriate volume, Use headphones shoulds not be too big volume, If feel tinnitus, Lower the volume or stop using it
- please charge in the following condition,
- A. The battery power ICONS shows have no power
- B. The system automatically shut off, startup after power off soon
- Operation buttons no response
- D. The machine that the top right corner show red icons
- When the device in the format or ongoing upload and download file, please don't suddenly disconnect, This could cause application error.
- causes of erased the memory, The company shall not be liable for any responsibility, please follow the user manual for the standardized operation to use the device.

For those who because of damage to the product, repair, or other

 Don't disassemble the product, don't use alcohol. Thinner or benzene to scrubbing products

 Don't use the device one of the place of prohibit to use electronic equipment in regional (such as the plane)

> Please don't using the Tablet PC when you in driving or walking down the street,

USB just only be used for data transmission

The company reserves the right to improve product, products specification and design have any change, The information is subject to changes without prior notice.

(This tablet is no waterproof function)

[Remark] All pictures in this manual is just for your reference, products specification and design have any change, The information is subject to changes without prior notice.



Capacitive touch panel: In The Operation, to click, dragging on the

1.2 POWER startup: Long Press and hold the power button, the system will enter the main interface shutdown: In the main menu interface, Press the power button about 5

second to shutdown, The system can hint "power off" option, Clike"ok". you can safely shut down. Lock screen: Short press Power button to lock screen or unlock screen.

Remark 1. When power is empty, system will shut down automatically. 2.lllegal turn off the device, restart will scan and restore the disk, it may take longer time to enter into system

Short Press BACK button will return the last interface.

Recording 1.5 Volume +, Volume-

the buttons on top Volume +, Volume-achieve changes in the volume. 1.6 earphone jack

3.5 mm standard earphone lack

1.7 TF card TF-CARD solt: external T-FLASH card

1.8 Mini USB

transmission, charging and external connection USB flash drive 1.9 DC Adapter For charging, your tablet battery 1.10 Recovery When the Tablet under the condition of the crash, upgrade firmware. 1.11 Video output Intreface MDMI output interface 2. First use

2.1 Battery management and charge

battery power before charge it

Before first use, please set the device's battery is fully charged Just need to connect the adaptor or USB interface, then you can The first two times charging please keep about 6 hours, after that you

MiniUSB jack: you can use it to connect the computer for data

just need 4 hours to charge. [Remark]: This tablet using Built-in type polymer battery, Charge must be to choose standard adaptor (Input: AC110~240V 50/60Hz Max;

180MA., Output: DC5.0~5.5V/1.5A), this device without supply DC charging, USB interface can charge, Choose USB interface to charger During the charging, the battery icon will scroll When finished charging, battery icon will become green and stop rolling

In order to prolong the service life of the machine, suggest use out

【Remark】: 1. If you long time don't to use this Tablet, ,in order to avoid power consumption caused damage,pls charge/play the battery once a

2. After low battery shut down, connect DC adaptor, device will remind low battery, charging, need to wait some time until the battery is enough power to enter into main menu.

Device charging should be in standby status for reach normal

Because with device and screen consumption, it may cause longer

2.2 Connection with PC

charging time.

U Use USB cable to connect device to PC, device will pop up the USB connection window, click Turn on USB storage to connect to PC



Into the load mode, you can copy, delete the file on thedevice and the file on the memory card.

3. Equipment operation interface

3.1 Main interface describe

After startup will enter the main interface




Management main interface software ICONS: long press the icons 3 second, after the icons will biger, then you can drag anywhere in the

interface.

Sur-DNs ReTS REZ

Delete icons: long press the icons 3 second, drag the icons to the Recycle Bin icon, once it become red, Loosen your hand, after that you can delete icon

You touch the screen keep a time, appear the dialog box"Add yo Home screen" as shown below:

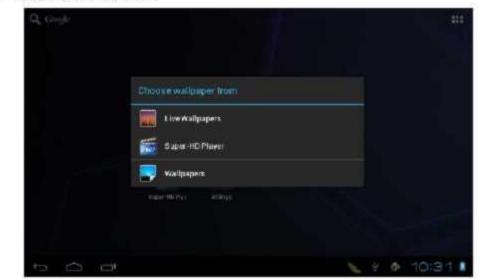

3.2 status bar describe

 The status bar above of the screen Top left display main interface software, T-Flash card, USB connection status and so on Top right display the battery, battery charge icons, current time, set

time, Settings Menu, ESC button.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful

residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged

try to correct the interference by one or more of the followingmeasures: -- Reorient or relocate the receiving antenna. -- Increase the separation between the equipment and receiver. -- Connect the equipment into an outlet on a circuit different from that to which the

receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help.

3.3 Use touch panel

Device equipped with a touch screen. Following the main touch screen area is described, and describes some of the tips for how to use the touch screen. No matter which interface you are on the screen, can go back to

main screen through pressing the soft key on the bottom right corner of the main screen. [Attention] The main screen soft key functions as the machine

In different applications, by tapping the back soft key son the

In different applications, by tapping the menu key son the upper right corner of touch screen, the screen will appear the operation setting interface as follows,

bottom right corner on the touch screen, you can return to its interface on

[Remark]: The main screen soft key functions as the machine



In the main interface, you can touch the icon to open the APPs In different browser(file, music, video, pictures), You shift and drag the

scroll bar, so that the file list can up or down to roll.


4. Equipment basic set


Setting: Click setting Icons , enter setting Interface





4.1 Silent mode, Volume, Notification ringtone, Audible selection, Screen lock sounds

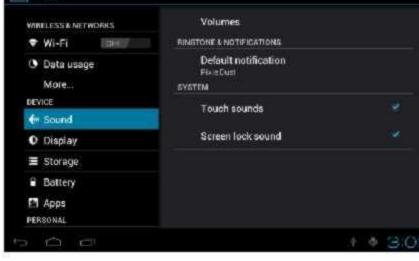


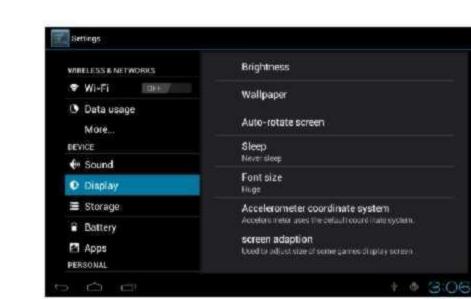

4.2 Application Manage applications



4.3 Privacy

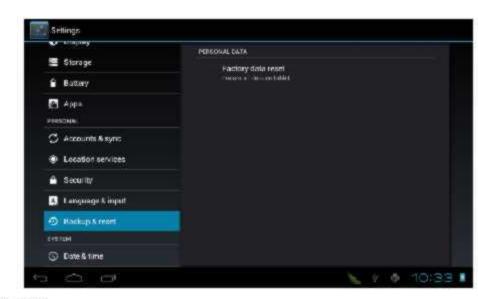

Unknown sources: Click "Unknown Sources", then click "OK" Manage application: manager and uninstall Application 【Remark】: when you Firmware Upgrade, pls close the USB connect

How to uninstall?

1. enter setting">"Application">"Manage application" And then there will be installed the program list 2. Click you want to uninstall icons, will enter the following interface 3. Click Uninstall, then you can felete the application



Factory data reset



Remove TF card, view of the available storage space

Spelling correction


谷歌拼音输入法 Select Language: 54 kind of national languages are available interface just suport 14 language, Android keyboard: Android keyboard setting Sound on Key-press Show suggestions: Display suggested words while typing

4.6. Date & time setting Set date, set time, Select time zone and select date format

Automatic date & time Use network-provided time Automatic time zone Erase SD card Use 24-hour format Enable media scanning on usbhost1 [Remark]: pls touch option"delete SD card", so that can safety to

romeve SD card 4.5. Language & keyboard

Setting: (Language), text input and automatic error correction

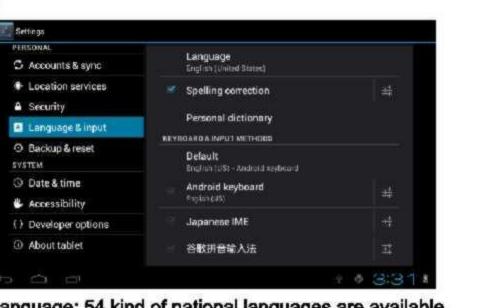

Remark: Android system can support 54 kind of language, now manu Auto-complete: Specebar and punctuation automatically insert highlighted word

4.7 Developer options

Choose USB work pattern: OTG/HOST/SLAVE...

Allow mock locations Desktop backs a password

Strict mode enabled

4.8 About tablet



5. Apps Install and manage

This Tablet can support Android APP in market by third party, most Apps can install in the network, can copy to NAND FLASH or SD card. Click Appinstaller icon, will appear Install, manage, Exit options. Install: Click install, enter Apk install interface

Separately for Internal Memory disk and SD Card disk. Selec the APK you would like to install, click it to install, go back to main menu, will display the installed app you just selected.

Manage: click manage, enter third party interface

Click install icon, will enter Action interface

Remark: some 3rd APP must install properly by memory

card,downloaded 3rd paty app may not install properly on device.

6. Problem solution

6.1 Device can't to open 1. Check the battery power

2. Connect adaptor first, then check again 3. After charging then can't to open, pls contacy with the supplier 6.2 After startup the screen or the opening picture has been

appear, the the device appear shutdown 1. Power is not enough, please charge

Headset can't hear the voice 2. Pls check the volume whether set to 0

3. Check the music file wherther damaged. Try playing other music, if the file have damaged may lead to serious noise or hop sounds. 6.3 Can copy file or paly music and so on

1. Pls check between computer and device is correct connection check the memory storage space is already full

3. checl the USB cable is good or not 4. USB connection is disconnected

7. Basic function

Android 4.1 Actions ATM7023 1.2Ghz CPU+3D GPU+VPU dual core Nand Flash 8GB Capacitive/Resistance Touch panel(Optional) AMD graphic acceleration, full suppotr. OpenGL ES2.0(AMD Z340)and Open VG1.1(AMD Z160)@27M Tri/Sec. WIFI wireless Support 802 .11b/g/n standard support local WAPI wireless protocol standard. Support various of office software based on Android platrofm. to realize office functions, Such as Word/Excel/PPT/PDF Max,32GB TF card. USB high speed 2.0.Can be connected to the computer to Support Harddisk, digital Camera, Mobile, USB, card reader and able to connect printer ect OTG function HDMI standard mini port, support HDMI1.4, support full screen output to HDMI Devices Maximum support hardware decoding 720P and 1080P, and 480 video encoding. WMV/ASF/MP4/3GP/AVI/MKV/VC-1/DIVX/MPEG-2/MPEG-4 /H.263/H.264 720P HD 1080i Support several of entertainment games ased on Android Support many internet applications like web, social, video, chatting and so on. Assemble e-book tool to read based on Android platform. Built-in photo player, and take it as a photo frame or calendar Built-in 3Dgravity sensor, to make screen realize 360 degree