

GS.TRAQ
TR-206
User Manual
Version 1.2



CONTENT

SAR Statement	4
1 Safety	6
2 TR-206 Introduction	8
Brief Introduction	8
Features	8
3 Specifications	10
Hardware Specifications	10
4 Getting Started	12
Included accessories	12
Preparing your SIM Card for GPRS-activation	13
Installing The SIM Card	13
Charging the Battery	15
Powering the TR-206 On/ Off	15
5 TR-206 Device Configuration	16
Standby Mode	22
Keypad Lock	25
6 Phone Call Function	27
Making Phone Calls	27
Answer or reject the incoming calls	28
Adjusting the earpiece volume during a phone call	28
7 Phone Book	30
Searching Your Contacts	30
8 Call List	31
9 Settings of Tracker	32
Vibrating and ring	33
Ringing volume	33
Alarm Clock	34
Logger	35
Auto Key Lock	36
Date and Time	36
10 Frequent Operation	38
Answer/ hang up the phone call	38

Adjust the volume level	38
Speed dial and phone book dial	39
Sending out an emergency message to the assigned phone number(s) and/ or GPRS service server.	40
11 Installing The USB Driver and Device Utility For The TR-206	42
Install USB Driver	42
Install Device Utility	49
12 Device Utility Operation.....	50
Logging into the Device Utility	51
TR-206 Device Information	54
Adding phone numbers to your phone book and assigning phone numbers to speed dial buttons	56
Setting up phone number(s) to receive emergency messages	57
Setting up GPRS parameters	58
Setting up the ring tone and alarm clock.....	59
Setting Up The TR-206 Logger.....	61
Setting up the language of the "Device Utility".....	62
13 Simple Command.....	63
14 Troubleshooting and Safety.....	65

SAR Statement

Your tracker is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the FCC of USA. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. *

Tests for SAR are conducted with the tracker transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the tracker while operating can be well below the maximum value. This is because the tracker is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a tracker is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this tracker when tested for use at the ear is 1.32 W/Kg and when worn on the body, as described in this user guide, is 0.742 W/Kg. (Body-worn measurements differ among tracker models, depending upon available accessories and FCC requirements). While there may be differences between the SAR levels of various trackers and at various positions, they all meet the government requirement for safe exposure.

* In the United States and Canada, the SAR limit for GSM transmitter and receiver used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

Use only the supplied or an approved antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage the tracker, or result in violation of FCC regulations. Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

1 Safety

- In order to reduce the risk of an electromagnetic wave, please use this tracker accordingly.
- Battery Usage :
 1. The battery might explode if it is placed in the device incorrectly, or it is in an extremely high temperature environment.
 2. Charge the battery in a cool dry place.
 3. The included battery is manufacturer-approved to use with the TR-206. Do not use any other non-manufacturer approved battery. It might damage the tracker. If you need to change the battery, please contact your local GlobalSat dealer.
 4. Please dispose of any unused batteries according to your local regulations.
- Persons with a pacemaker should keep the TR-206 more than 20 cm (6 inches) from their pacemakers when the TR-206 is powered on. Do not put the TR-206 in a breast pocket; doing so could create interference with your pacemaker.
- Turn off the TR-206 near medical equipment.
- Turn off the TR-206 when you are aboard an airplane. Not doing so can cause interference with aircraft.
- Do not use the TR-206 at a gas station or in a highly flammable area.

- The TR-206 must be used without interfering and being interfered by local legal broadcasting stations.

2 TR-206 Introduction

Brief Introduction

The **TR-206** is targeted towards children and the elderly. It not only works as a tracker but also as a basic cell phone with two-way voice communication to keep in touch with those whom are important to you, with pre-programmed phone numbers via a single button dialing. It also has an extra long battery life, and has an easy to use interface. The TR-206 come with a SOS emergency panic button that when pressed sends a text message to the assigned phone number(s) to alert them to your emergency. The device can record, track, and geo-tag its position via an "Over the Air" (OTA) command to the tracking unit. The device can also be setup with a "Geo-fencing" function, when the device is taken out of the "geo-fence" area it will alert the assigned phone number(s).

Features

1. Four-band GSM 850/900/1800/1900MHz personal tracker
2. Voice/SMS/GPRS communication.
3. Omni-directional GPS/GSM antenna
4. Built-in highly sensitive GPS chipset
5. Two-way voice communication
6. The TR-206 has the capability of being found instantly via the internet based location/tracking

service.

7. Up to 20 contacts in the phone book.
8. The TR-206 is equipped with an emergency panic button.
9. Remotely set the tracker configuration by SMS or GPRS or directly set via USB connection.
10. Supports Geo-fencing
11. The TR-206 sends SMS and tracker status to the assigned phone number or service platform when the battery power is low.
12. The TR-206 supports vibration and ringing functions.
13. The TR-206 uses a rechargeable and replaceable 1100 mAh Li-ion battery for a long standby time.
14. The TR-206 comes with an alarm clock function.

3 Specifications

Hardware Specifications

GSM Module :	GSM 850/900/1800/1900 MHz , GPRS class 10
GPS Chipset :	High sensitivity GPS chipset
Frequency :	L1, 1575.42 MHz
C/A code :	1.023 MHz chip rate
Channels :	66 channels
Antenna Type :	Omni-directional GPS antenna
Default Datum :	WGS-84
Operation Temperature :	-20 ° to 60 ° C
Charging Temperature :	0 ° to 45 ° C
Storage Temperature :	-20 ° to 75 ° C
Humidity :	5% to 95% Non-condensing
Dimension :	84.5 mm(L) x 42.2 mm(W) x 17.2 mm(H)
Weight :	70g
Battery :	Rechargeable and replaceable 1100 mAh Li-ion battery
Charging connector :	DC 5V
Standby time (GPS off, GSM on) :	Up to 1 week
Periodic Report Operation time (60-second report interval) :	10~13 hour (depends on environment)
Talking time :	2 ~ 3 hour

 
USB Port :	Mini USB, used to connect to PC and power-charging ◦
Sensor	Motion sensor ◦
Certification	CE, FCC, NCC, RoHs

4 Getting Started


Included accessories



TR-206

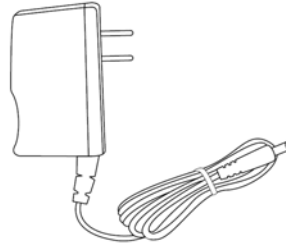


AC Charger

 

Mini USB Cable



 1100 mAh Li-ion Battery

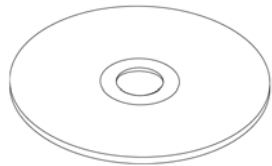

CD-ROM

 
Preparing your SIM Card for GPRS-activation

1. Inform your GSM service provider to activate the GPRS function, get the APN information, the user name, and user password.

Installing The SIM Card

Steps for installing the SIM card are as follows :

1. Turn the TR-206 on its face with the battery compartment facing up.
2. Open the battery cover.
3. Take out the battery after opening the cover.
4. Insert the SIM card into the SIM card slot, as shown on the device.
5. Place the battery back into the battery compartment, and put back the battery cover.

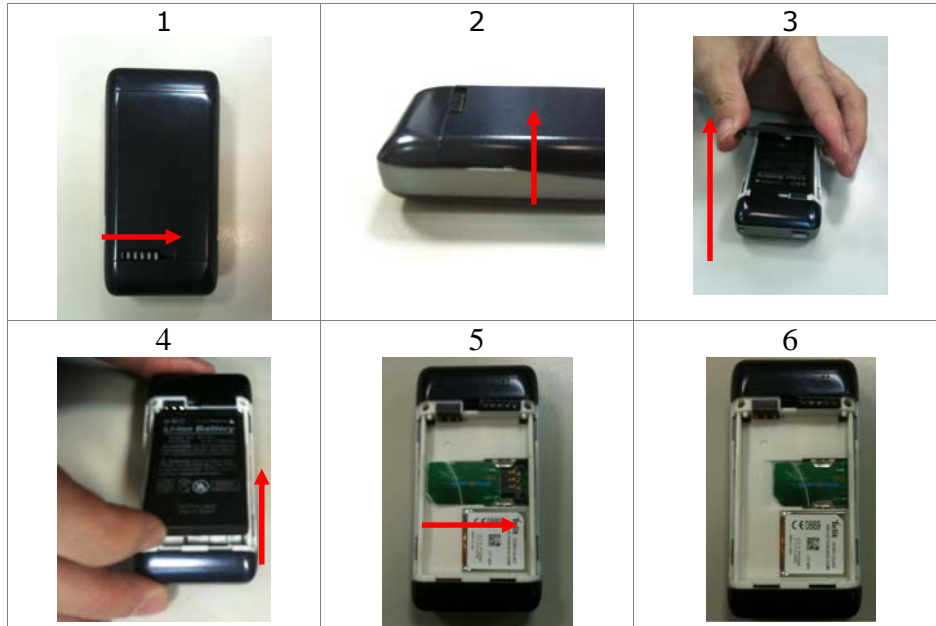

Charging the Battery

If you are using the TR-206 for the first time, charge the TR-206 for at least 5 hours. (The included battery is manufacturer-approved for use with the TR-206 tracker. The use of any other battery might damage the tracker. If you need to change/return the battery, contact your local dealer.)

Powering the TR-206 On/ Off

Power On : Press and hold the Power key for 3 seconds. The LCD and backlighting will turn on. If you are powering on the TR-206 for the first time the TR-206 will automatically adjust the time after the tracker gets a GPS fix.

Power Off : Press and hold the Power key for 3 seconds. To be sure the TR-206 is powered off, the words "Shutting down" will be shown on the screen just before powering down.

5 TR-206 Device Configuration

Front and Side



Back and bottom



(1)	Receiver	Receiver. Used for listening to the other party during the phone call.
(2)	LCD	In standby mode, it shows the time and tracker status. During the phone call, it shows the talk time. When there is an incoming call, it shows the phone number of the incoming call.
(3)	Answer key/Call List/Selection key/Unlock keypad	<p>When there is an incoming call, press the GREEN phone key to answer the phone call.</p> <p>In standby mode, press the GREEN phone key to access the Call List.</p> <p>In "Settings Menu", press the GREEN phone key to confirm that setting.</p> <p>When the keypad is locked, click Speed dial #3 and then press the GREEN phone key to unlock the keypad.</p>

<p>(4)</p>	<p>Speed dial 1 (Long click)/ Increase Volume/ Scroll Up/ Access to Setting Menu</p>	<p>In standby mode, hold the button down to dial the speed dial that the #1 speed dial number is assigned to, or press the button to access the "Settings Menu." During a phone call, press the speed dial #1 to increase the volume level. In "Settings Menu", pressing this button will scroll up.</p>
<p>(5)</p>	<p>Power key (Long click)/ Reject key/ Exit key</p>	<p>Hold down to power the device on/off. When there is an incoming call or during a phone call, press to reject or hang up the call. In the "Settings Menu", press to cancel the setting and return to the last page.</p>
<p>(6)</p>	<p>SOS button (Long click) /GPRS connection</p>	<p>Hold to send an emergency message to the assigned phone number or service platform. Press to connect to your</p>







		GPRS server service.
(7)	Speed dial 2 (Long click) /Phone book	In standby mode, hold down to speed dial the #2 assigned phone number. In standby mode, press to enter the phone book.
(8)	Speed dial 3 (Long click) /Decrease the volume / Unlock keypad	In standby mode, hold down to speed dial the #3 assigned phone number. During the phone call, press to decrease the volume level. When the keypad is locked, press the #3 and then press the "Call" key to unlock the keypad.
(9)	Speed dial 4 (Long click)	In standby mode, hold down to speed dial the #4 assigned phone number.
(10)	Microphone	Microphone for phone calls
(11)	Lanyard Hole	Used for hanging a lanyard to prevent the tracker from accidentally being dropped.
(12)	Battery cover switch	To open the battery cover slide the switch to the left, to lock the battery cover slide the switch to the right.





(13)	Speaker	Used to emit the ringing tone and alarm clock tone.
(14)	Mini USB Port	Used for charging the TR-206, or setting parameters by connecting it to your PC

 Standby Mode


Status Icons



 GSM signal strength	The more bars that are visible, the stronger is the signal.
 Power status	Battery power status.
 Ringing setting	This icon will be displayed when the ringing function is activated.
 Vibration setting	This icon will be displayed when vibration function is activated.
 Alarm clock	This icon will be displayed after an alarm is set.
 logger	This icon will be displayed after the

	GPS data logger function is activated.
 Keypad Lock	This icon will be displayed when the keypad is locked.
 GPS status	 Has a GPS fix ,  No GPS fix

 Text Info

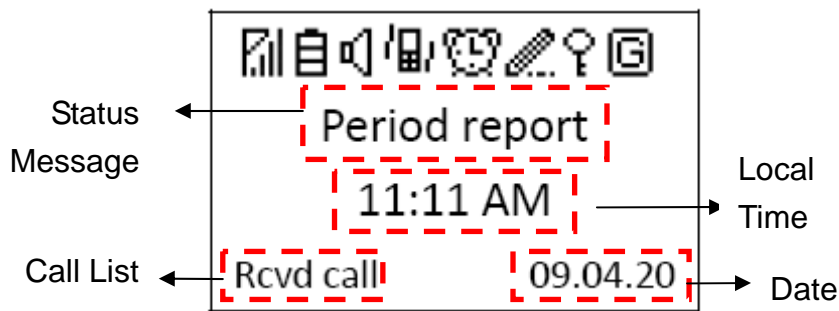

Status Message	Shows the present tracker status. For example, Period report, Missed Call, Low Battery, Clock Alarm, etc.
Local Time	Shows the local time after your time zone is selected. The default time

	<p>zone is GMT+00:00. If this is not your time zone, access the “Date and time” settings in the menu selection to set the correct time zone.</p>
Call List	<p>Shows the most recently dialed, received, and missed calls.</p>
Date	<p>Shows the present date. When the tracker is used for the first time, the date is set to factory settings. The date will be adjusted to the present date after getting a GPS fix</p>


Note 1 : In order to conserve battery power and lengthen the operating time, backlighting will be turned off after 10 seconds of non-use. The LCD will be turned off after 30 seconds of non-use.

Note 2 : After getting a GPS fix, The TR-206 will display the correct local time and date.

Keypad Lock

In order to prevent the keypad from accidentally being pressed, the keypad will automatically lock after 10 seconds of non-use.

 
When the keypad is locked, the locked icon will be shown in the example below.

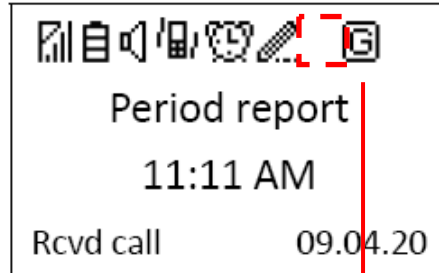

Keypad is not locked



 Keypad is locked

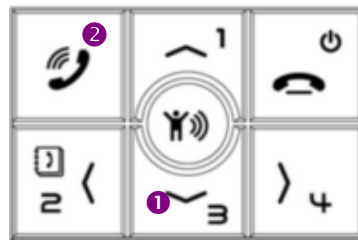


You can unlock the keypad by pressing the “Down” key first and then the “Call” key second.

6 Phone Call Function

Making Phone Calls

 
- You can have up to 20 contacts in your phone book. (Please refer to Chapter 11 for adding contacts to your phone book.)
- The first four phone numbers are auto assigned to the 4 speed dial keys. You can make a phone call to the assigned phone numbers by holding the speed dial keys in standby mode.

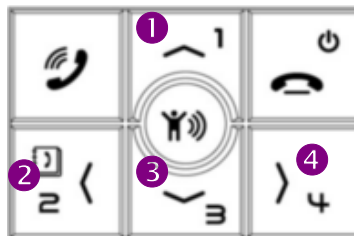

- **Making phone calls to the contacts from your phone book:** Press the “Left” button to access your phone book and use the “Up” and “Down” buttons to reach the desired contact, and then press the “Answer” button. If you want to cancel the phone call, press the “Reject” button.

Answer or reject the incoming calls

 - When there is an incoming call, press the “Answer” button to answer the call. As shown in the picture below.

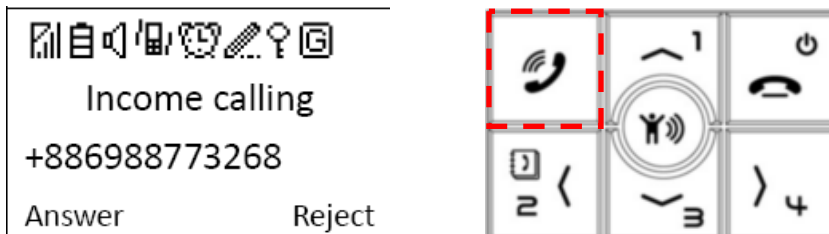


- To reject an incoming call or to hang up the phone call press the “Reject” button. As shown in the picture below.



Adjusting the earpiece volume during a phone call

- To adjust the earpiece volume during a phone call. Press the “Up” button to increase the volume level or “Down” button to decrease the volume level.


Calling Father
0988773268
|||||----
End Call

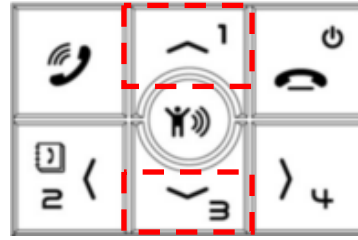 


7 Phone Book

Searching Your Contacts

 To access your phone book press the #2 button. You can have up to 20 contacts in your Phone Book.

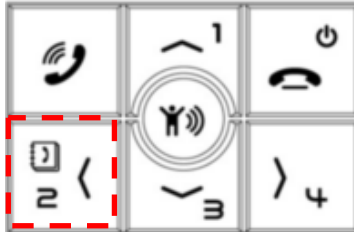


 After accessing to the Phone book, please refer to the picture below for an operation example.

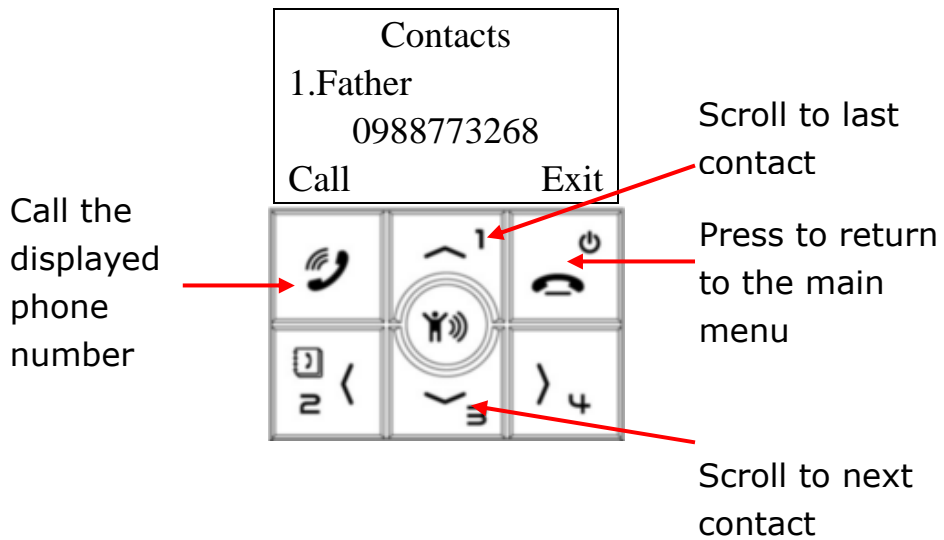


8 Call List

 In standby mode, you could short click "Call" key to access to the "Call List." System could separately record 10 sets of dialed calls, received calls and missed calls. If there are over 10 sets of call records, the latest record will replace the oldest record.

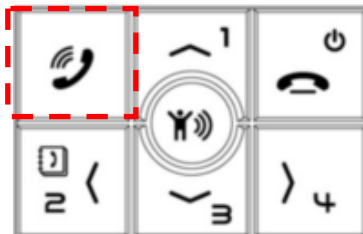


 After accessing to the Call List, please refer to the diagram below for operation.

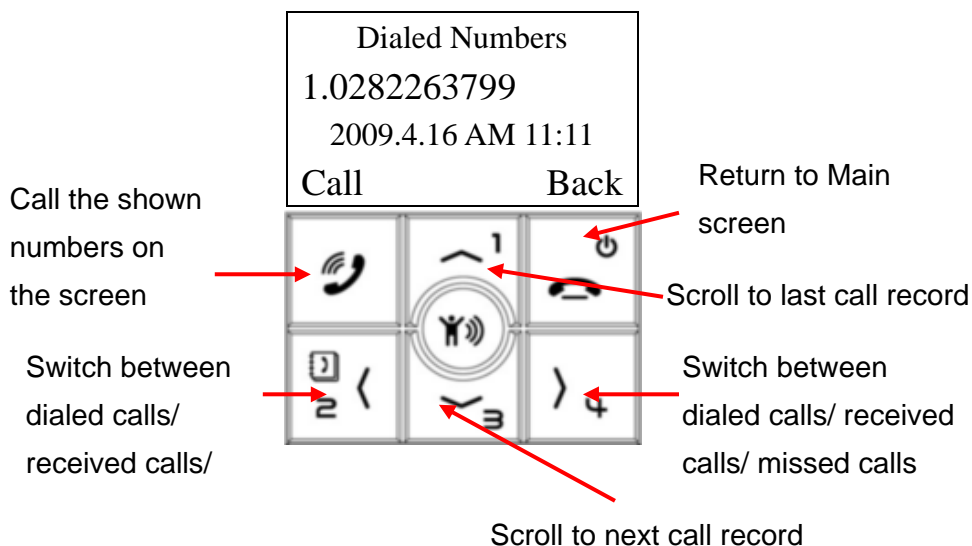

9 Settings of Tracker

 In standby mode, you could short click "Up" or "Down" key to access to the "Setting Menu."

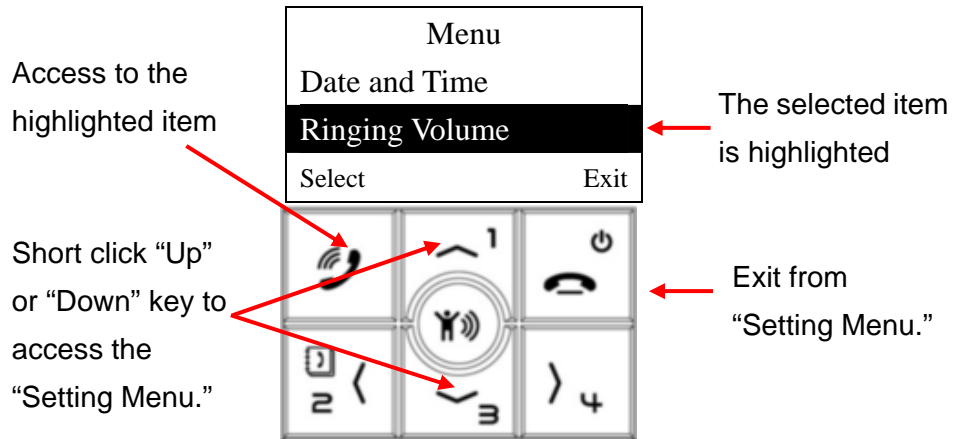

There are 6 settings in the Setting Menu as shown below.

- 1) Vibrating and ring
- 2) Ring volume
- 3) Alarm setup
- 4) Logger
- 5) Auto key lock
- 6) Date and time

Vibrating and ring

There are 3 selections for the “Vibrate and ring” setting: “Ring only”, “Vibrating only”, and “Vibrate and ring” .

Vibrate and ring	
Ring only	
Vibrating only	
Vibrate and ring	
Ok	Exit

Ringling volume

There are 4 selections for the “Ring Volume”: Low, Medium, High, and Progressive.

Ringling Volume	
Low	
Medium	
High	
Progressive	
Ok	Back

Alarm Clock

There are 3 settings for the alarm clock. After accessing the alarm clock menu, press the “Up” and “Down” keys to select the alarm clocks and then press the “Call” key for editing the alarm clock.


Alarm	
1.--	
2.--	
Edit	Back

There are 4 frequencies for the alarm clock: Daily, Recurrent, Once, and Disable. After selecting the frequency, click “Call” key to set the alarm time.


Alarm	
Daily	
Recurrent	
Once	
Disable	
Select	Back

Logger

 After accessing the “Data Logger” settings, click the “Call” key to start the GPS data logger. The tracker will start to record the GPS location and save the data in the memory. Press the “Call” key again to stop the GPS data logger. (If there is not enough memory to record the data; the most recent GPS location will replace the oldest one.

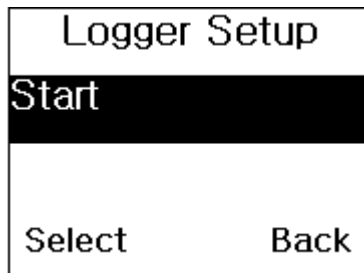


Start Data Logger

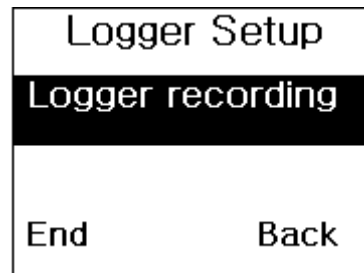 

Stop Data Logger

Auto Key Lock

 
After accessing the “Auto Key Lock” setting, choose either to turn on the feature or turn off this feature. The default is set to “On.” After turning on the function, the keypad will automatically lock after idling for 10 seconds.

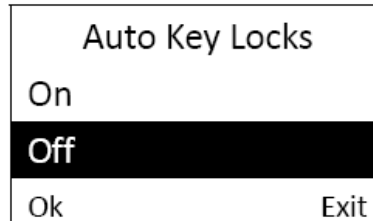

Date and Time

To set the appropriate “Time Zone”, “Daylight Saving” features, and “Time Format” in the “Date and time” settings menu, follow the below steps:

 Time Zone: Use the “Up” and “Down” buttons to reach your time zone and press the “Call” button to select it.

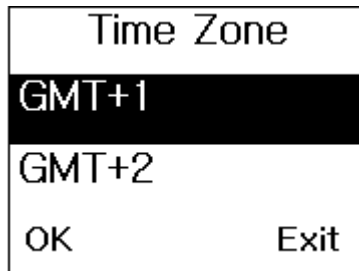

Daylight Saving: Use the “Up” and “Down” buttons to select Standard time or Daylight saving time and then press the “Call” button to save the setting.

Daylight saving	
Standard time	
Daylight saving	
Ok	Exit



Time Format: Use the “Up” or “Down” buttons to select the “24 hours” setting or the “AM/PM” setting as the time format, and then press the “Call” button to save the setting.

Time format	
24 hours	
AM / PM	
Ok	Exit


10 Frequent Operation

Answer/ hang up the phone call

  - When there is an incoming call; you can press the "Call" button to answer the phone call.

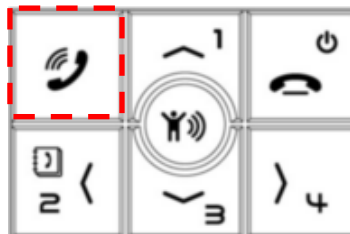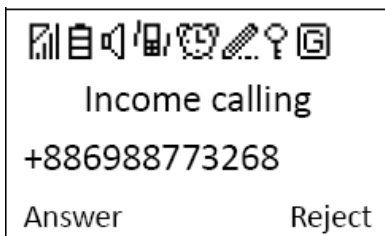

 
- To reject an incoming call or to hang up the phone call, press the "Reject" button.

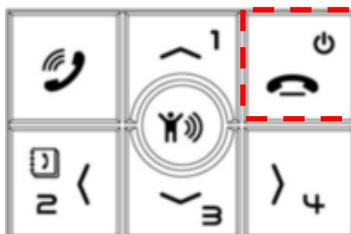

Adjust the volume level


- During the phone call, you can use the "Up" button to increase the volume level or the "Down" button to decrease the volume level.

Calling Father
0988773268
|||||----
End Call

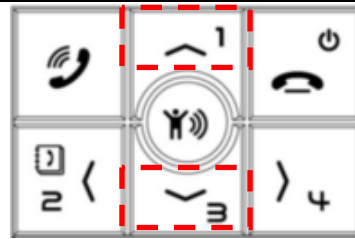 

Speed dial and phone book dial

 - To add contacts to your phone book you must use the "Device Utility." The TR-206 has the capacity to store up to 20 phone numbers in its "Phone book".
- Your first four contacts in your phone book are auto assigned to the TR-206's speed dial buttons. To dial a speed dial contact press and hold the assigned button to call the contact. Please refer to the diagram below for the corresponding position of the speed dial buttons.

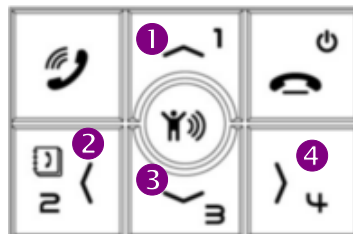

- To call the contacts in your phone book, press the #2 button with the phone book icon on it to access your phone book and use the #1 or #3 button to search your phone book, when you have found the desired contact press the "Answer" button to call the contact. To cancel the phone call, press the "Reject" button.

Sending out an emergency message to the assigned phone number(s) and/ or GPRS service server.

- To setup the assigned phone number(s) with the emergency messaging service you must use the device utility. The TR-206 has the capability of having up to 6 phone numbers to setup with the emergency message service. In standby mode, after pressing the emergency button, the TR-206 will send the emergency message to the assigned phone number(s) and/ or to your GPRS service server. In order to prevent the emergency button from being accidentally pressed, the emergency button on the TR-206 needs to be held for 3 seconds until the device vibrates, after that the message will be sent out.



IMPORTANT : The TR-206 will send out an emergency message regardless if the device has a GPS fix or not. What this means that the receiver of the emergency message will receive the message without accurate GPS coordinates.

11 Installing The USB Driver and Device Utility For The TR-206

Install USB Driver

- Insert product CD to the CD ROM of PC. Your PC will automatically open the program for the installation and prompt you to select an installation option.



- Click on the “**USB driver**” option. A folder named “**USB Driver**” will open. If the operating system of your PC is XP or Vista, please click on the “**XP,Vista**” folder and then click

“STM32 VCPDriver_V1.1_Setup.exe” to install. Follow the screen instruction to finish the driver installation.

 
- If the operating system of your PC is Windows 7, please click on the “**Windows 7**” folder. Then please follow the instruction below to install USB driver.

- Right click on this “Windows 7” folder and click on copy. Go to your desktop and click paste. This folder will then be copied to your desktop.


- Connect your TR-206 to your PC using the included USB cable.

- Turn on the power to your TR-206.


- Press the Reject/Power button. A window as shown below will be brought up. Click on the “Install USB Driver” option.

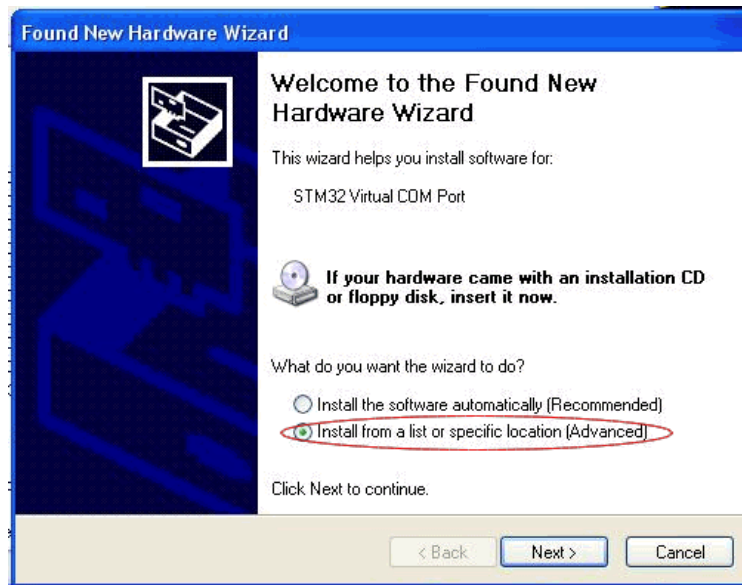

 
- Select “Install from a list or specific location [Advanced]” and click the Next button.

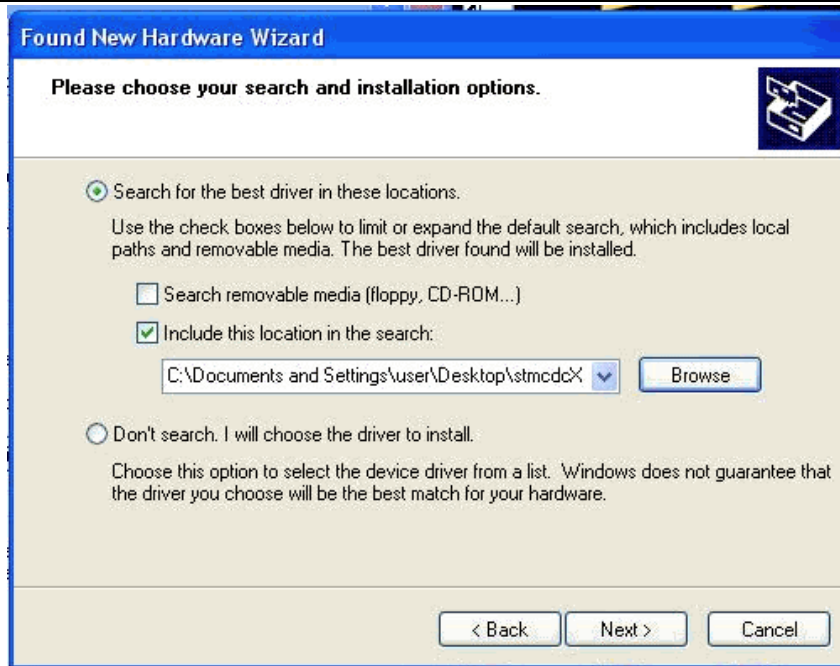

 - Click the **Browse** button and locate the folder you copied (stmcdc-x86-x64) to your desktop earlier and then click the **Next** button.

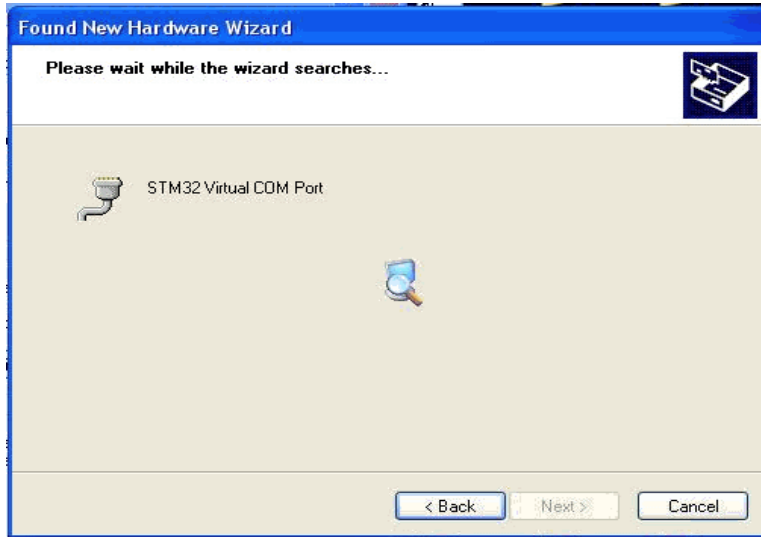

 - Windows will search the folder for the required drivers. When it is done, click the **Next** button.

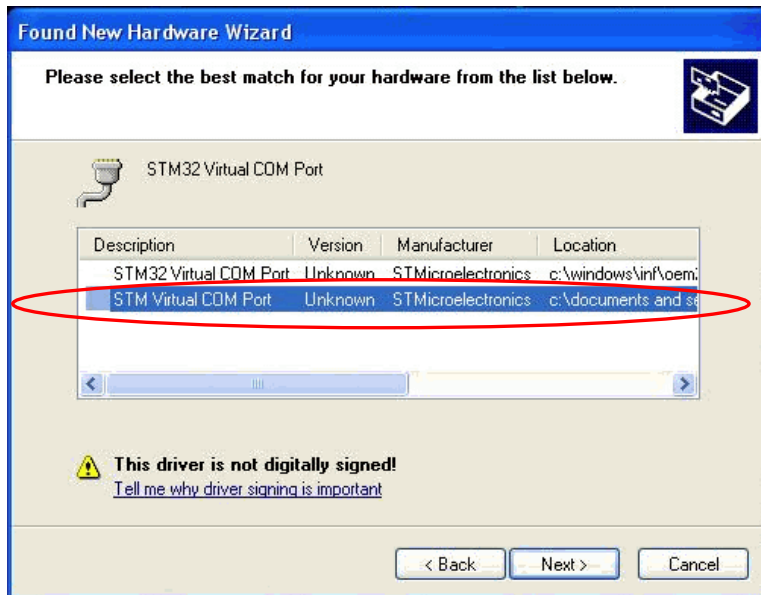

- Select “STM Virtual COM Port”, click the **Next** button.
- The window shown below will pop up.



- Click “**Continue Anyway**”.
- After you click on the “Finish” button (shown on the window below) the USB driver has been successfully installed!

 


Note:

The USB driver is installed on the COM port the TR-206 device is connected to. If you connect the TR-206 into a different COM port on your PC next time, you will have to install the USB driver on to that COM port.


Install Device Utility

1. Insert the CD into the CD-ROM drive of your PC. Your PC will automatically open the program for the installation and prompt you to select an installation option.
2. Click on the “**Install Device Utility**” option. Follow the on-screen instructions to finish the installation.

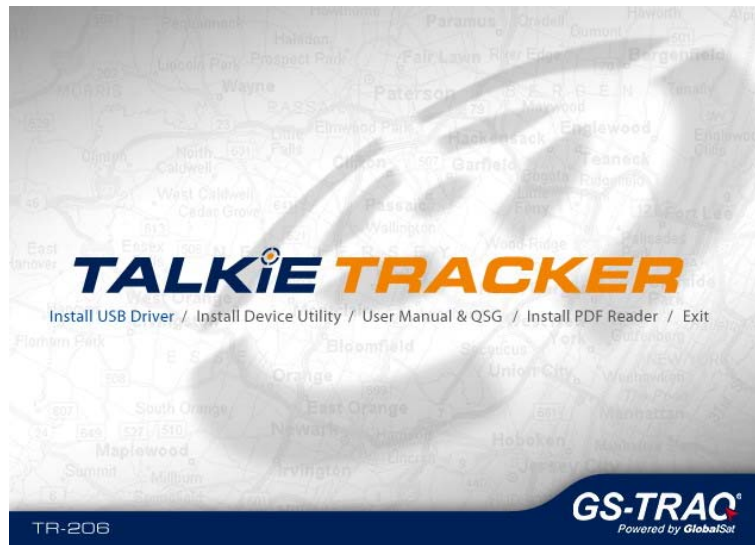

12 Device Utility Operation

Connect your TR-206 device to your PC via the supplied USB cable, and then launch the “Device Utility” program.

Click on the “**Hang up/ Power**” button  to enter the settings mode, from there the “Device Utility” will be able to detect your TR-206.


The image shown below is what you will see for the first time when you connect your TR-206 to your computer and open “Device Utility”.



The default name of your TR-206 is shown as the device IMEI number. To change the name click on “Device Information”.

Logging into the Device Utility

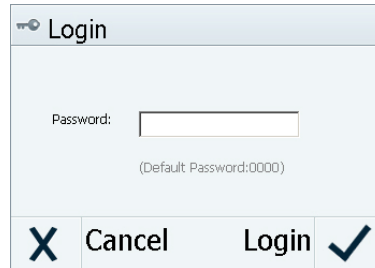


Click the “Login” button on the right corner of the home screen, once clicked you will be directed to the login screen. (see the screenshot below.)






The screenshot shows a login dialog box with a title bar containing a back arrow and the word "Login". Below the title bar is a "Password:" label followed by a text input field. Underneath the input field, the text "(Default Password:0000)" is displayed. At the bottom of the dialog, there are two buttons: "Cancel" with a red 'X' icon on the left, and "Login" with a green checkmark icon on the right.


Enter the default password and then click Login. (The default password is “0000”.) In order to protect your privacy, please change the default password in the “Device Information” settings.




Icon	Function
 Device Information	Set the device name, phone number, time zone, change the login password
 Contacts & Message	Add contact phone numbers in the phone book, assign the phone numbers for speed dial keys and receiving the emergency message.
 GPRS Parameters	Set the GPRS parameter and read the GPRS server address

 Ringling & Alarm	Set the ringing tone, alarm clock frequency, etc.
 Logger	Turn on/ off GPS data logger, export/ delete logger files.
 Setting	Set the language of Device Utility

TR-206 Device Information

Click  icon to access the device information settings. Here you can change the device name, the device phone number, the time zone, and your login password.



Device Information
about us "Device" information

TR206
IMEI: 357938020310017

Device Name:

Time Zone:

Daylight Saving: ON

Language:

AutoKey Locks: ON

Command and Software Password: (Max 15byte)

SIM Card PIN Code:

Device Phone Number:

Time Format:


Date Format:


← Menu
Apply ✓

Item	Description
Device IMEI	Your IMEI can be found on the packaging of the device or in the battery compartment.
Device Name	Enter the identification name of your TR-206
Device Phone Number	The phone number of the SIM card in your TR-206
Time Zone	Choose the local time zone

Time Format	Choose the time format shown on TR-206 LCD
Daylight Saving	Turn on/off Daylight savings
Date Format	Choose the date format shown on TR-206 LCD
Auto Key Locks	Turn on the Auto key lock function. Note: After turning on this function, the keypad will be locked after 10 seconds of idle.
Command and Software Password	Change the login password of Device Utility and the password of simple command. Default is 0000.
SIM card PIN code	Enter the correct SIM PIN for proper operation of TR-206. Wrong SIM PIN would result in power-on failure. And if still try to power on TR-206 over 3 times; the SIM card will be locked.

Adding phone numbers to your phone book and assigning phone numbers to speed dial buttons

Click  icon to access to the phone book and speed dial menu.

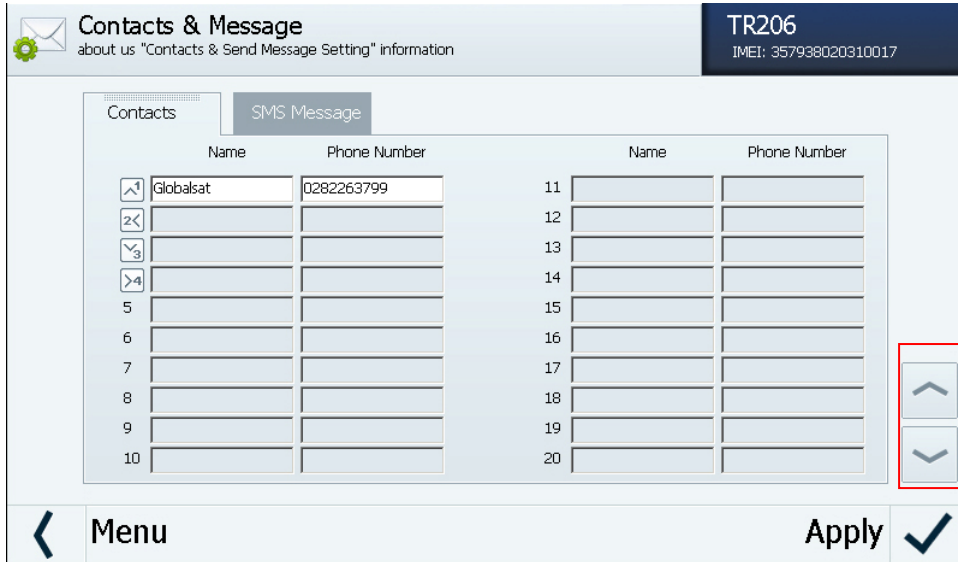

Contacts & Message


TR206
IMEI: 357938020310017

Contacts | SMS Message

	Name	Phone Number	Name	Phone Number
1	GlobalSat	0282263799	11	
2			12	
3			13	
4			14	
5			15	
6			16	
7			17	
8			18	
9			19	
10			20	


Menu | Apply

The TR-206 has the capability of having up to 20 phone numbers total. The first four phone numbers are automatically assigned to their corresponding speed dial buttons.

You could use the  buttons to adjust the order of the phone numbers. Click on the Apply button to confirm the changes.

Setting up phone number(s) to receive emergency messages



Click  icon and then click the “SMS Message” tab to access the SOS emergency message options.


The screenshot shows the 'Contacts & Message' settings interface. At the top, there's a header with 'Contacts & Message' and 'about us "Contacts & Send Message Setting" information'. On the right, it displays 'TR206' and 'IMEI: 357938020313672'. Below the header, there are two tabs: 'Contacts' and 'SMS Message', with the latter being selected and circled in red. The main content area is divided into two sections: 'Emergency Message' and 'SMS Report'. The 'Emergency Message' section has a table with 6 rows, each with a 'Name' field and a 'Phone Numbers' field. The 'SMS Report' section has a single 'Phone Numbers' field. At the bottom of the form, there is a 'Report Interval' set to 30 and 'SMS Format' options: 'Engineer Format' (unselected) and 'Text Format' (selected). A 'Menu' button is on the left and an 'Apply' button with a checkmark is on the right.


Item	Description
Emergency Message	Enter the phone numbers for receiving emergency message. You could set up to 6 sets of phone numbers. (Please set the phone number that could receive SMS.)
SMS Report Phone	Enter the phone number for receiving

Number	location reports
Report Interval	GPRS report interval
SMS Format	Choose the SMS format to be engineer format or text format

After you are done, click the Apply button to confirm the changes.

Setting up GPRS parameters

Click  icon to access the GPRS parameter settings.



GPRS Parameter
about us "GPRS Parameter" information

TR206
IMEI: 357938020313672

GPRS APN:

GPRS User Name:

GPRS Password:

DNS 1:

DNS 2:

Host/Port Settings:

IP: Port:


← Menu
Apply ✓


Item	Description
GPRS APN	Please contact your telecommunication service provider
GPRS User Name	

GPRS Password	for the parameters and then enter the value.
DNS 1	
DNS 2	
Host/ Port Settings	Only for displaying the server address of GPRS service

After you are done, click the Apply button to confirm the changes

Setting up the ring tone and alarm clock

Click  icon to access the ring tone and alarm clock settings.



Ringtone & Alarm
about us "Ring tone & Clock Alarm" information


TR206
IMEI: 357938020313672

Ringtone: Play Stop

Vibrate and ring: Vibrate and ring Ring only Vibrating only Mute

Ringtone Volume: Low Medium High Progressive

Alarm		Mon.	Tue.	Wed.	Thu.	Fri.	Sat.	Sun.
Recurrent	上午 12:00	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Disable								
Disable								


Menu
Apply 


Item	Description
Ring tone	Choose the ringing tone of incoming call. You could click Play button to play the ring tone and click Stop button to stop it.
Vibrate and ring	Choose the method of reminding user of the incoming call: Vibrate and ring, or Ring only, or Vibrating only, or Mute
Ringing Volume	Choose the ringing volume of incoming call :Low , Medium, High, Progressive
Alarm	<p>You could set 3 sets of alarm clock. There are 4 frequencies of the alarm clock: Daily, Recurrent, Once, and Disable. After selecting the frequency, please set the alarm time.</p> <p>If you choose "Recurrent" as the frequency, please choose what days to activate the alarm clock</p>

After you are done, click the Apply button to confirm the changes.

Setting Up The TR-206 Logger



Click  icon to access the TR-206 GPS data Logger settings.



Logger
about us "Logger" information

TR206
IMEI: 357938020310017

GPS Data Log Interval: Sec. ON

Data log Export to: CSV KML Drop no-fix data: ON

PS:GPS Data Log starts will continue to use of electricity.


< Menu
Apply


Item	Description
GPS Data Log Interval	Set the interval for recording GPS data. Check "ON" to start recording GPS data
Data log Export to	Choose the data to be exported into CSV or KML format. You could check "Drop no-fix data" to delete the no-fix data

Delete Data Log	After exporting the data, you could click “Delete Data Log” button to delete the data log in the TR-206
-----------------	---

After you are done, click the Apply button to confirm the changes.

Setting up the language of the “Device Utility”

 Click the  icon to access the Device Utility Language settings.

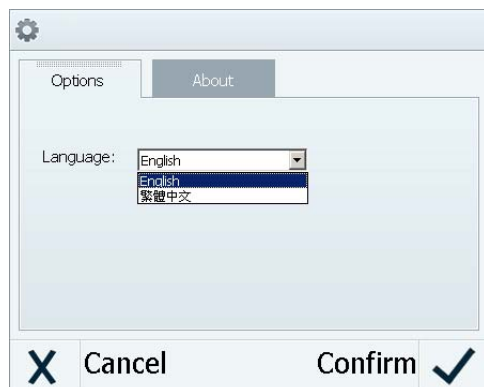

Select your preferred language from the pull-down menu of the available language options. After selecting your preferred language, click Confirm to change the displayed language of the Device Utility.

13 Simple Command

You could send simple commands to TR-206 by mobile phone's SMS. In order to protect the privacy, the simple command should be followed after the password of the "Device Utility." (Please refer to page 48 and page 52.)

The simple commands must be capital case.

The simple commands could be optionally added with the equal mark and the concerning parameters. If you do not add parameters with the simple command, TR-206 will take the present setting as the setting.

The simple commands are "ping TR-206", "TR-206 periodic report", "TR-206 motion report", and "Link to server." For ping command, you could set the tolerance time of GPS fix. For periodic report, you could set the report interval. For motion report, you could set the static report interval and the moving report interval. So there are two simple commands for TR-206 to switch to motion report, one is "MM" for setting moving report interval, and the other is "MS" for setting static report interval. The unit of the simple command's concerning parameters is second.

Below please find the table of simple command.

You could send several simple commands in one SMS. The simple command is separated by the "comma."

Command	Code Word	Concerning Parameter
Ping	PI	=tolerance time of GPS fix

Periodic report	PR	=report interval
Motion moving	MM	=moving report interval
Motion static	MS	=moving static interval.
Link Server	LI	

Command format:

“password,simple command,simple command,simple command”

Note:

Do not keep any blanks between the commas. Otherwise, TR-206 could not distinguish what is the command.

Example 1, ping TR-206 and set the tolerance time of GPS fix as 3 minutes. The password is 520JX

The command is “520JX,PI=180”

Example 2, switch TR-206 to motion mode and set the moving report interval as 30 seconds and static report interval as 30 minutes. The password is 7777.

The command is “7777,MM=30,MS=1800”

Example 3, make TR-206 to periodically report with the interval of factory value. The password is VICTORY.

The command is “VICTORY,PR”

14 Troubleshooting and Safety

- It takes about 3~4 hours to fully charge the battery when TR-206 is powered-off. If you charge battery in powered-on status, it will take more time to fully charge the battery.
- Please avoid storing your TR-206 in extreme temperatures (heat/cold) or a humid area. Do not leave the device in your car under the direct sunlight with the windows closed. A high temperature environment may damage the device or even cause battery explosion.

FCC Regulations:

- This mobile phone complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

- This mobile phone has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiated radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.