 



INSTRUCTIONS

1. Preparation

- 1) Place the antenna into the hole at the top of the controller.
Turn clockwise to secure the antenna onto the controller (Fig1).
DO NOT OVER-TIGHTEN. Pull tip of the antenna to extend.


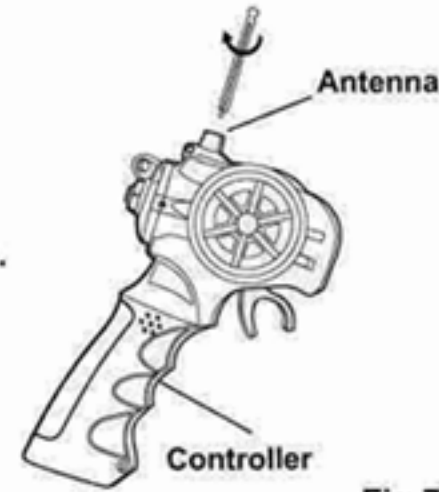


 - 2) Use the adjust lever (Fig 2) by the front end of the car chassis, to adjust the car straight-line running performance. (R for right, L for left)

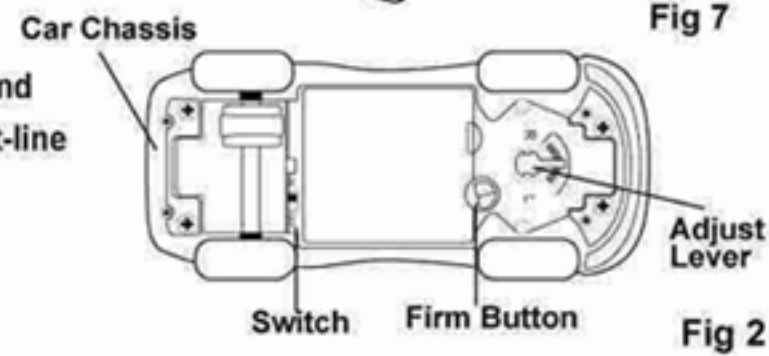


2. Battery Installation

  - 1) Remove the lid of the battery compartment of the R/C toy car, install 4 AA batteries, then replace the lid and turn the "Firm Button" to fix the battery cover. (Fig 3)
- 2) Remove the lid of the battery of the controller, install 2 AA batteries, then replace the lid. (Fig 4)
(Notice: Batteries are to be inserted with the correct polarity.)

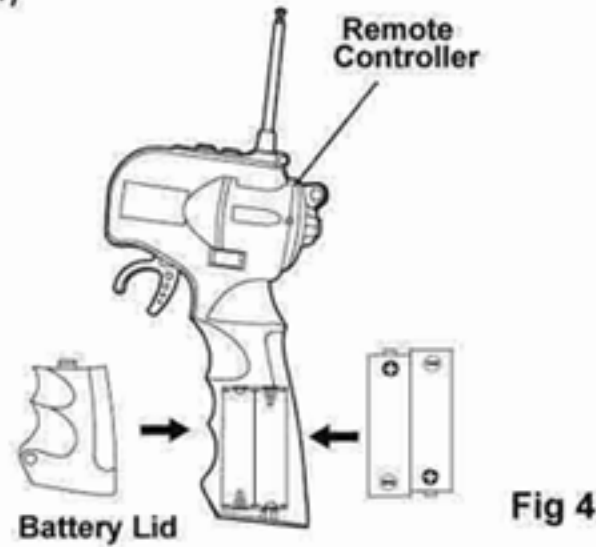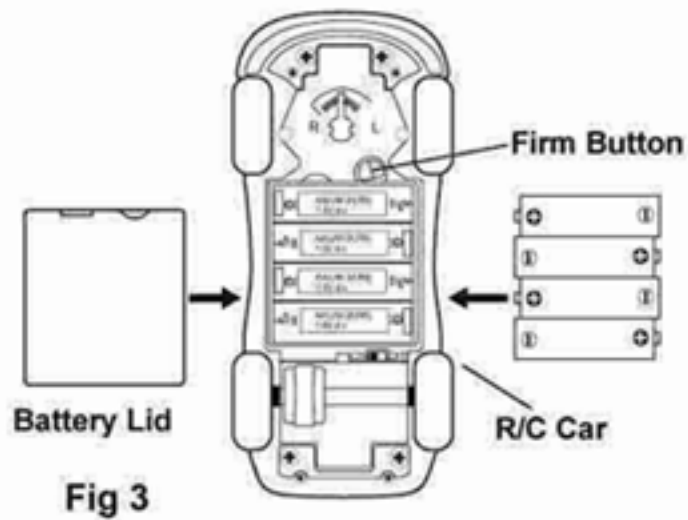


3. Operation Instructions

 - 1) Spread the antenna on the controller to the very end for a full signal.
- 2) Turn the switch of the car chassis to ON (Fig2), the inner circuit is then powered but the car remains still.
- 3) When the batteries are installed into the controller, its inner circuit is then powered. Turn the switch to ON, the controller will sound while operating. Turn the switch to OFF, the controller is still powered but without sound.(Fig 5)

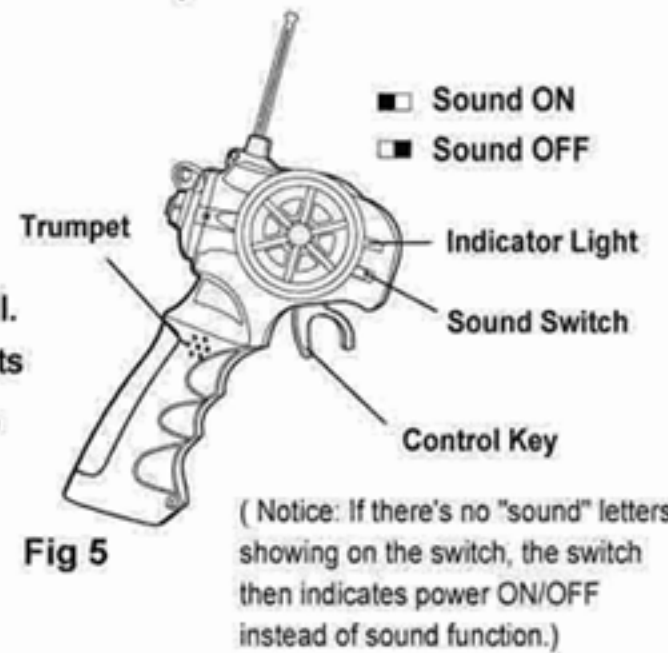

 - 4) Push the control key on the controller slightly upward, the car will move backward, if push the control key to the very end, the car will reach to its top speed. Slightly pull the control key backward, the car will move forward, if pull it to the very end, the car will reach to its top speed. (Fig 6)

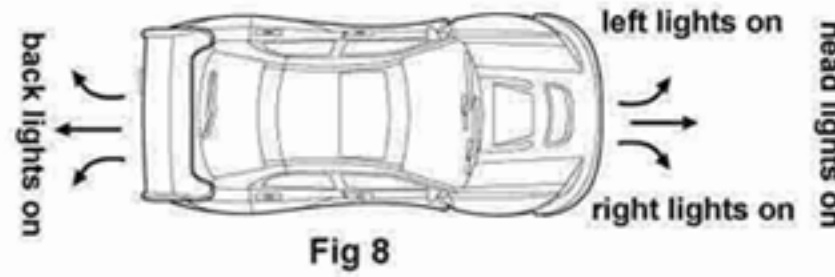

- 5) When pushing or pulling the control key, turn the revolver button clockwise at the same time, the car will turn right forward or right backward. While turn the revolver button anticlockwise, the car will turn left forward or left backward. (Fig 6,7,8)

- 6) If the control key levers are released, the car will stop all moves.
- 7) Turn the power switch on the car to OFF after use.
- 8) Remove all batteries from the car and the controller before storing for a long time.

3. Cautions


- 1) "Transformers or battery chargers used with the toy are to be regularly examined for damage to cord, plug enclosure and other parts; and in the event of such damage, toy must not be used with the transformer or battery charger until such damage has been repaired"
- 2) "Stated that the toy is to be assembled by child/adult"
- 3) "Statement that wired is not to be inserted into socket outlets."
- 4) "Non-rechargeable batteries are not to be recharged."
- 5) "Rechargeable batteries are to be removed from the toy before being charged."
- 6) "Rechargeable batteries are only to be charged under adult supervision."
- 7) "Different types of batteries or new and used batteries are not to be mixed."
- 8) "Only batteries of the same or equivalent type as recommended are to be used."
- 9) "Exhausted batteries are to be removed from the toy."
- 10) "The supply terminal is not to be short-circuit."
- 11) "Battery toys intended to be used in water shall state that it is operated in water only when fully assembled in accordance with the instructions."
- 12) "Toy must be used with the recommended charger."
- 13) "The charger is not a toy."
- 14) "Toy liable to be cleaned with liquid is to be disconnected from charger before cleaning."

ATTENTION:DO NOT THROW THE COLOR BOX AWAY WHEN THE CAR CAN STILL BE USED.
THE CHARGING TIME OF THE BATTERY IS ONLY 2-3 HOURS!
The normal function of the product may be disturbed by strong Electro Magnetic Interference.
If so, simply reset the product to resume normal operation by following the instruction manual.
In case the function could not resume, please use the product in other location.



MADE IN CHINA

 NO.8036

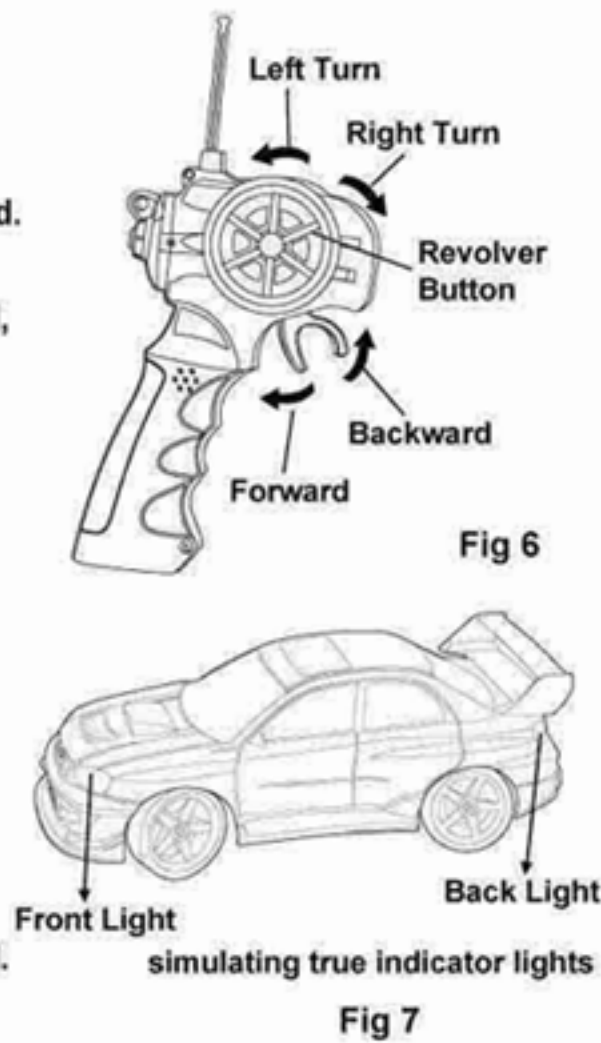

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE:

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER AUTHORITY TO OPERATE THE EQUIPMENT.

FCC ID:OKX8063278036

MADE IN CHINA

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.