

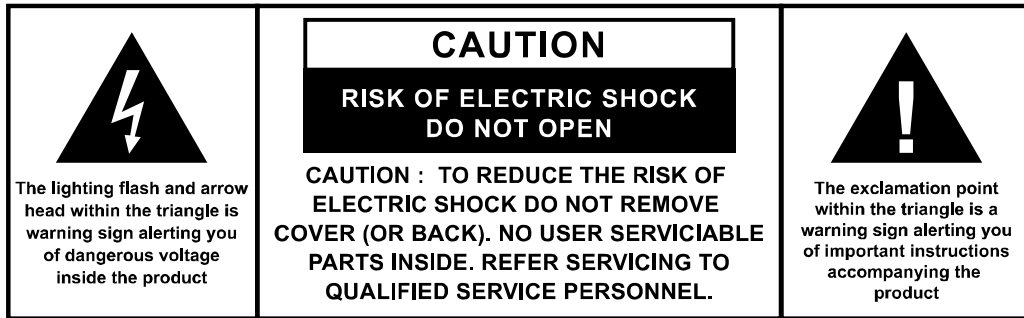 
**Bluetooth speaker with
PLL radio and USB/SD**

BSS-862



INSTRUCTION MANUAL





IMPORTANT SAFETY INSTRUCTIONS:

1. Follow all instructions
2. Clean only with a dry cloth.
3. Read the instructions. All uses guidelines must be read before start device.
4. Keep the instructions for future use.
5. Attention, use and security guidelines must be respected.
6. The device must not be used near water or be put in contact with moisture.
7. Make sure has no liquid is spilled on device and device openings.
8. Move device carefully, avoid shocks.
9. Do not block the breakdown of the device outputs.
10. Do not place the device near from a heat source (e.g. radiator). Do not expose it to the Sun.
11. Plug the device as indicate on this information form.
12. For cleaning the device, please follow the recommendations of the notice.
13. The sector cord should be unplugged a long period of use.
14. Device shall be repaired by a qualified person when:
 - a. the power cord is damaged,
 - b. objects have fallen into the apparatus or a liquid has been spilled into device,
 - c. device was exposes to the rain,
 - d. device does not work correctly without notable exterior change,
15. The user shall not try to maintain device beyond that which is described in this information form. The guarantee would negate.
16. Unpack all parts and remove protective material.
17. Do not connect the unit to the mains before checking the mains voltage and before all other connections have been made.
18. Do not cover any vents and make sure that there is a space of several centimeters around the unit for ventilation.
19. The AC/DC adaptor and apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the AC/DC adaptor and apparatus.
L'adaptateur AC/DC de l'appareil et l'appareil ne doit pas être exposé aux écoulements ou aux éclaboussures et aucun objet ne contenant de liquide, tel qu'un vase, ne doit être placé sur l'objet.
20. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
21. No naked flame sources, such as lighted candles, should be placed on the apparatus.
22. The AC/DC adaptor is used as the disconnect device, the disconnect device shall remain readily operable.
23. Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
24. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
25. Only use attachments/accessories specified by the manufacturer.
26. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
27. To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
Avertissement: pour réduire le risque d'incendie ou de choc électrique, ne pas exposer cet appareil sous la pluie et l'humidité.
28. Caution Marking was located at bottom enclosure of the apparatus.
Les marquages sont inscrits en bas de l'appareil.
Les précautions d'emploi sont inscrites en bas de l'appareil.
29. The AC/DC adaptor is used as disconnect device. The AC/DC adaptor of apparatus should not be obstructed OR should be easily accessed during intended used. To be completely disconnect the power input, the AC/DC adaptor of apparatus shall be disconnected from the mains.

PORTABLE CART WARNING
(symbol provided by RETAC)



810-00000S-190

L'adaptateur AC/DC de l'appareil est utilisé pour déconnecter le système. L'adaptateur AC/DC de l'appareil ne doit pas être obstrué ou doit être facilement accessible pendant son utilisation. Pour être complètement déconnecté de l'alimentation d'entrée, l'adaptateur AC/DC de l'appareil doit être déconnecté du secteur.

30. Battery shall not be exposed to excessive heat such as sunshine, fire or the like.

Les piles ne doivent pas être exposées à de forte chaleur, tel qu'à la lumière du soleil, au feu ou autres choses de semblable

31. This device should match the provided AC/DC adaptor AS360-120-AA200 of KINGWALL

1 COMPLIANCE WITH FCC REGULATIONS

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.


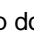
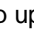

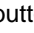
Warning: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


This equipment has been tested and found to comply with the limits for a Class B Digital Device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Adaptor with ferrite must be used with this equipment to ensure compliance with the Class B FCC limits

LOCATION OF CONTROLS

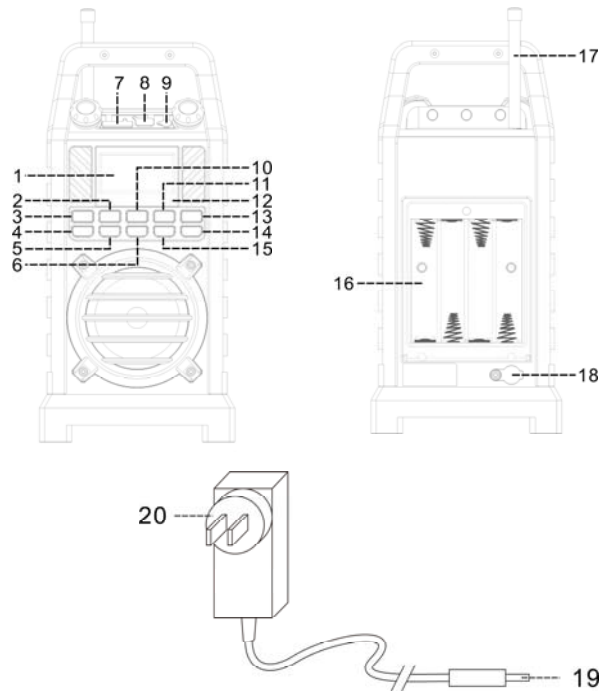 - 1) LCD display
- 2) Function button
- 3) On / Off  button
- 4) Repeat/random play button
- 5) Tune/Skip down  button
- 6) Tune/Skip up  button
- 7) SD card slot
- 8) USB socket
- 9) 3.5mm Aux-in jack
- 10) Pre up/+10/Pro button
- 11) Volume down
- 12) Bluetooth LED indicator
- 13) Volume up button
- 14) Play/pause  button
- 15) Stop  button
- 16) Battery compartment
- 17) FM wire antenna
- 18) DC in jack
- 19) DC plug
- 20) AC/DC adaptor



Caution:

Usage of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure. This unit should not be adjusted or repaired by anyone except qualified service personnel.

Precautions for use

Installation

- Unpack all parts and remove protective material.
- Do not connect the unit to the mains before checking the main voltage and before all other connections have been made.
- Do not cover any vents and make sure that there is a space of several centimeters around the unit for ventilation.

AC connection

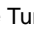
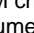
1. Connect the DC plug (19) to the DC jack (18) of the main unit, then, connect the AC/DC adaptor (20) to the AC outlet.
2. Turn on the unit by On/Off (3), if the LCD display (1) is on with backlighting, it means the power supply is normal. Now your system is ready to play the music.

DC connection



For DC operation, please insert 8 pcs size C (UM-2) battery to the battery compartment (16) as the indication in battery compartment and remove the DC plug (19) from the DC jack (18).

Listening to radio

Manual tuning

1. Turn on unit by On/Off button (3) & then press the Function button (2) to select "FM" mode.
2. Press the Tune / Skip up  or down  (6/5) button to change the received frequency in order to reach your desired FM channel
3. Adjust volume up/down button (11/13) to the desired volume level.

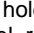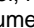Auto tuning

1. Press Function button (2) to select "Tuner" mode.
2. Press and hold the Tuning / Skip up  or down  button (6/5), the unit will start searching until reach receive a FM channel, repeat this step until the desired radio station is being reached.
3. Adjust volume up/down button (11/13) to the desired volume level.

Hints for best reception:-

The receiver has a build-in FM rod antenna (17) on top of the unit. Extend it as long as possible to get best reception.

Preset stations

You can store up to total of 20 FM radio stations in the memory.

1. Set to FM mode by "Function" (2).
2. Turn to the desired FM station according the above "Listening Radio" instruction.
3. Press and hold "Pre-up/+10/Pro" button (10) few second to active program state. Display will flash with "P 01".

4. Press Tuning / Skip up "►►" or down "◄◄" button (6/5), to select the desired station memory position for storage.
 5. Press Pre-up/+10/Pro " button (10) once again to confirm the setting.
 6. Repeat step 2 to 5 to store other stations.
 7. Now you can select the presets stations in order by pressing the " Pre-up/+10/Pro" button (10).
- The pre-set memories will be cancelled completely if dis-connecting the main power supply. You are recommended to switch the system into standby mode for convenience usage.
 - There are 3 seconds for program state, after 3 sec. This state would resume to normal tuner mode automatically.
 - You can overwrite a present station by storing another frequency in its place.

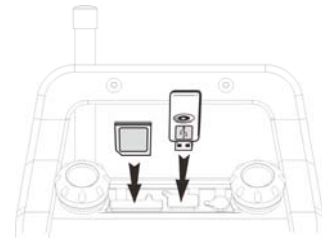 
Playback of MP3 song via USB storage media or memory card

Connecting

The system is able to decode and playback all MP3 file which stored in the memory media with USB connecting port or SD/MMC card.

1. Set the system at off mode first or other function except USB/SD mode.
2. Open the USB socket cover then plug-in the USB pen-drive with the face in & make sure it going into completely or open the SD slot cover then insert the memory card in the direction of the arrow as shown in the cover of the memory card slot. Insert straight without bending.

- **Connecting the USB pen drive upside down or backwards could damage the audio system or the storage media (USB thumb drive). Check to be sure the direction is correct before connection.**



3. Turn on the unit again by On/Off button (3) and press Function button (2) to " USB " or " SD " mode. The system will start reading the storage media automatically after connecting, and LCD display (1) will show the running time of MP3 files.

● **Play / pause mode ►||**

1. If Play/Pause ►|| button (14) is pressed during playback, system go to pause mode and the playing time will start flashing at the LCD display (1). Press again to resume normal playback.

● **Stop mode ■**

1. If Stop ■ button (15) is pressed during play or pause mode. Go to stop mode and display total number of track on the LCD display (4).

● **Skip mode (skip up ►►/skip down ◄◄)**

1. During play or pause mode, if skip up ►► button (5) is pressed it will go to next track and display the track no. and will change to play mode.
2. During play or pause mode, if Skip down ◄◄ button (6) is pressed, it will go to the previous track and change to play mode.

● **+10 tracks**

1. Press "Pre-up/+10/Pro" button (10) to skip 10 track to your favorite track more convenience.

● **Repeat/Random mode**

Press the " Rep/Ran ◂" button (4) during playback to select repeat/ random or intro function, a single track, random and intro can be played as follow:-

(1) Random → (2) Repeat 1 → (3) Intro → (4) Off mode



Play mode	Indicator on LCD display
Random	RAN
Repeat track	◂
Intro	INTRO
Off mode	-----

● **Repeat play**

You can listen the desired tracks by this function.

● **Random play**

You can listen all the tracks in a random order by this function.

● **Intro play**

You can listen the beginning (10 seconds) of each file by this function & saving your time to search the desire song

- **Repeat all**

As this unit repeat all mode was defaulted, if any play mode did not selected, MP3 playback will continuously.

Remark

- The system can detect and read the file under MP3 format only at USB mode but not other music file format.
- **If connect the system to MP3 player via the USB socket, due to variances in MP3 encoding format, some MP3 player may not be able to play via the USB socket. This is not a malfunction of the system.**
- **USB port does not support connection with USB extension cable and is not designed for communication with computer directly**

Removing of USB pen drive

To remove the USB pen drive, turn off the power or switch the function mode to either Aux or FM first. For USB port – un-plug it by pulling out from the USB socket directly.

Remark:-

MP3 track format requirement:-

- Bit rate : 32 kbps~320kbps, sampling rate : 32kHz, 44.1kHz and 48 kHz decodable
- The performance of playing MP3 disc is various from the quality of recording disc and the method of recording. Furthermore, the searching lead-time for MP3-CD is longer than normal CD due to difference format.

USB charging

This unit can provide DC5V/1A for another electronic device charging (such as mobile phone) through USB port but USB charging not available during battery operation or USB mode.

Remark : Due to firmware/software of mobile phone was various and update time to time, maybe some of mobile phone cannot compactible with charging function. This is not the malfunction.

Bluetooth connecting and Playback

1. Select the Main Function selector (2) to “ BT ” mode.
2. The Bluetooth LED indicator (12) will flashing, it means the Bluetooth in non connection / searching mode.
3. Switch on the Bluetooth feature of your Bluetooth device (such as mobile phone) and select “ Goldsound ” Bluetooth equipment to connecting.
4. Once the connecting was finish and connect successfully, the Bluetooth LED (12) will change to light up.
5. Start to playback your Bluetooth device and enjoy the music by the main unit.

Aux-in connection

Connect another audio device, e.g. (portable) CD player, MP3 player, (portable) cassette player, iPod, etc. To this system via a cord with 3.5mm dia jack plugs (not supplied). Connect one end of this cord to the headphone jack of the external device and the other end to the aux-in jack (9) at the side of the unit. Then press Function button (2) to “ AUX ” mode. Start to playback your external device to enjoy your music.

Remark : Due to ErP stage two requirement and protect the environment. The unit will switch to standby mode automatically once no any music playing over 15 minutes.