 


AIMV10

Golf Rangefinder
User Manual

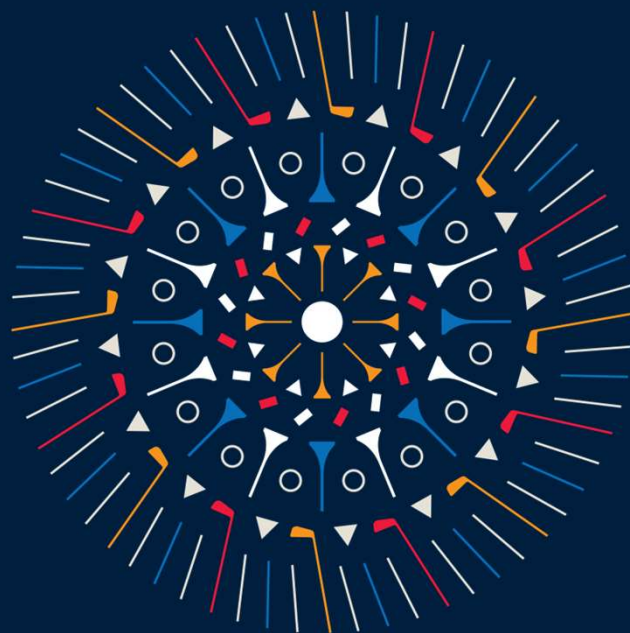



Overview


1. What's Included:



AIMV10




 USB Cable (Micro 5pin)

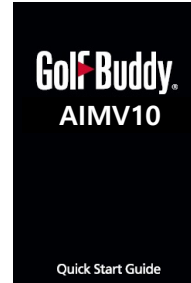

Quick Start Guide

 2. Overview of your Golf Buddy AIMV10

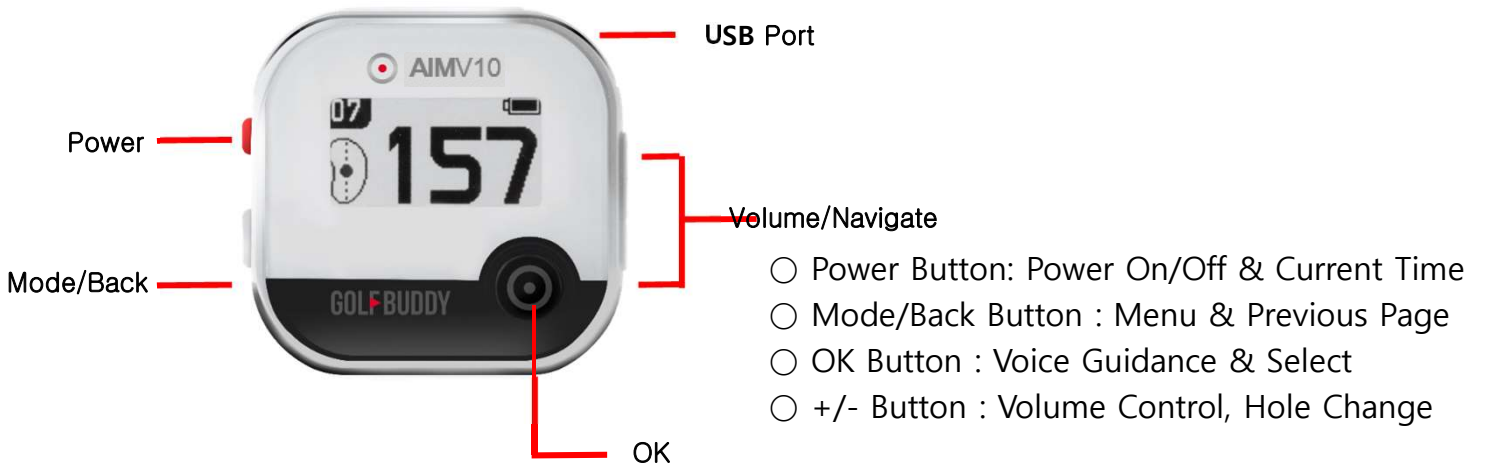



3. Screen Description

- ① Hole No. / Left(L), Right(R) Green. L or R will appear next to the hole if available
- ② Bluetooth
- ③ Slope ON (Only in Korea)
- ④ Meter. Default distance shown in yards. 'M' icon will appear when switched to meters
- ⑤ Battery level indicator
- ⑥ Distance to the center of the green
- ⑦ Distance to the back of the green
- ⑧ Distance to the front of the green



 



[홀 전체 정보]

4. Overview of Play Golf functions







① Play Golf ② Settings

- Turn on the device and select 'Play Golf', then Press  to search the nearest golf course
- Press  to hear the distance to the center of the green
 - Press once for center of the green, press and hold for distances to the front and back of the green.
- Select Setting icon via   to configure Bluetooth, measurement unit, volume, slope, left/right green, language, time setting, and flip screen.




▶ Language Selection



'Setting' → 'Language' and use   to choose your language and press  to select and hear the voice with selected language
 ※ Supported Language: English, Spanish, Korean, Chinese, Japanese, French, German, and Italian

○ Female



'Setting' → 'Voice' and use   to choose Female or Male voice, and press  to complete.




▶ Volume Control



'Setting' → 'Volume' and use   to control the volume




▶ L / R Green Switching



'Setting' → 'Green' and use   to choose Left/Right, and press  to complete




▶ Meter/Yard Unit Change



'Setting' → 'Unit' and use   to choose Meter/Yard, and press  to complete

▶ Time Setting



'Setting' → 'Time' and use   to change to desired hour and minute, and press  to complete
 ※ AM/PM will change automatically based on 12 hour system

Golf Play

▶ Bluetooth



'Setting' → 'Bluetooth' and use to choose On/Off, and press to complete

※ Turn on the Bluetooth to pair the AIM V10 with mobile device [Bluetooth Pairing]

1. Start GOLFBUDDY app from your mobile device
2. Login and press 'Find My GOLFBUDDY' from the menu
3. Select AIMV10 from the menu to complete

※ Download and install 'GOLFBUDDY Smart' app from Play Store or App Store

※ Please visit (<http://www.golfbuddy.com>) for more information on downloading the app and Bluetooth pairing

▶ Casting



캐스팅 화면

캐스팅 설정화면

1. Start GOLFBUDDY Smart App when AIMV10 is paired with your mobile device
2. Press 'GOLFBUDDY Cast' from the menu
3. Casted screen will display on your mobile device

▶ Slope



'Setting' → 'Slope' and use to select On/Off, and press to complete

Slope On : Hear and see the compensated distance through voice and display

- Target elevation is lower
- No changes in elevation
- Target elevation is higher

※ When Slope function is off, it icon will not show on screen and it will display/voice the uncompensated distance

▶ Flip Screen Mode



'Setting' → 'Display' and use to select, and press to complete

- ※ Normal : Default Screen
- Flipped : 180° Degree upside down


Golf Play & Update

▶ Default Factory Setting

Reset?

YES

NO

'Setting' → 'Reset' and use to select, then press  to complete

5. Software Update

Use GolfBuddy GB Manager to gain access to latest firmware and free course updates for 40,000+ golf courses in 170+ countries

Visit our website at www.golfbuddy.com for more information on downloading the GB course Manager to access the latest firmware & course updates

6. Disclaimer

- Please remove all the stickers before using.
- Keep the device away from water or high humidity.
- Functions will be limited in indoor due to lack of satellite reception
- Use of 5V adapter is recommended. Fast charger may damage the unit.

※ Images on the manual may change after software update.

-LIMITED WARRANTY-

Warranty Period

GOLFBUDDY products come with a limited warranty against defects in materials and workmanship when used under normal consumer use for a period of one (2) year ("Limited Warranty"). The Limited Warranty begins to run from the date of original retail purchase. GOLFBUDDY, at its sole and absolute discretion, shall either (i) replace or repair the defective part(s) or the unit with a new or reconditioned part(s), or (ii) issue a credit for the parts or products that are covered under the Limited Warranty.

Eligibility

This Limited Warranty is applicable only to the original authorized purchasers who purchase the products for resale and/or end users of the products. All authorized distributors shall provide its customers a copy of this Limited Warranty and communicate any and all waivers and limitations contained in this Limited Warranty. No unauthorized modifications to or unauthorized representations made by distributors will be valid or honored. The purchaser must present the original purchase receipt showing the date of purchase, place of purchase, and amount paid for the product in question, at the time a warranty claim is filed. The product must be in its original packaging along with all associated accessories and instruction manuals.

Warranty Claim Procedures

To obtain warranty repair service, you must contact GOLFBUDDY technical support at support@golfbuddyglobal.com and obtain a Return Authorization Number. All returned products must be accompanied by an original purchase receipt and the Return Authorization Number. Any products that are returned without the requisite information shall be returned at the purchaser's cost and expense.

Warranty Exclusions

Except against defects in material and workmanship and as expressly warranted by GOLFBUDDY, GOLFBUDDY Disclaims all warranties, express and implied, applicable to products, including, without limitation, any warranty of merchantability or fitness for a particular purpose and any warranty that any products is delivered free of claims of third parties by way of infringement or the like. GOLFBUDDY disclaims all express and implied warranties applicable To products accessories and products which are not manufactured by GOLFBUDDY. GOLFBUDDY further disclaims all warranties applicable to products which are accepted by purchaser but are subsequently damaged as a result of the following events:

- » Product purchased through the internet, other e-commerce channels, or any distributor or retailer that obtained the Product from a supplier or distributor not authorized by GOLFBUDDY.
- » Any and all loss or damage to the product during transit.
- » Improper or non-recommended use, storage or handling of the product, use of product with non-GOLFBUDDY components such as USB cables or charges, misuse, operation at settings other than those recommended or specified, non-compliance with instructions or guidelines set forth in the User's Operation Manual.
- » Modification or alteration of the Product in any manner, including but not limited to, removal or addition of any component or part by purchaser or unauthorized service provider, or any accidental or intentional damage to the product.
- » Any loss of software, firmware, data information, memory data contained on any products returned to GOLFBUDDY for repair, or those modifications necessary due to a change in the GPS made by the U.S. government or any other governmental agencies.
- » Use of product in contravention with the laws of any country.

Limitation of Warranty

GOLFBUDDY SHALL NOT IN ANY EVENT BE LIABLE FOR INDIRECT, SPECIAL, CONSEQUENTIAL OR LIQUIDATED DAMAGES OR PENALTIES, INCLUDING CLAIMS FOR LOST REVENUE, PROFITS OR BUSINESS OPPORTUNITIES, EVEN IF GOLFBUDDY HAD OR SHOULD HAVE HAD ANY KNOWLEDGE, ACTUAL OR CONSTRUCTIVE, OF THE POSSIBILITY OF SUCH DAMAGES. GOLFBUDDY'S TOTAL LIABILITY FOR ANY CLAIM ARISING HEREUNDER SHALL NOT EXCEED THE PURCHASE PRICE WHICH PURCHASER PAID FOR THE PRODUCT.

Motherboards

WARNING: Products with exposed solder may contains lead, a chemical known to the State of California to cause birth defects and other reproductive harm. Please wash hands after handling internal components and motherboards and avoid inhalation of fumes if heating the solder.

How to Obtain Warranty Service or Other Information

USA	Deca International Corp. dba GolfBuddy 10700 Norwalk Blvd. Santa Fe Springs, CA 90670
------------	--

FCC ID: 2ALG4AIMV10

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter

GOLFZON
DECA

