

BASIC OPERATION

WTX

Automatic Hole Recognition

- The WTX will automatically advance to the next hole as you play through the course.
- Please note, in rare instances, it may be necessary to manually advance to the next hole.



Manual Hole Selection

- To change from the current hole to the next hole in Play Golf Mode, swipe the screen from top to bottom.
- To change from the current hole to the previous hole in play Golf Mode, swipe the screen from bottom to top.



Exit Golf Mode

- From Play Golf Mode, press and hold anywhere on the screen for 4 seconds to exit the game. Tap the "Yes" button to end the round.



FCC Statement (USA)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
3. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
- (1) this device may not cause harmful interference, and
 - (2) this device must accept any interference received, including interference that may cause undesired operation.

Warranty

GolfBuddy products come with a limited warranty against defects in materials and workmanship when used under normal consumer use for a period of one (1) year ("Limited Warranty"). The Limited Warranty begins to run from the date of original retail purchase. GolfBuddy, as its sole and absolute discretion, shall either (i) replace or repair the defective part(s) or the unit with a new or reconditioned part(s), or (ii) issue a credit for the parts or products that are covered under the Limited Warranty.


To obtain warranty repair service, visit <http://help.golfbuddyglobal.com> or email GolfBuddy technical support at support@golfbuddyglobal.com to obtain a Return Authorization Number. All returned products must be accompanied by an original purchase receipt and the Return Authorization Number. Any products that are returned without the requisite information shall be returned at the purchaser's cost and expense.

ADVANCED OPERATION

WTX

Pin Placement

- You can access the Dynamic Green View and Pin Placement Mode by tapping on the green icon. After the pin placement, you can return to the golf screen by tapping the screen.
- From Dynamic Green View screen, you may also change the placement of the pin on the green image by dragging the pin.

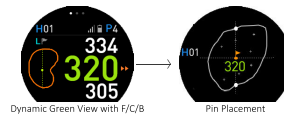

Measuring Shot Distance

- In Play Golf Mode, press and hold anywhere on the screen for 2 seconds to enter the Shot Distance screen.
- To start measuring your shot distance, tap the play button. The Shot Distance Mode will return to the Play Golf screen by tapping the screen or pressing the "Poewr/ESC" key and will measure the distances in the background.
- Once you have reached your ball, press and hold anywhere on the screen for 2 seconds and tap the pause button to finish measuring and view the shot distance.



Settings

- In the Shot Distance screen, you can enter "SETTINGS" by tapping the settings icon or swiping the screen from right to left.
- From the Settings Menu, you can change the unit of measurement between Yards and Meters as well as switch the backlight to ALWAYS ON/OFF.



**Note: If "Screen Always On" is set to ON, the screen will always be on in Golf Mode, but the battery life will decrease faster.

GolfBuddy®

WTX



Quick Start Guide

www.golfbuddyglobal.com

DEVICE OVERVIEW

WTX

Overview of WTX



Screen Description



- ① Hole Number
- ② Satellite indicator
- ③ Battery indicator
- ④ Par info
- ⑤ Distance to the back of the green
- ⑥ Distance to the center of the green
- ⑦ Next Screen
- ⑧ Distance to the front of the green
- ⑨ Dynamic Green View
- ⑩ Left/Right Green Selection

Main Menu



GolfBuddy

This feature runs "Golfbuddy GPS Golf Application" (*Refer to Play Golf for the detailed information)



Find Phone

This feature will be used to find the phone connected, and needs to install the Golfbuddy application for use in mobile phone.



Setting

BT settings	Bluetooth On/Off, Visibility
Display	Main Menu style, Brightness, Screen time out
Clock	Clock type, Date, Time, Time format
Sport	Lap Len(Distance per lap)
Language	Multi-lingual
Motion	Wake-up gestures
Style	3 theme styles
Calendar	Calendar
Reset	Erase all user data from WTX
About	Information(Device, S/N etc)

GETTING STARTED


WTX

Power On/Off

- Press and hold the power button for 4 seconds to power the WTX watch ON/OFF.
- If you experience incorrect yardages or unusual behaviour on the WTX, we recommend to do a RESET. To RESET: turn the WTX off and then back on.

Charging

- To charge the WTX, attach the USB clip by aligning the contact pins on the back of the watch. The battery indicator will display while charging and will show "100%" when fully charged.
- To disconnect the WTX, remove the charging cradle from the unit.

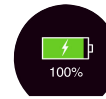


***Important: Do not use a quick charger ac adapter to charge the WTX watch. Doing so may cause damage and void the warranty. Ac adapters should not exceed 5.0v. Check your ac adapter prior to using.**

WTX can be used to transfer data with PC through USB cable.

BASIC OPERATION

Play Golf

- Once you are at the course, swipe the screen to the left to view the Main Menu.
- From the Main Menu screen, tap the "GolfBuddy" icon to enter Golf Mode. The WTX unit will automatically search for the golf course.

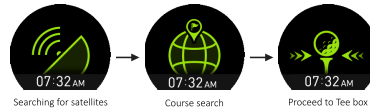


BASIC OPERATION

WTX


Distance to the Green

- By tapping the distance number on the screen (see images below), you will be able to switch Golf screens.

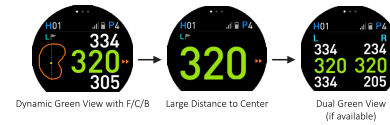

Target / Hazard Information

 - From the Play Golf Mode, tap the image or swipe the screen from left to right continuously to view the Hole Layout and Hazard Information.
- Tap the image or swipe the screen from left to right continuously to return to the previous screen.
- From Hole Layout screen, Tap the image or swipe the screen from right to left continuously to view Hazard Information.
- If more than 3 hazards are available, swipe the screen up or down to see more.



Quick Watch Mode(Sunrise/Sunset Time)

- In Play Golf Mode, tap the indication area at the top of the screen(outlined in red on the image to the right) to switch the Quick Watch Mode for the current time, sunrise and sunset time.
- The Quick Watch Mode will be display for 5 seconds and will automatically return to Play Golf Mode. Or, instead of waiting, tap the screen and it will return to Play Golf Mode immediately.

