



gioteck
COME GET SOME

MODEL G30000A

This product is not designed, manufactured, sponsored or endorsed by Sony Computer Entertainment Inc. or any of its divisions.
PS3™ is a trademark of Sony Computer Entertainment Inc. Specification & appearance are subject to change without prior notice.
Copyright © 2011 GBB Group. All Rights Reserved.

HF-2 BLUETOOTH CONTROLLER FOR PS3™
ERGONOMIC FPS CONTROLLER

thank you

Thank you for purchasing the HF-2 Bluetooth Controller from Gioteck. We hope that this product will go beyond your expectations for a quality made accessory. Please read this booklet thoroughly before using the product and review the PS3™ manual for additional details regarding PS3™ operation. Thank you & enjoy!

precautions

This product has been designed with the highest concern for safety. However, any electrical device, if used improperly, has the potential to cause harm. To help ensure risk-free operation please pay attention to the following guidelines.

- Use only as intended. This is a precision product, handle with care.
- Contains small parts. Not suitable for children under 3 years of age.
- Store in a dry & dust free area. Do not store in areas of extreme heat or cold, and avoid direct sunlight or heat sources eg. heaters.
- Do not allow the product to get wet or dirty; doing so may cause damage.
- Do not clean with benzene, paint thinner, acetone, alcohol, or other such solvents.
- Do not take the product apart; doing so will void your warranty and may cause electrical shock.

warnings



This symbol indicates important installation, operational or maintenance instructions. Always follow these instructions closely.

environment



Please help to conserve the environment by recycling the inner cardboard packaging of this product.



This controller should NOT be disposed of in normal household waste. It should be disposed of separately. Please take it to an electrical waste collection point.

CONTENTS

- 02 | Precautions
- 03 | Features & Details
- 04 | Setup
- 05 | Battery replacement
- 06 | Pairing
- 07 | Operation
- 09 | Thumbstick calibration
- 10 | Troubleshooting
- 11 | Legals

features & details

The HF-2 has been ergonomically designed to enhance the "First Person Shooter" gameplay experience. You'll find it's the little touches that make all the difference.

- 01 | Home Button
- 02 | Select Button
- 03 | Turbo Button
- 04 | Start Button
- 05 | Crescent with LED feedback
- 06 | L3 Thumbstick
- 07 | □ △ ○ × Buttons
- 08 | Directional Pad
- 09 | R3 Thumbstick
- 10 | R1 Button
- 11 | R2 Button
- 12 | L1 Button
- 13 | L2 Button
- 14 | Mini-USB Port
- 15 | Flip Switch
- 16 | Battery Compartment




set up

The HF-2 Controller is very easy to set up, and for your convenience it can be used as either a wired or wireless device. To use your controller as a wired device connect the USB to the PS3™ [01] and the mini USB to the controller's charging socket [02].




The HF-2 does not need to contain batteries to function as a wired device.

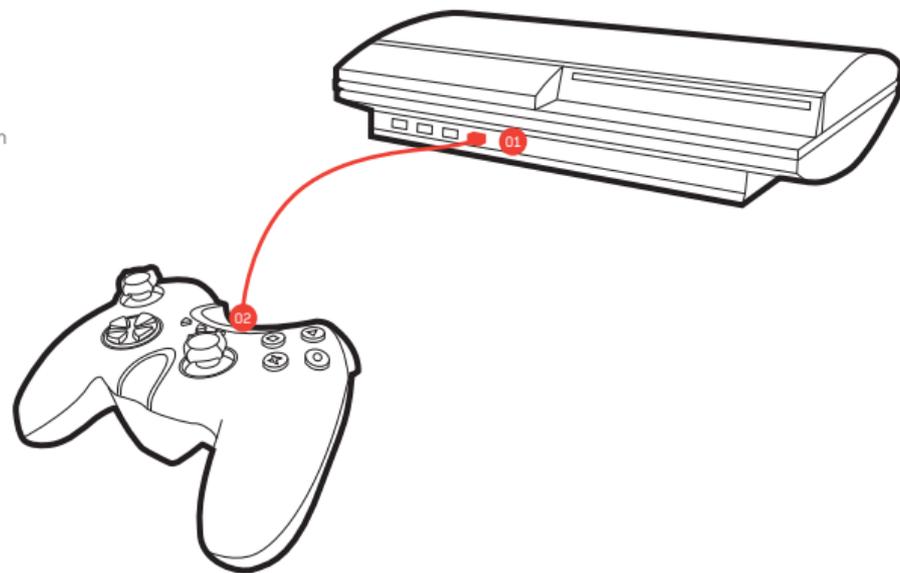

battery replacement

To use your controller wirelessly, remove the battery compartment cover and insert two AA batteries or a Gioteck Rechargeable battery pack.

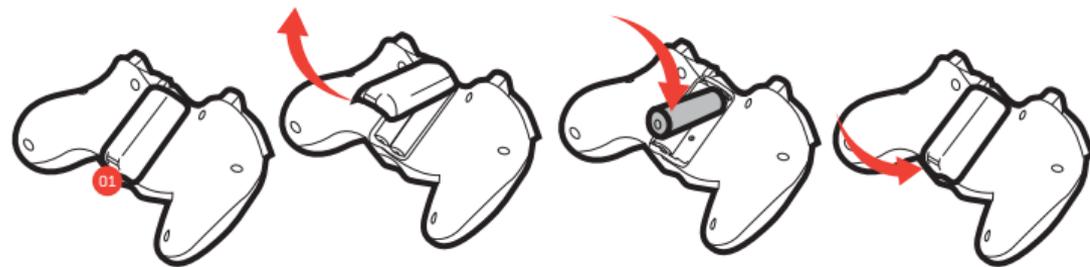

Using your thumb, press in the catch on the battery door [01].

Lift to open.

Replace with new batteries, or a Gioteck battery pack.


Replace the battery door.

pairing your controller


The HF-2 must be paired to your PS3™ to use it wirelessly. To enable pairing, connect your controller to the PS3™ via a USB cable and pairing will happen automatically. The pairing process can take up to 10 seconds.

reassigning ports

Once paired one or two LEDs within the crescent of the controller will light depending on which port the controller has been assigned to. To assign your controller to a different port, go to: **Accessory Settings – Reassign Controller** and scroll to assign the controller to your desired port.

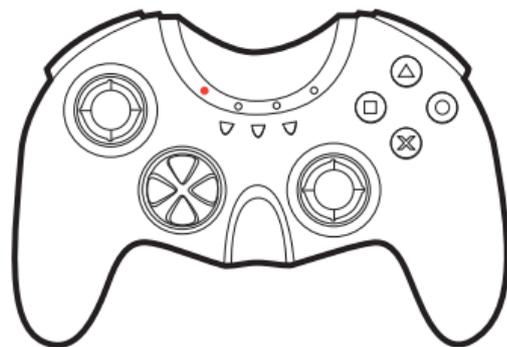

Controller assigned to port 1.

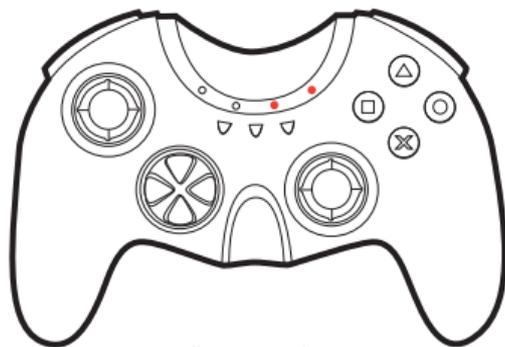

Controller assigned to port 7.

operation

To power on your controller, press and hold the home button for 2 seconds until a red LED appears in the crescent. To power off your controller, press and hold the home button for 1 second.

turbo function


Pressing an action button assigned with turbo will simulate the button being pressed rapidly e.g. "boost firepower".

To enable turbo function:

While pressing the Turbo button, press & release the action button you wish to turbo. To switch turbo off, repeat the procedure above. NOTE: More than one button can be assigned the turbo function at any one time.

To clear all turbo functions:

Press & hold the Turbo button ONLY for 12 seconds.

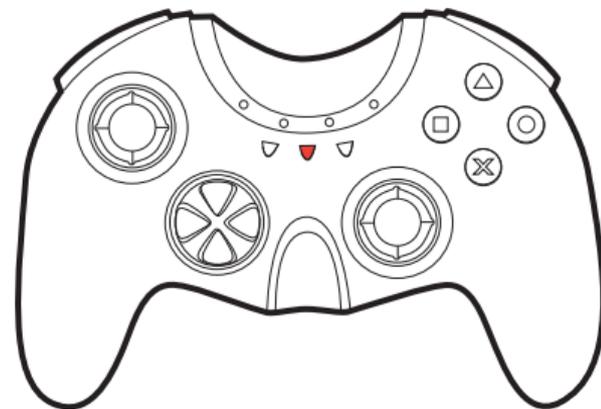


The HF-2 will go into sleep mode if not used for 10 minutes.

To wake up the controller, press the Home button.

operation

For your convenience a flip switch has been built into the body of the HF-2 controller enabling you to swap the functions assigned to the L1 & L2 and R1 & R2 buttons.

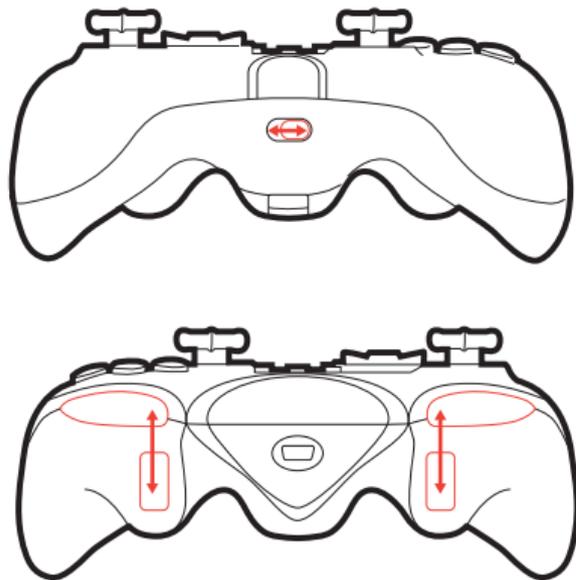


flip switch

To swap the functions assigned to the L1 & L2 and R1 & R2 buttons simply slide the switch from left to right.

thumbstick calibration

The HF-2 has calibrated thumbsticks that will sharpen aim and improve accuracy during serious FPS gameplay. If you would like to change the HF-2 thumbstick sensitivity, download the latest Giateck software from the HF-2 support pages on our website: www.giateck.com

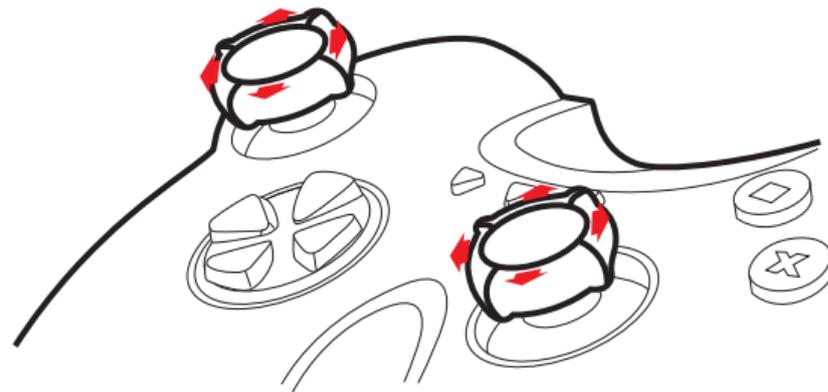

In the event that a system update interferes with the operation of your controller, go to www.giateck.com to download the latest Giateck updates.

troubleshooting

Having trouble with your HF-2 controller? These troubleshooting steps will show you the smoothest path to resolving your issue. Be sure to perform troubleshooting before having your product serviced.

The HF-2 will not turn on.

- Check to make sure that the batteries or battery pack is fully charged.
- Make sure that the batteries are properly installed.

I am having trouble pairing my controller.

- Make sure that you have followed the instructions carefully on page 6.
NOTE: You must plug your controller in via a USB cable to enable pairing.

The LED is flashing even though the rechargeable batteries are fully charged.

- Rechargeable batteries provide a low voltage which triggers the LED to flash. Even at a low voltage, the batteries will still provide substantial game time.

The HF-2 is switched on but is not recognized by the PS3™.

- Make sure that the HF-2 is paired to the PS3™ (see page 6).
- Press the HOME button (the large arched button on the front) to wake the controller up from sleep mode and reconnect.
- Make sure that you have the latest firmware installed.

The SixAxis function is not working in my game.

- The HF-2 does not have SixAxis support.

For further assistance please contact our customer support team on our website: www.gioteck.com

legals

This product complies with the following legal regulations. For further information go to www.gioteck.com.



Gioteck hereby declares that this controller is in compliance with the essential requirements and other provisions of Directive 1999/E/EC. To view the full version of the Declaration of Conformity please go online to doc.gioteck.com.



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. The device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter. Gioteck are not responsible for any interference caused by unauthorized changes to this equipment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed correctly, may cause harmful interference to radio communications. If this equipment does cause harmful interference to radio/television reception try the following: •Reorient or relocate the receiving antenna. •Increase distance between the equipment & receiver. •Connect the equipment into an outlet on a circuit different from the receiver. •Consult the dealer or a radio/TV technician.



immersion.
TouchSense Technology

TouchSense® Technology Licensed from Immersion Corporation. Protected by one or more of the following patents: U.S. PATENTS:

5185561, 5220260, 5389865, 5459382, 5589854, 5629594, 5691898, 5721566, 5731804, 5731804, 5734373, 5767839, 5805140, 5825308, 5831408, 5844392, 5857986, 5907487, 5929607, 5929846, 5959613, 5999168, 6020875, 6020876, 6020967, 6024576, 6050718, 6057828, 6061004, 6078308, 6088017, 6088019, 6100874, 6104158, 6104382, 6128006, 6147674, 6154198, 6166723, 6184868, 6191774, 6201533, 6211861, 6219032, 6219033, 6232891, 6243078, 6246390, 6246390, 6252579, 6252583, 6256011, 6259382, 6271828, 6271833, 6275213, 6278439, 6288705, 6292170, 6292174, 6310605, 6317116, 6342880, 6343349, 6348911, 6353427, 6374255, 6380925, 6400352, 6411276, 6424333, 6424356, 6429846, 6437771, 6448977, 6469692, 6486872, 6563487, 6564168, 6580417, 6636161, 6636197, 6639581, 6661403, 6680729, 6683437, 6693622, 6693626, 6697043, 6697044, 6697048, 6704001, 6704683, 6705871, 6707443, 6715045, 6717573, 6762745, 6801008, 6816148, 6833846, 6850222, 6864877, 6894678, 6903721, 6928386, 6956558, 6982696, 6982700, 6995744, 7023423, 7024625, 7038657, 7038667, 7039866, 7061466, 7084854, 7091950, 7102541, 7106305, 7106313, 7131073, 7136045, 7148875, 7161580, 7182691, 7193607, 7199790, 7209117, 7209118, 7218310, 7236157, 7249951, 7253803, 7265750, 7283123, 7299321, 7327348, 7336260, 7336266, 7345672, 7423631, 7432910, 7439951, 7446752, 7447604, 7456821, 7460104, 7477237, 7500853, 7502011, 7535454, 7557794, 7561141, 7561142, 7564444, 7567232, 7567243, 7592999, RE40341, and RE40808"



N28707