



MODEL G326

Copyright © 2009 GBB Group. All Rights Reserved. Gioteck™ and the Gioteck Logo are trademarks of GBB Group Ltd. PlayStation® is a registered trademark of Sony Digital Entertainment. This product is not endorsed or manufactured by Sony Digital Entertainment.

PlayStation®, PlayStation®3 © PS3™ are registered trademarks of Sony Computer Entertainment Inc. All other third party products and company names mentioned are either the trade names or trademarks of their respective owner.

EX-02 **NEXT GEN HEADSET**EXCLUSIVELY DESIGNED FOR GAMING ON PS3TM

thank you

Thank you for purchasing the EX-02 NEXT GEN Headset from Gioteck. We hope that this product will go beyond your expectations for a quality made accessory. Please read this booklet thoroughly before using the product and review the PS3™ manual for additional details regarding PS3™ operation. Thank you 8 enjoy!

precautions

- Use only as intended.
- · This is a precision product and should be handled with care
- To avoid electrical shock, do not take the product apart.
- · Do not store in areas of extreme heat or cold
- Do not allow product to get wet or dirty: doing so may damage the product.
- · Do not clean with benzene, paint thinner, acetone, alcohol, or other such solvents.

This symbol indicates important installation, operation or maintenance instructions. Always follow these instructions closely



This symbol is intended to alert the user to the presence of potentially harmful or dangerous substances within the product's enclosure. This symbol may also indicate a procedure that will void your product warranty.



Recycling is important and will help to protect our environment and reduce landfill waste





This symbol on the product or in the manual means that your electrical and electronic equipment should NOT be disposed of in normal household waste at the end of its life. It should be disposed of separately. Please take it to a collection point for electrical waste.

features & details

The EX-02 NEXT GEN Headset has been exclusively designed for gamers and gaming, not mobile phones! So you can now maximise your game time without an irritating, uncomfortable earpiece, and still hear your opponent creeping up behind you on your surround sound system!

- 01 | Microphone
- 02 | Speaker
- 03 | Farhook
- 04 | LED Feedback
- 05 | Volume Decrease
- 06 | Power / Mute
- 07 | Volume Increase
- 08 | Magnetic Snap Charger

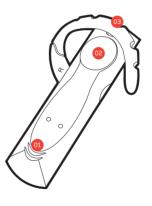

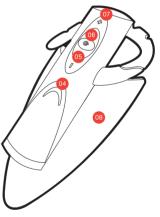

03 | Product Features & Details

04 | Setup

06 | Reversing Earhook

08 | Charging

09 | Operation

10 | Troubleshooting

11 | Care & Maintenance

02 | CONTENTS & PRECAUTIONS PRODUCT FEATURES & DETAILS I 03

pairing your headset



Within the Settings' menu. press X on Accessory Settings.



Press X on the icon labelled: Register Bluetooth® Device.



Press X on Yes.



At the next screen, prepare the Headset to be paired with the PS3™ by holding down the power button until the LEDs flash alternate Blue & Green. When the headset is connected the LEDs will flash Blue every 2 seconds. If not connected, it will flash Green every 4 seconds.



Press X on Start Scanning. Once Scan is complete, the PS3™ will recognise all Bluetooth devices within range.



Locate EX-02 from the list of available devices and press X to be prompted for a Pass Key.



Pass Key and press X on OK.



You should then be taken to a new screen stating: Register completed.



Go to the Settings menu, press X on Accessory Settings.



Press X on the icon labelled: Audio Device Settings.



Choose PS3 EX-02 as your input and output device from the lists. Press X to confirm your choices.




Scroll down and press X when you have highlighted Connect [Bluetooth®]. Your Headset is now ready to use... Enjoy:)

04 | SETUP SETUP | 05

reversing the earhook

The EX-02 ships with two earhooks, each marked [L] for the left ear and [R] for the right ear. After selecting the appropriate earhook, follow the instructions below:

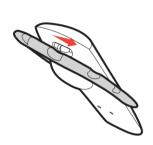

Move the switch to the right to release the shiny fascia shell.



Using your fingernail, carefully prise open the fascia shell from the back of the headset upwards and forwards.



Noting the 4 earhook pins, gently pull away the existing earhook, and store safely.

- EARHOOK PINS



Line-up the earhook holes with the pins and gently guide the replacement earhook over the top until set in position.



cavity, then slowly

hooks into place.

push the rear

06 | REVERSING EARHOOK REVERSING EARHOOK

charging your headset

The headset contains a rechargeable Li-ion polymer battery. Prior to using the headset for the first time, it is strongly recommended to fully charge the battery.


Allow the headset and charger to snap into place by drawing the magnetic discs together [1]. Connect the USB cable to your PS3^M and the mini usb to the headset's magnetic snap charger [2]. The LED will illuminate red during the charging process and will be blue when fully charged. NOTE: Charging indication will be delayed for a few minutes if the headset has not been used for a long time.


charging time

Normally the battery is fully recharged within 3 hours. As soon as the battery is fully charged, the LED will be off or weak Green. Disconnect the USB cable from the PS3TM and the headset.

game time

The fully charged battery offers up to at least 8 hours continuous use. It is advisable to always recharge after lengthy gameplay so the headset is fully charged for the next round.

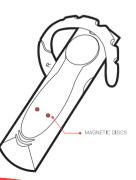

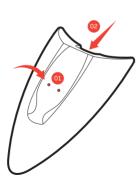



operating your headset

To power on your headset, press and hold the power button for 1 second until the LED flashes Green. NOTE: If the LED flashes Red only, the battery will need to be charged.

To power off your headset, press and hold the power button for 1 second until the LED flashes Red.

adjusting volume

Tap the + button to increase the volume in increments until the headset reaches your desired volume level.

Tap the - button to decrease the volume in increments until the headset reaches your desired volume level.



Do not try to pair the headset to the console, when the headset is attached to the USB cable. If it is attached it will not pair to the PS3TM.

muting

Press the power button briefly (less than 1 second) repeat the process to un-mute.

When in mute mode the LED will flash Blue every 2 seconds, and Red every 4 seconds.



08 | CHARGING
OPERATION | 09

troubleshooting

Having trouble with your EX-02 NEXT GEN Headset? These troubleshooting steps will show you the smoothest path to resolving your issue. Be sure to perform troubleshooting before having your product serviced.

The PS3™ is unable find the Headset.

• If the Headset has been paired with another Bluetooth device, the PS3TM will have trouble finding the Headset. Either remove the Headset from the paired device or turn off the Bluetooth power on the paired device.

The Headest cannot be activated after being charged for 15 minutes.

. To activate the Headset, the battery needs to charge for at least 40 minutes. It is highly recommended to fully charge the battery before use.

No Indication of charging is shown.

. Charging indication may be delayed for a few minutes if the headset has not been used for a long time (more than a month) or if the battery is drained.

No sound can be heard from the Headset.

- · Make sure that the two devices have been paired.
- . Make sure that the two paired devices are within 30 Ft. (9.15 meters) of each other.
- . Make sure that the Headset is turned on and charged.
- · Check In-geme settings.

Please contact support@gloteck.com with any problems/issues you have. Our trained staff have detailed knowledge of our product range and will be happy to solve any problems. [English language support only]

www.gioteck.com

care & maintenance

If the battery is leaking and you come in contact with it, take the following actions: Contact with skin/clothes:

Contact with eyes:

Do not rub, Flush with clean water. Seek medical attention immediately.

environment

Be conscious of our environment, Ion-Lithium betteries are recyclable. Please help to conserve the environment by recycling your bettery.



Never open the Headset unless you plan to dispose of the Headset and recycle your battery. Opening the Headset will void your warranty. Work in an area out of reach of children so that small parts cannot be swallowed. Make sure to follow the directions carefully to avoid injury.



Always make sure to cover any metal contacts on the battery with a piece of tape when disposing of the battery. Never handle damaged or leaking Ion-Lithium batteries. Do not allow battery to come in contact with extreme heat or fire. Avoid direct sunlight or heat sources such as a heater.



RECYCLING ION-LITHIUM BATTERIES. Please help preserve our environment; Ion-Lithium batteries are recyclable. Make sure to return your battery to a collection and recycling center near you.

storage

It is best to store the Headset in a dry and dust free area. Do not store near extreme temperatures.

Clean infected area with water.



REPLACING THE BATTERY Never attempt to replace the Ion-Lithium battery

Warning:

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received. including interference that may cause undesired operation

Contact your doctor immediately if swelling or soreness occurs.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no quarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: - Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -Consult the dealer or an experienced radio/TV technician for help.

10 | TROUBLESHOOTING CARE & MAINTENANCE | 11