



gioteck
COME GET SOME



UX-1 WIRELESS CONTROLLER FOR PS3™

ERGONOMICALLY DESIGNED FOR IMMERSIVE GAMEPLAY





thank you

Thank you for purchasing the VX-1 Wireless Controller from Gioteck. We hope that this product will go beyond your expectations for a quality made accessory. Thank you & enjoy!

precautions

This product has been designed with the highest concern for safety. However, any electrical device, if used improperly, has the potential to cause harm. To help ensure risk-free operation please pay attention to the following guidelines.

Use only as intended. This is a precision product, handle with care. Contains small parts. Not suitable for children under 3 years of age. Store in a dry & dust free area. Do not store in areas of extreme heat or cold, and avoid direct sunlight or heat sources eg. heaters. Do not allow the product to get wet or dirty; doing so may cause damage. Do not take the product apart; doing so will void your warranty and may cause electrical shock.

warnings



This symbol indicates important installation, operational or maintenance instructions. Always follow these instructions closely.

environment



Please help to conserve the environment by recycling the inner cardboard packaging of this product.



This controller should NOT be disposed of in normal household waste. It should be disposed of separately. Please take it to an electrical waste collection point.

CONTENTS

- 02 | Contents & Precautions
- 03 | Features & Details
- 04 | Set Up / Assigning
- 05 | Charging / Sleep Mode
- 06 | Troubleshooting
- 07 | Legals





features & details


- 01 | Home Button with LED feedback
- 02 | Directional Pad
- 03 | Function Buttons
- 04 | Select Button
- 05 | Start Button
- 06 | L3 Thumbstick
- 07 | R3 Thumbstick
- 08 | R1 Button
- 09 | R2 Button
- 10 | L1 Button
- 11 | L2 Button





set up

Connect on your PS3 and switch on your console. The LED on the dongle will begin to flash [01]. Press the MENU/Power button [02] to assign your VX-1 to your PS3.

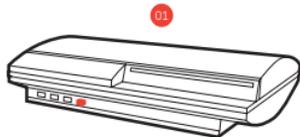

assigning your controller

Once connected 1 or 2 LEDs around the home button will light.

To add multiple controllers or assign your controller to a different port, go to:

Accessory Settings – Reassign Controller.



Assigned to port 1.




Assigned to port 7.






charging

Connect the controller to a PS3 or PC with the USB cable provided and allow to charge for 3 hours [1].
The controller provides 4-6 hours of gameplay once fully charged.

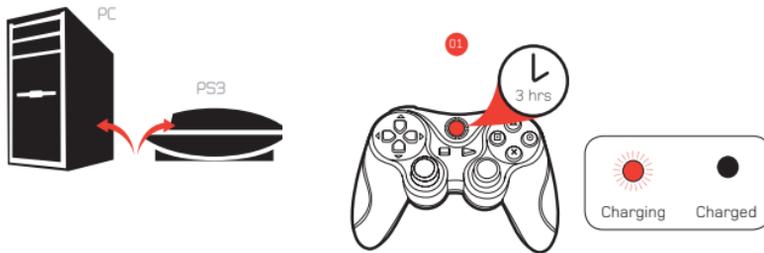

sleep mode

The VX-1 will go into sleep mode if not used for 5 minutes.
To wake the controller, press the MENU/Power button.

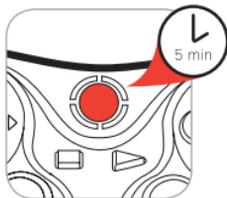

For upgradable firmware via Gioteck software, go to www.gioteck.com to download the latest updates.





troubleshooting

Having trouble with your VX-1 controller? These troubleshooting steps will show you the smoothest path to resolving your issue. Be sure to perform troubleshooting before having your product serviced.

The VX-1 will not turn on.

Check to make sure that the built in battery is fully charged.

I am having trouble pairing my controller.

Make sure that you have followed the instructions carefully on page 4.

NOTE: You must plug in your USB dongle cable to enable pairing.

The LED is flashing even though the rechargeable batteries are fully charged.

Rechargeable batteries provide a low voltage which triggers the LED to flash. Even at a low voltage, batteries will still provide substantial game time.

The VX-1 is switched on but is not recognized by the PS3™.

Make sure that the VX-1 is paired to the PS3™ (see page 4) and your batteries are fully charged.

Remove the USB dongle from your PS3™ and reconnect.

The SixAxis function is not working in my game.

The VX-1 does not have SixAxis support.

For further assistance please contact our customer support team on our website: www.gioteck.com





legals

This product complies with the following legal regulations. For further information go to www.gioteck.com.

CE Gioteck hereby declares that this controller is in compliance with the essential requirements and other provisions of Directive 1999/5/EC. To view the full version of the Declaration of Conformity please go online to doc.gioteck.com.

FC This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. The device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter. Gioteck are not responsible for any interference caused by unauthorized changes to this equipment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed correctly, may cause harmful interference to radio communications. If this equipment does cause harmful interference to radio/television reception try the following:

- Reorient or relocate the receiving antenna.
- Increase distance between the equipment & receiver.
- Connect the equipment into an outlet on a circuit different from the receiver.
- Consult the dealer or a radio/TV technician.

FCC WARNING

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: The manufacturer is not responsible for any changes or modifications not expressly approved by the manufacturer for compliance, such modifications could void the user's authority to operate the equipment.