# OVER-EAR BLUETOOTH HEADPHONES



**USER MANUAL** 



Goodmans

## 1 Welcome



- 2 Your Bluetooth headphones
  - 2.1 In the box
  - 2.2 Front View
  - 2.3 Rear View
- 3 Power On/Off, pairing and charging
  - 3.1 Charging
  - 3.2 Turning your headphones on and pairing
  - 3.3 Making a call
  - 3.4 Answering and ending a call
  - 3.5 Playing music
  - 3.6 Line in
- 4 Maintenance
- 5 Troubleshooting
- 6 Technical Specification
- 7 Customer Support

## 1. Welcome



Thank you for choosing this Goodmans product. We've been making electronics for the British people for 70 years. Each of our products has been carefully designed to be great at what it does and this one is no exception. We hope you enjoy your new Bluetooth headphone.

## 2. Your Bluetooth Headphones


#### 2.1 In the box

Carefully remove your bluetooth headphones from the packaging. Inside the box you will find:

- · Bluetooth headphones
- USB Cable
- · Line in cable
- · Ouick Start Guide
- · Guarantee Booklet

If any of these items are missing, contact customer support. Visit: www.goodmans.co.uk/support


#### 2.2 Front view

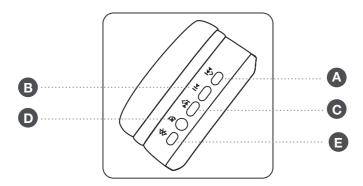

- A Button. Press to play the next song or increase the volume.
- B ► Button. Press to play or pause playback.
- Button. Press to play the previous song or decrease the volume.
- D & Button. Press to answer or end phone calls.

#### 2.3 Rear view



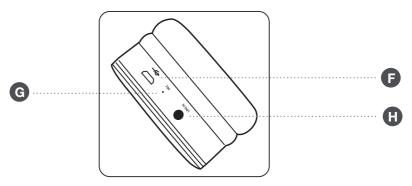


- Micro USB socket for charging.
- G Microphone for talking.
- H Line in socket for wired audio input.

# 3. Power On/Off Pairing and Charging

## 3.1 Charging

This product has a built in rechargeable battery. The battery is not fully charged as supplied.

 Insert the micro USB cable into the headphones and the other end into a computer or compatible adaptor.

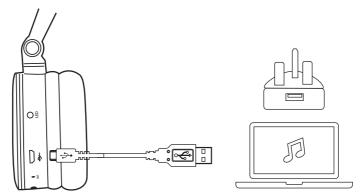


Charge the headphones for at least 4 hours on first use, and 2-3 hours there after.

2. During charging, the LED indicator will show red. When the battery is completely charged, the red LED indicator will turn off.

### 3.2 Turning your headphones on and pairing



 

- To turn your headphones on and pair for the first time, press and hold the 

   button
   for up to 10 seconds, until the red and blue light flash quickly.

   Thereafter, press and hold the button, for up to 5 seconds to turn the headphones
   on.
- 2. Use the bluetooth menu on your phone to find the bluetooth headphones. 'GHP04BT' should appear in the list of available devices.
- 3. Select 'GHP04BT. Once your headphones and mobile phone is paired, the headphones will beep twice and the blue LED will start flashing slowly. If your mobile phone asks you to enter a passkey, enter '0000'.
- 4. To turn your headphones off, press and hold the ★ button for up to 5 seconds, until the led indicator light goes out.
- 5. If you are using the line in cable, music will automatically play through the headphones. You do not need to turn the headphones on.
- 6. If the headphones are not paired within 3 minutes, they will automatically switch off.

#### Low Battery:

If the battery power drops below 3.3v, the red light on the headphones will flash twice every 10 seconds and the headphones will beep twice.

#### 3.3 Making a call

- 1. Use your mobile phone to dial the number. Calls are switched to Bluetooth mode automatically (some phones may require you to switch manually).
- 2. To redial the last number, press the ♥ button.

#### 3.4 Answering and ending a call




- 1. When a call comes in, press the ७ button to answer the call.
- If you have already answered the call, res the \* button to transfer the call to your mobile phone. Press the button again to switch the active call back to switch back.
- 3. To reject an incoming call, hold the & button.
- 4. To end a call press ♥.
- 5. To change the volume whilst in a call, hold the sh button to decrease the volume.

#### 3.5 Playing music

- 1. To play the next song, press the ♠ button once
- 2. To play the previous song, press the ♥ button once
- 3. To play or pause playback, press the > button once.
- Press the ♥ button to decrease the volume. Press the ♣ button to increase the volume.
- 5. Press & to end a call. After ending the call, the music will resume playing automatically.

#### 3.6 Line in

If you wish to use the headphones with a non-Bluetooth device, or the battery is empty, you can plug a 3.5mm audio jack into the Line in socket to use the Bluetooth headphones as wired headphones.

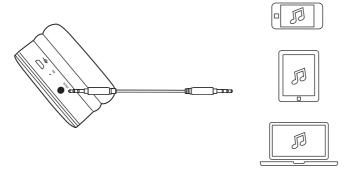

## 4. Maintenance



- Using the headphones with non-original accessories may cause performance degradation, personal injury, electrical short circuit and voiding of the warranty.
- Disassembling the product may damage it and void your warranty.
- Do not keep the headphones in a dusty environment.
- Use a clean, soft, dry cloth to clean your headphones.
- Keep the headphones out of reach of children.
- Do not use the headphones in conditions of extreme temperatures.

#### **Battery maintenance**

- Using the headphones properly will extend the life of rechargeable battery.
- $\blacksquare$  The rechargeable battery can be used at temperatures between 10 and 45  $^{\circ}$  C.
- The full battery capacity can be used at room temperatures.
- In outdoor conditions, battery capacity may be lower.
- If you do not use the headphones for an extended period, please charge the battery at least once every two months.

## 5. Troubleshooting

Problem	What to do
Can not turn the headset on.	Charge the headphones and try turning on again.
No sound.	Put the mobile phone nearer your headset.
Slight pause / Sound drops out.	Other wireless signals like WiFi can interfere with Bluetooth. Try moving to a different area.
No sound for a second or two repeatedly.	Low power, charge your headset.
Cannot operate your headphones or cannot turn them off.	Connect your headset with power supply; to reboot your headphones.
No sound in one ear when used as a wired headset.	Ensure the plug is completely inserted.
Cannot find GHP04BT on the list of Bluetooth devices.	Clear your Bluetooth devices list from your mobile phone and try again.

# 6. Technical Specification



Туре	Bluetooth headphones
Model no.	GHP04BT
Frequency	2.402 GHz ~ 2.480 GHz ISM Band
Class	CLASS 2
Channel	79 channels 1Mhz BW
Connection	P2P
Range	Up to 10 metres
Audio frequency response	20 Hz - 20 kHz
Standby time	Up to 250 hours (fully charged)
Signal-to-Noise ratio	80 dB
Indicator	Red & blue dual color LED
Bluetooth version	V2.1+EDR
Devices supported	PC, USB Bluetooth dongle, cell phone, mobile internet devices (iPad, etc.) that support HFP, HSP, A2DP, AVRCP Bluetooth
Battery	Lithiam-ion Polymer Battery 3.7 V 250 mAh
Audio output power (max.)	2 x 10 mW
Operating time on battery	8 hours (fully charged)

# 7. Customer Support

Our customer service team is available for technical or guarantee support. Visit www.goodmans.co.uk/support