



SIM Card Insertion

To insert SIM card, please make sure to follow the direction as below. The metal part of SIM card is facing upward.

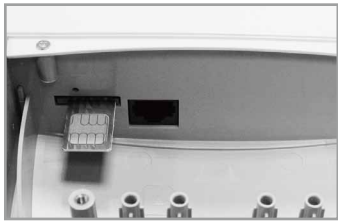

Reset

To reset the device, use the pin to press the Reset button.

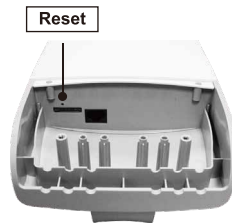

LED Indication



	BLINK	Power On	No SIM	SCAN	Auth.	DHCP IP	Weak	Good	Strong	F / W Upgrade
○	☀	●	☀	○	○	○	○	○	○	☀
○	ON	○	☀	☀	☀	☀	○	○	●	☀
○	●	○	☀	○	○	○	●	●	●	☀

Claim FCC Regulations (OF-250 & OT-350 only)

FCC Regulations

- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - (1) This device may not cause harmful interference, and
 - (2) this device must accept any interference received, including interference that may cause undesired operation.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.

FCC RF Exposure Compliance

This equipment complies with radio frequency (RF) exposure limits adopted by the Federal Communications Commission for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20 cm between the radiator & your body.

LTE Residential Outdoor CPE Device Installation Instruction


Purpose

This instruction illustrates how to mount, as well as connect and install the outdoor CPE device.

Before Installing the Outdoor CPE Device

It is important to comply with the precautions listed below before installing.

- It must be installed by qualified service personnel who are well-trained in the correct procedures for installing the equipment.
- Avoid installing or working on equipment in adverse weather conditions.
- Do not disassemble the product. Warranty void if seal is broken.
- Please install the device underneath the eaves of house, or the eaves of equipment room on rooftop.
- Do not install the device on the lightning rod pole. A random lightning could easily cause fatal damage to the device.
- Ensure that the device is within the shielding angle of the lightning rod.

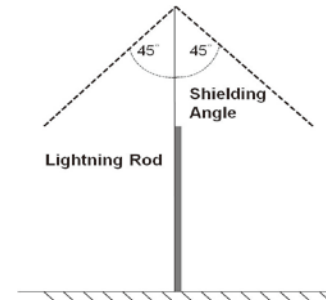

- Lightning / Lightning Induction / EMD damage is NOT covered under warranty.

Warranty:

Hardware warranty is for one year (12 months) from the date of purchase. Customer's unit and his accessories under normal use for warranty period is free from error, improper or inferior workmanship, material, and design.

This Warranty does not cover damage resulting from:

1. Defects and damages due to the equipment being used other than its normal and customary manner.
2. An unauthorized disassembly, repair, alteration or modifications being carried out, misuse, abuse, negligence or accident howsoever caused.
3. Defects or damage arising from improper testing, operation, maintenance, installation, or any alteration or modification.
4. Use other than in accordance with the user manual, rough handling, exposure to extreme thermal or environmental conditions or a rapid change in such conditions, corrosion, oxidation, unauthorized modifications or connections, unauthorized opening or repair, repair by use of unauthorized spare parts, accidents, forces of nature, or other actions beyond the reasonable control of GP.

Package Content:

ITEM	Quantity	Item	Quantity
ODU CPE	1	WIFI Router (optional*)	1
Passive PoE Injector(default)	1	Cable Cover	1
Power Adaptor	1	Screws (for cable cover)	2
Metal Strap	2	Rubber Cap (for screws)	2
Rubber Cap (for cable holes)	2		

Warning! User must use the Power adaptor and Passive PoE injector shipped in the ODU package.

Using other power supply unit could cause damage to ODU.