

Copyright

- Copyright © 2007 Group Sense Mobile-Tech Limited. All rights reserved.
- Product specifications and features are for reference only and are subject to change without prior notice.

Declaration

- This Quick Start Guide is published by Group Sense Mobile-Tech Limited without any warranty. Improvement and changes to this Quick Start Guide necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by Group Sense Mobile-Tech Limited any time and without notice. Such changes will, however, be incorporated into new editions of this Quick Start Guide.

FCC Statement

This device complies with Part 15 of the FCC Rules.



Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Radiation Exposure Statement

The antennas used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

0678 Declaration of Conformity

We, Group Sense Mobile-Tech Limited, declares that this product i280 is in compliance with the essential requirements of CONFORMITY WITH EUROPEAN.

Important safety information

PLEASE READ THIS CAREFULLY BEFORE USING i280!


- Always treat your product with care and keep it in a clean and dust-free place.
- Do not expose i280 to moisture or humidity.
- Do not expose i280 to extreme high or low temperatures.
- Do not attempt to disassemble your product.
- Use only the chargers approved by Group Sense Mobile-Tech Limited. The use of any other type may invalidate any approval and warranty. No reverse charging with other chargers, they may have inverse polarity.
- Never use the charger if the plug is damaged.
- Never touch the charger if your hands/feet are wet.
- Do not expose the charger to water, it may cause electrical fires.
- Do not repair the charger yourself for your safety.
- To reduce the risk of fire or burns, do not disassemble, crush or puncture the battery.
- For i280 model, only approved chargers that are designed for the model can be used with i280 unit.

Content

Getting to know i280	3
i280 overview	3
Battery	3
Inserting/removing extension card	4
Getting started	4
Turning on/off i280	4
Menu overview	4
Wi-Fi connection settings	5
i280 settings	6

Getting to know i280

i280 overview

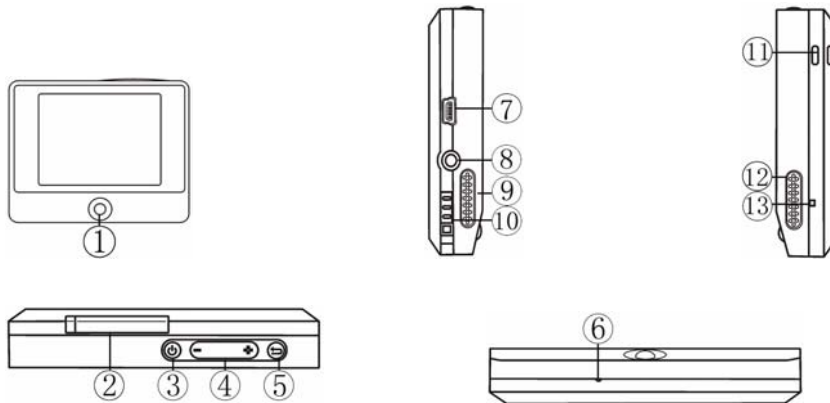

	Name	Description
1	Navigation track ball/LED light	Roll leftwards/rightwards to select application; roll upwards/downwards to select item; press to enter. Show the status for Wi-Fi and battery
2	SD card slot	Support Micro SDHC
3	Power key	Press and hold to turn on/off; press to suspend
4	Volume key	Press to adjust volume
5	Return key	In application, return to last page; in submenu, close the submenu
6	Mic	
7	USB port	Charging battery/connect USB to PC for data synchronization
8	Earphone	
9/12	Speaker	
10	Hold key	All keys cannot be used except the reset hole if it is on (push upwards)
11	Strap hole	
13	Reset hole	Reset i280 when it does not work

Battery

The i280 is using irreplaceable battery. We recommend that you fully charge battery before you use i280 for the first time.

To charge the battery

1. Connect your charger to USB port.
2. Plug the charger to main electrical outlet.

Note: You can use i280 normally during charging battery with AC adaptor; on the contrary, i280 cannot be used if charging with USB.

Inserting/removing extension card

You can copy photos and songs to the extension card.

To insert extension card

1. Open the extension card slot on the top of i280. Insert the card into card slot.
2. Close the extension card slot.

To remove extension card

1. Open the extension card slot.
2. Press the inserted card to release and then remove card.

Getting started

Turning on/off i280

To turn on i280

1. Press and hold the Power key on the top of i280.
2. The boot up animation is shown. It will boot to main menu in 20 seconds.

To turn off i280


1. Press and hold the Power key on the top of i280 to turn it off.



To suspend i280


1. If i280 is on, press the Power key to suspend, so as to save power.

Menu overview

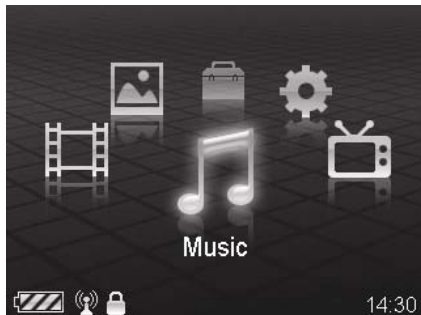In main menu, roll the Navigation track ball leftwards/rightwards to select an application you need, and press it to enter.




1. Music 
2. Video 

3. Photo Viewer 

4. Utilities 

- Wi-Fi Connection Manager
- Internet Radio

- Voice Recording
- Sleep Timer






 

5. Setting 

- Power Save Setting
- Date & Time Setting

- Backlight Setting
- System Setting



6. Net TV 

Description for icons on status bar

Icon	Description
	WLAN connected
	WLAN connecting
	WLAN disconnected
	Hold key is on
	Battery low
	Battery full
	Battery charging

Wi-Fi connection settings

1. In main menu, roll the Navigation track ball leftwards/ rightwards to select “Utilities” and press it to enter.

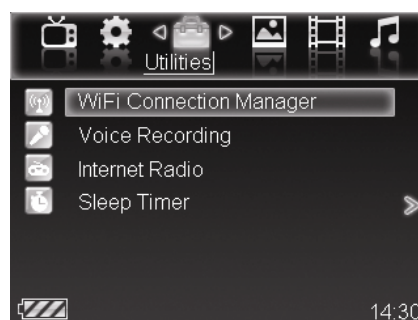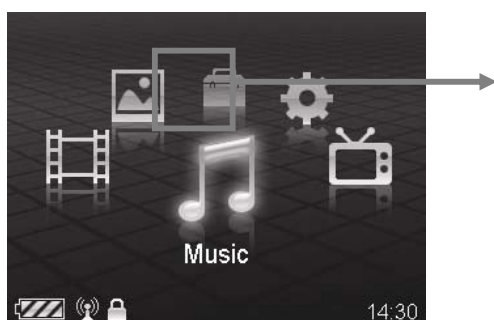


2. Select “Wi-Fi Connection Manager” and press the Navigation track ball to enter. The WLAN is off by default.


3. Press the Navigation track ball to enable WLAN, i280 will search for available Wi-Fi network automatically.








4. Roll the Navigation track ball upwards/downwards to select a Wi-Fi network record and press it to connect.

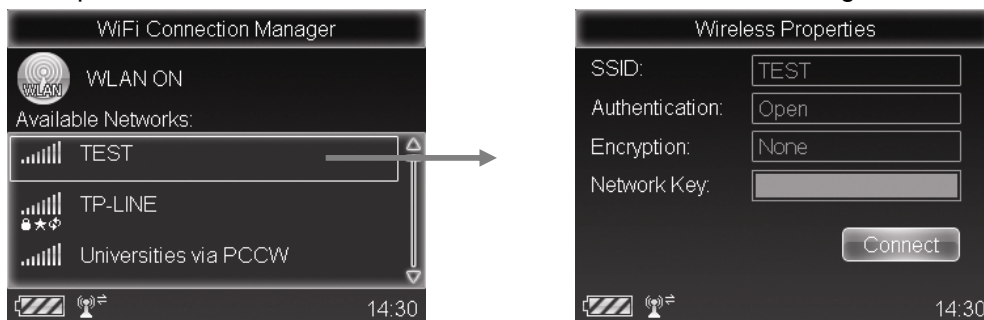 5. It will access to “Wireless Properties” if there is no profile, user needs to create one. (If there is profile for the selected Wi-Fi network, it will access to connecting screen directly)



6. Enter encryption key when needed. (The icon  will be displayed for the Encrypted Wi-Fi network)

 7. Select  and press the Navigation track ball to connect. The icon  and  will be displayed if connection succeeds.

8. Select the Wi-Fi network with profile and press  to connect Wi-Fi, the icon  will be displayed on the status bar if connection succeeds.

i280 settings

To change i280 settings, select Setting  in main menu, see the following description for more information.

Power save setting


To make configuration in Power save setting to save battery power.

1. Select Power Save Setting in Setting screen.
2. Press the Navigation track ball to select Screen-Off Timer, roll the Navigation track ball

downwards to select screen-off time, press it to confirm.

3. Roll the Navigation track ball downwards to select WLAN Power Save, and press it to select On/Off.

4. Press the Return key and back to Setting screen.

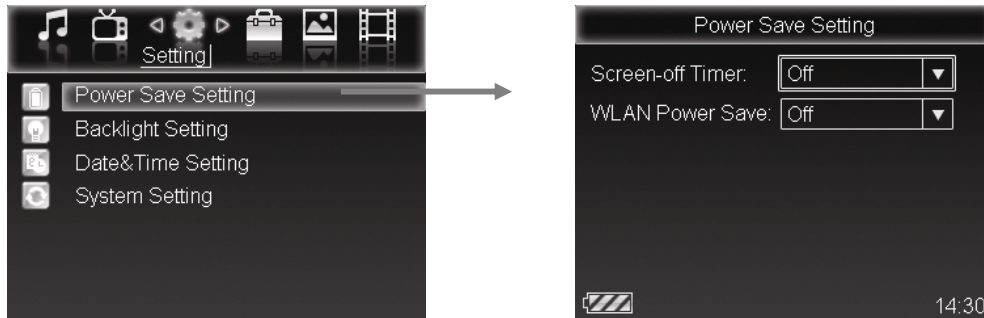

Note: Press the Power key to activate i280 when it is in suspend mode; press any key to activate the suspended i280 when you are playing songs in background playing mode.


Backlight setting

To set the i280 backlight brightness in Backlight setting. Two modes for you to select.

1. Select Backlight Setting in Setting screen.

2. You can select Using the battery power or Using the external power. Roll the Navigation track ball leftwards/ rightwards to set the backlight brightness.

3. Press the Return key and back to Setting screen.

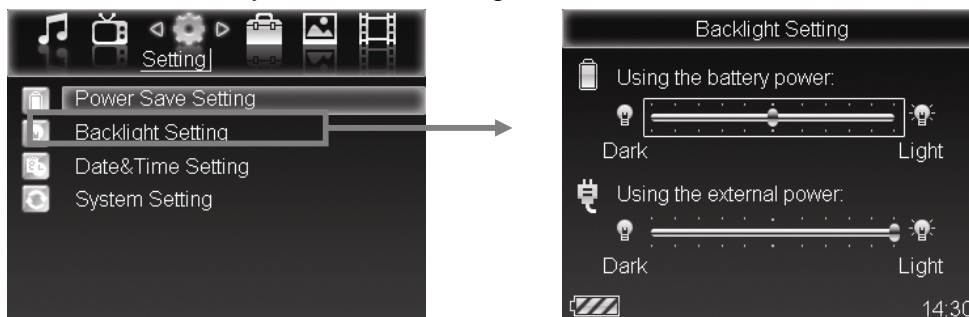

Date & Time setting

To set the date, time, date & time format and time zone in Date & Time setting.

 
1. Select Date & Time Setting in Setting screen.

2. To set date and time: press the Navigation track ball to select year, and roll the track ball upwards/downwards to set the year; roll the track ball leftwards/ rightwards to select month, day and others. Press the Navigation track ball when finish setting.

3. Roll the Navigation track ball downwards and press it to select the date format you like.

4. Set time format, time zone and daylight saving as point3.

5. Press the Return key and back to Setting screen.

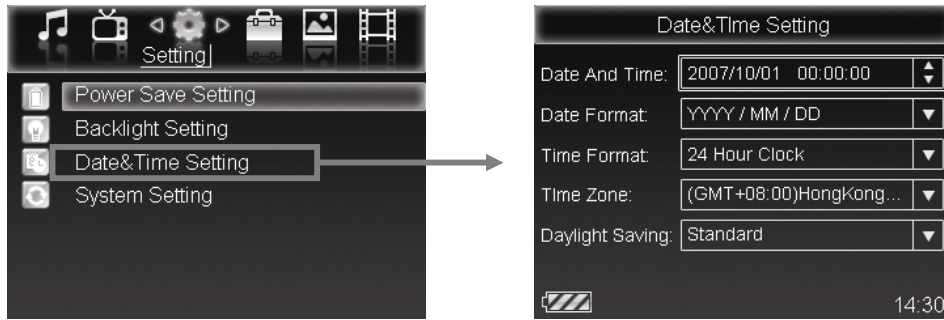


System setting

To set the system language, theme, and view the information of battery, system and network in System setting.

System language setting

 1. Select System Setting in Setting screen.
2. Then select System Language.

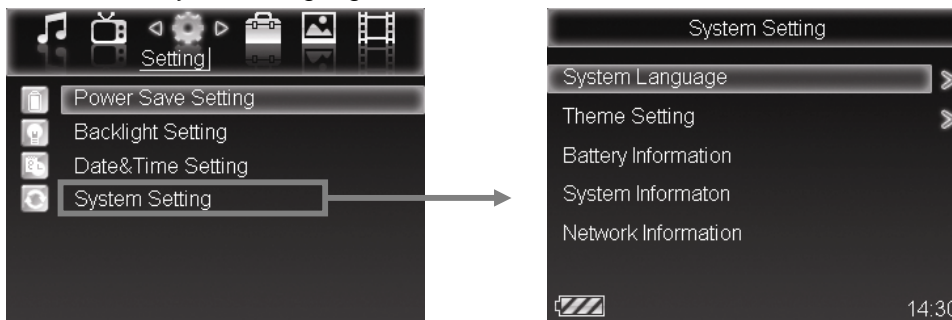

3. Press the Navigation track ball to select a language you need. Press the track ball again to confirm your selection.

Theme setting

1. Select Theme Setting in System setting.
2. Press the Navigation track ball and roll it downwards to select the theme you like.
3. Press the Navigation track ball to confirm your selection.

View information

1. Select Battery information, System information or Network information in System setting.
2. Press the Navigation track ball to view the details.
3. Press the Return key and back to System setting.