



GameSir • Gaming is Winning.™

© 2018 GameSir Inc. All rights reserved.
Product may vary slightly from those pictures.

GameSir G6/G6s

Mobile Gaming Touchroller

User Manual ►

POWER UP YOUR GAMESIR DEVICE



<https://gamesir.hk/pages/g-crux>
(GameSir G-Crux)

PACKAGE CONTENTS

GameSir G6/G6s Mobile Gaming Touchroller
Micro-USB Cable
User Manual

SYSTEM REQUIREMENT

iOS 9.0 or later


REGISTRATION

Register your GameSir ID online at <https://gamesir.hk/> to get real-time information on your product's warranty status and a series of exclusive benefits from GameSir.

YOUR BENEFITS

- * 12-month replacement of the same model from the date you received it.
- * Free online technical support at <https://gamesir.hk/>

DEVICE LAYOUT

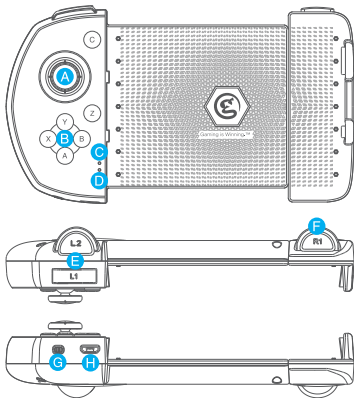

- A** Joystick
- B** YXBA Buttons
- C** LED Mode Indicator Light
- D** LED Power Indicator Light
- E** L1/L2 Trigger Button
- F** R1 Trigger Button
- G** Power Button
- H** Micro-USB Charging Port

G-Touch TECHNOLOGY

GameSir G6/G6s uses G-Touch technology that supports iOS native games. Download games from Apple App Store and you can play games after Bluetooth connection. Meanwhile, with the GameSir G-Crux app, you can customize buttons to your own preference to maximize in-game control.

CONNECTION

- a. Turn on the Bluetooth of iOS device.
- b. Press Y+power buttons on GameSir G6/G6s simultaneously, the LED mode indicator light will flash in pink and then remain lit. The connection is complete.

* You only need to press the power button the next time, GameSir G6/G6s will automatically connect to the iOS device.



GameSir G6/G6s Tutorial

AUTOMATIC POWER OFF

- a. When GameSir G6/G6s is connected, it will automatically turn off if there is no operation for 5 minutes.
- b. When GameSir G6/G6s is in a low battery state, the LED power indicator light will flash in red.
- c. GameSir G6/G6s will automatically turn off when the available battery power is lower than the battery protection requirement.

POWER INDICATOR

- a. When GameSir G6/G6s is being charged, the LED power indicator light will flash in red.
- b. When GameSir G6/G6s is fully charged, the blue LED power indicator light will stay on.

JOYSTICK CORRECTION

When GameSir G6/G6s is turned on, press and hold L1+L2+C+L3 buttons simultaneously for 3 seconds, the LED mode indicator light and power indicator light will flash alternately, indicating that it is in the joystick correction mode. Rotate the joystick 3-5 turns, then press L1+L2+C+L3 buttons simultaneously for 3 seconds to save the correction. The joystick correction is complete.

DELETE PAIRING DATA

When GameSir G6/G6s is turned on, press and hold C+Z buttons simultaneously for 3 seconds, the LED mode indicator light will flash quickly, indicating that the pairing data is deleted, you can connect to a new iOS device.

DUAL MOTOR VIBRATION

Dual motor vibration enhances game immersion and you can customize the intensity and duration of vibration with GameSir G-Crux app.

Please note: Only GameSir G6s has dual motor vibration.

FCC Caution.

§ 15.19 Labelling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

§ 15.21 Changes or modification warning.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

§ 15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.