

User's manual

Dual Microphone/Hall switch true wireless stereo earbuds I92 PRO

Product and accessories

Earbuds *2
charging case *1
2 pairs of ear caps
Charging cable *1
User manual *1
Certificate of quality*1

Description of product structure

1. Contact point
2. MFB (Touch panel)
3. Indicator light
4. Charging port
5. Reset button

Wearing method

Gently cram the earbuds into the cochlea then adjust the appropriate angle

Basic function

Power on,Bluetooth connection

---Follow the steps (Please confirm that your phone is built-in Bluetooth function)

1. Power on
 - a)Method 1: Remove earbuds from the charging case.
 - b)Method 2: If earbuds are power off outside the case, touch and hold MFB button for 3 seconds on both sides to turn them on.
After earbuds' indicators flash red and white, they will enter into the Connection mode and the product is ready for use.
2. Turn on Bluetooth on your device and select "HAVIT i92 PRO" referring to your phone instructions.
3. Pairing mode can just last 180 seconds. if you miss the pairing time, you need to restart the device and operate follow the procedural steps mentioned above.

*Note:

- a). HAVIT i92 PRO remembers previously connected devices. When turned on, earbuds attempts to reconnect to previously connected devices.
- b). HAVIT i92 PRO will lose the connection when deviate the working range of Bluetooth. The earbuds will reconnect automatically if you come back to the range in 3 minutes.

Power off

Method 1: Put the earbuds into the charging box, they will automatically shut off.

Method 2: Touch and hold MFB for 5 seconds, the earbuds are turned off.

Answering/Hang up incoming calls

Short press left/right MFB once to hang up the current phone call and answer incoming calls.

Reject the call

Long press left/right MFB 2s to reject the incoming call.

One key for Siri

Long press the left/right MFB for 2 seconds to activate voice assistant and the voice assistant pops up.

Music playing

1. Play/Pause: short press the left/right MFB once;
2. Double-Click the left MFB to switch to the previous song;
3. Double-Click the right MFB to switch to the next song.

Charging

-Case

Charge the case using the Type-C cable connected to a computer or wall charger. The indicator at the front of the charging case flashes red when charging and turns solid when fully charged.

-Earbuds

Put the earbuds back into the charging box for charging. While charging, the indicator turns solid red. After full charge, the red light goes out. The number of lights indicates the charging case battery status when the earbuds are placed in the case.

When LED 1 flashes red and rest stay off, the case remains battery 0-25%;

When LED 2 flashes red, LED 1 stays solid and rest stay off, the case remains battery 25%-50%;

When LED 3 flashes red, LED 1&2 stays solid and rest stay off, the case remains battery 75%-99%;

When all the LEDs stay solid red, the case is fully charged.

Mono mode (take out any earbuds as a unilateral bluetooth earbud)

(note: single channel mode only needs to remove one of earbuds from the charging box; If two earbuds are removed before connection, the earbud will be used in TWS mode by default, and the TWS connection will be automatically realized.)

1. Take out an earbud from charging case, the earbud automatically turn on and reconnect to previously connected devices.
2. Switch from one earbud to the other when playing music, taking out the other earbud from

the charging case and these two earbuds will be connected automatically. Both earbuds will play music automatically and then put the earbud which does not need anymore into the charging case and the switching process completes.

(note: Call mode is applicable)

3. Please refer to the TWS mode for more functions.

Restore factory settings

If the earbuds encounter following problems, please restore the factory settings.

1. One earbud is not working;
2. Earbuds are not in connection/scan mode;
3. Earbuds disconnect during phone call;
4. There are other exceptions in usage.

The operation steps are as follows:

Step 1: Place both the earbuds back side the charging case in correct orientation and do not close the case lid at this moment.

Step 2: Long press the Reset Button on the charging case for up to 10 seconds to do factory reset, which is indicated by 2 times flashing of red LED on the earbud and 5 seconds of solid red on the indicators of charging case.

Step 3: Close the lid of the case and then after a few seconds reopen it, the reset is completed and can be connected normally.

Warnings

1. Please follow the instruction to operate.
2. Please charge the earbuds with input power below 5V/1A, in order to protect the battery.
3. Please store or use the earbuds in a normal temperature environment.
4. Please do not use this product near the water. Do not immerse this product in any liquid or splash any liquid on this product.
5. Please keep the earbuds from heat source, such as radiators, hot air regulators, stoves, or other heat generating instruments. As it is not anti high temperature.
6. Don't jam the ports of the earbuds, such as charger port, LED port and microphone etc..
7. In order to protect your hearing and extend the speaker service life, it is not recommended to adjust the volume to the maximum level for a long time.
8. Whatever reasons damage the earbuds, please feel free to contact our after-sales staff in time rather than repair by yourself. Otherwise, you will accept without after-sales service.

Specification

IPX5 waterproof

Bluetooth Version: V5.2

Charging case dimension: 80*33*30.4mm

Earbud dimensions: 40*18.8*25.2mm *2

Net weight: 4g*2 (Earbuds) / 41g (Charging case)
Wireless working range: 10M (without obstacles)
Input voltage / current: DC 5V/1A
Earbud Battery: 40mAh*2
Charging case battery: 420mAh
Bluetooth profiles:HFP,HSP,AVRCP,A2DP
Charging time: About 2H
Play time: 8H (60% volume)
Talk time: 7H

FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.