



RETRO BLUETOOTH® SPEAKER
4000774
User's Guide

We hope you enjoy your REALISTIC Retro Bluetooth Speaker with elegant cherry wood finishing to provide stunning sound. Please read this user's guide before using your new speaker.

Package Contents

- Speaker
- AC Power cable
- 3.5mm audio cable
- User's Guide

CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN

WARNING: To reduce the risk of fire or shock hazard, do not expose this product to rain or moisture.

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER OR BACK. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.

The lightning symbol is intended to alert you to the presence of uninsulated, dangerous voltage within this product's enclosure that might be of sufficient magnitude to constitute a risk of electric shock. Do not open the product's case.

The exclamation symbol is intended to inform you that important operating and maintenance instructions are included in the literature accompanying this product.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
10. Only use attachment/accessories specified by the manufacturer.
11. Unplug this apparatus during lightning storms or when unused for long periods of time.
12. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
13. Water and Moisture: This product should be kept away from direct contact with liquids. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus. **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
14. Caution: This product uses a built-in battery. Batteries shall not be exposed to excessive heat such as sunshine, fire, etc.
15. Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
16. This equipment is a Class II or double-insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

17. No naked flame sources, such as lighted candles, should be placed on the apparatus.
18. Batteries should be recycled or disposed as per state and local guidelines.
19. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
20. Allow at least 10cm distances around the apparatus for sufficient ventilation.
21. Use of the apparatus in moderate climates only.

Specifications

Power supplyAC ~100-240V, 50/60Hz
 Power consumption..... 25W
 Battery.....14.8V, 2000mAh, 29.6W lithium polymer
 Battery Charging Time.....approx. 4 hours
 Playtimeup to 16 hours at medium volume
 Frequency Response..... 45 Hz – 20KHz
 2.1 Output (max.) 5 W x 2 tweeters, 15W subwoofer
 S/N ratio 70dB
 Impedance.....4 Ohms
 Drivers0.75" neodymium tweeters, 4" ferrite subwoofer
 Bluetooth Protocol.....V2.1 with EDR
 Dimensions (H x W x L)5.5 x 9.5 x 5.5"
 Speaker weight 5.51 lbs
 Operation Range..... 33 ft
 Specifications are subject to change and improvement without notice. Actual product may vary from the images found in this document.

Power / Charge Your Speaker

1. Connect the supplied power cable to the **AC IN** jack and a standard mains wall outlet.
2. Unplug the cable after charging.

- Notes:**
- For best sound performance, fully charge the speaker before use, or when you hear the "Battery low" voice prompt, or the **BATTERY** LED flashes slowly.
 - The supplied power cable can also be used to directly power the speaker.

Lithium Battery Notes:

- Charge batteries on a fireproof surface away from flammable items or liquids. Follow the instructions for charging the speaker and do not charge longer than recommended.
- Recycle lithium batteries. Do not dispose of them in the trash. Do not burn or bury batteries. Do not puncture or crush. Do not disassemble.
- If the electrolyte in the cells should get on your skin, thoroughly wash with soap and water. If in the eyes, rinse thoroughly with cool water. Immediately seek medical attention.

Connecting to a Bluetooth Device

1. Press the **ON/OFF** button to turn on the speaker.
2. Activate your device's Bluetooth function (refer to your device's user's guide). When your device locates **Realistic Retro**, select this from the device list. If your smartphone requires a password, enter 0000. When paired, the indicator lights blue steadily.


Top Panel Controls



LEDs


- **BLUETOOTH**
 - flashes quickly – pairing
 - flashes slowly – out of range
 - lights steadily – connected
- **AUX IN** lights green when line-in cable connected
- **BATTERY**
 - Lights red during charging
 - Flashes slowly when battery low

BACK VIEW

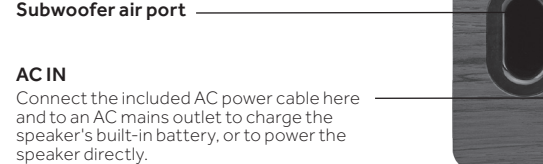

AC IN

Connect the included AC power cable here and to an AC mains outlet to charge the speaker's built-in battery, or to power the speaker directly.

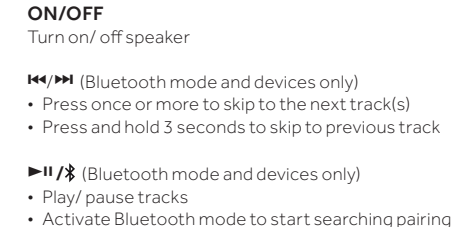

ON/OFF

Turn on/ off speaker

VOLUME, BASS, TREBLE

Volume and sound controls

Subwoofer air port

AC IN

To AC outlet

3. Use the controls on your device, or the playback buttons on the speaker to play music.

Notes:

- The speaker will disconnect and power down from your device if they are too far apart, or left idle. To reconnect, move the speaker/ device within Bluetooth connection range, within 15 minutes.
- Function of speaker playback buttons may vary depending on compatibility with your actual Bluetooth device.

Reset Bluetooth Pairing

Normally, your speaker automatically reconnects to the most recently paired device when switched on.

If you want to change to other Bluetooth devices, or have difficulty pairing to a new device, or experience problems reconnecting your current device, do the following:

- In Bluetooth pairing mode, press and hold **Bluetooth** for 3 seconds. You will hear an audio double tone (a low and a high note). This indicates the speaker is now successfully reset. Any previously paired devices are now cleared from the speaker's Bluetooth memory.

Connecting with AUX IN

For device players without Bluetooth functionality, use the included 3/8" (3.5mm) audio cable to connect to the speaker's **AUX IN** jack. The speaker's **AUX IN** LED lights up green during connection.

Note:

- Bluetooth functionality is automatically deactivated when **AUX IN** is connected.
- The speaker playback control buttons **Play/Pause** and **Next** are only valid in Bluetooth mode.

Troubleshooting

No sound/power

- Make sure the built-in battery is fully charged using the supplied AC power cable. Alternatively, use the cable to power and operate the speaker directly.
- Check and turn up the volume on the speaker and your audio source.
- If using AC power, check your cable is properly connected.

Sound distorted

- Adjust the bass and treble controls.

FCC Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult your dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Limited Warranty

Go to www.radioshack.com/help for details. RadioShack Customer Relations
300 RadioShack Circle, Fort Worth, TX 76102

RoHS Complies with the European Union's "Restriction of Hazardous Substances Directive," which protects the environment by restricting specific hazardous materials and products.

The Bluetooth® word mark and logos are owned by Bluetooth SIG, Inc. and any use of such marks by General Wireless Operations Inc. is under license.

© 2016 General Wireless Operations Inc. All rights reserved. REALISTIC is a registered trademark used by General Wireless Operations Inc. dba RadioShack. radioshack.com

09A16
4000774
Printed in China