



CSMP92
USER MANUAL
SOUND BAR SYSTEM

For Your Attention

IMPORTANT SAFETY INSTRUCTIONS:

1. Read these instructions - All the safety and operating instructions should be read before this product is operated.
2. Keep these instructions - The safety and operating instructions should be retained for future reference.
3. Heed all warnings - All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow all instructions - All operating and use instructions should be followed.
5. Do not use this apparatus near water - The appliance should not be used near water or moisture - for example, in a wet basement or near a swimming pool, and the like.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



S3125A

For Your Attention

13. Unplug the apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. CAUTION: These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.



16. This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.
- Warning: To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.
 - The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.



17. This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.
18. Do not install this equipment in a confined or building-in space such as a book case or similar unit, and remain a well ventilation conditions at open site. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.
19. WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on apparatus.
20. WARNING: The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.
21. WARNING: The mains plug is used as disconnect device, the disconnect device shall remain readily operable.
-

For Your Attention

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

CAUTION:

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

IC STATEMENT

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the Device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage,

et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement."

Contents

For your Attention.....	1-3
Contents.....	4
Features.....	5
Panel.....	6-7
Connections.....	8
Remote Control.....	9-10
Basic Playback.....	11-12
Trouble shooting.....	13
Specifications.....	14

 
Features

Thanks for your purchase of our product. Please read through this manual before making connections and operating this product. Retain this manual for future reference.

- Blue tooth playback
- Line input
- Optical input
- Full function remote control

Package Contents:

User manual




Remote control



Panel

 
TOP PANEL:

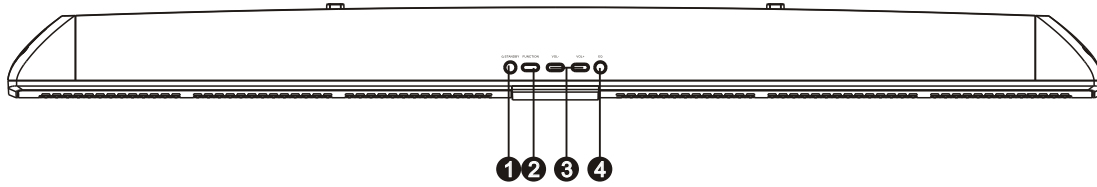

1 STANDBY
2 FUNCTION

3 VOLUME+/-
4 EQUALIZER

 
FRONT PANEL:

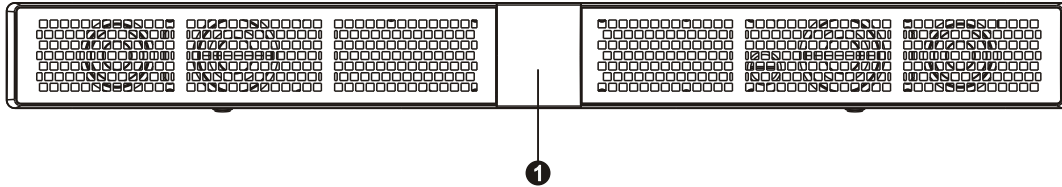


1 DISPLAY SCREEN

Panel

 
REAR PANEL:

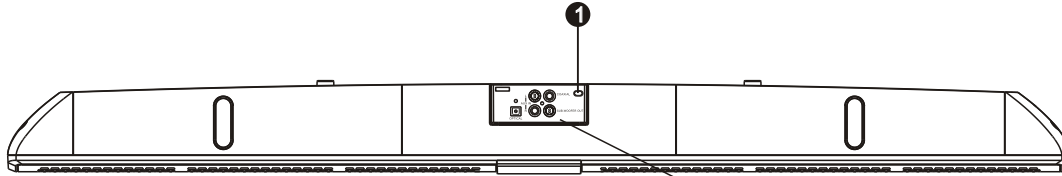

 - 1 AC INPUT
- 2 OPTICAL INPUT
- 3 AUX INPUT
- 4 SUBWOOFER OUTPUT
- 5 COAXIAL DIGITAL AUDIO INPUT

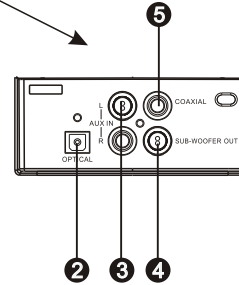

SIDE PANEL:

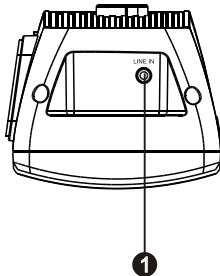 

- 1 LINE INPUT

Connections

LINE IN/AUX IN

This unit has an extra group of audio input terminals. You can input the analogue stereo audio signals from extra devices such as VCD, CD, VCR, MP3 player, etc. Use the audiocable (red for right, white for left) to connect the stereo audio output terminals of a VCD, CD, VCR player to the stereo input terminals (LINE IN/AUX IN) of this unit.

Its corresponding signal source is **LINE IN/AUX IN** which can be available by pressing [FUNCTION] on the top panel or pressing [AUX]/[LINE] on the remote control.

Subwoofer Output

Use speaker cable to connect the subwoofer output of this unit .

Bluetooth Connection

 
The model of the unit is Sound Bar, press [FUNCTION] on the top panel or press [Bluetooth] on the remote control to switch to the corresponding signal source, use your mobile phone to search the bluetooth signal of the unit, then input the password 0000 ,the unit will synchronize to play songs on your mobile phone while they connected successfully.

Coaxial Digital Audio

Use a coaxial cable to connect the coaxial output of this unit to the coaxial input of a power amplifier.

Optical Input

Use the optional optical cable to connect the optical output of your television or amplifier to the player.

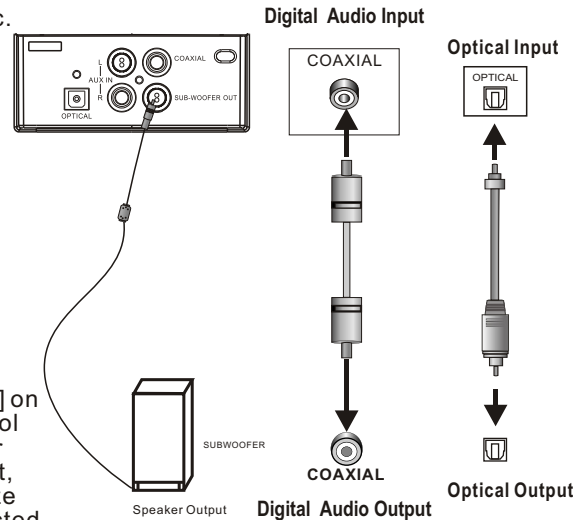




Remote control

Remote Control Operation

Insert the batteries into the remote control. Point the remote control at the remote sensor on the front panel. The remote control works within a distance of about 8 metres from the sensor and within an angle of about 30 degrees from the left and right side.

Battery Installation

   
- 1 Remove the battery compartment cover on the back of the remote control.
- 2 Load a AAA/1.5V battery into the battery compartment making sure that the battery have been inserted with the correct polarity matching the symbols +, - as indicated inside the battery compartment.
- 3 Replace the cover.

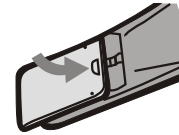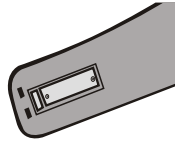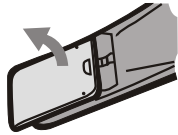

Note:

- Remove the batteries when you do not intend to use the remote control for a long time.
- Weak batteries can leak and severely damage the remote control.
- The batteries must not be exposed to excessive heat source, such as sunshine, fire or any other things like that.
- Be environmentally friendly and dispose of batteries according to your government regulations.

 Remote Control

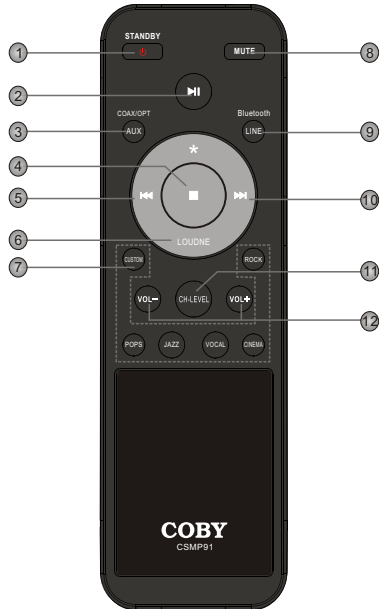

- 1 STANDBY
- 2 PLAY/PAUSE
- 3 COAXIAL/AUX IN/OPTICAL IN
- 4 STOP
- 5 PREVIOUS
- 6 LOUDNESS ON/OFF
- 7 EQUALIZER MODE
(CUSTOM/ROCK/POPS
JAZZ/VOCAL/CINEMA)
- 8 MUTE
- 9 BLUETOOTH/LINE IN
- 10 NEXT
- 11 CHANNEL LEVEL
- 12 VOLUME +/-

Basic Playback

OPERATION

STANDBY



● Press to switch on the unit. Press it again to put the unit in standby mode.

BLUETOOTH/
LINE IN



● Press repeatedly to switch between BLUETOOTH and LINE IN mode.

COAXIAL/AUX IN
/OPTICAL



● Press repeatedly to switch among COAXIAL, AUX IN and OPTICAL mode.



● Press to stop a playback .



● Press to temporarily pause a playback. Press it again to resume the playback.



● Press to skip to the next chapter/track.



● Press to return to the previous chapter/track.



● Press [VOLUME+] to turn up the volume.



● Press [VOLUME-] to turn down the volume

MUTE



● Press to temporarily switch off the sound . Press it again to switch it on.

CUSTOM/ROCK/POPS
JAZZ/VOCAL/CINEMA



● Press to select the equalizer modes, CUSTOM, ROCK, POPS, JAZZ, VOCAL, CINEMA.

Basic Playback

LOUDNESS



● Press to switch on/off loudness.

CH-LEVEL



● Press this key repeatedly to select a channel or the overall volume, then press [VOLUME+]/
[VOLUME-] to adjust its level.

Troubleshooting

Before resorting to maintenance service, please kindly check by yourself with the following chart.

Symptom	Cause(s)	Remedy
No Power	<ul style="list-style-type: none"> ● The AC power cord is not connected to the power supply or is not connected to a power supply securely. 	<ul style="list-style-type: none"> ● Please check that the AC power cord is connected securely.
Sound There is no sound or the sound is distorted.	<ul style="list-style-type: none"> ● The audio cables aren't connected securely. ● The volume is set to the minimum level. ● The sound is switched off. 	<ul style="list-style-type: none"> ● Connect the audio cables securely. ● Turn up the volume. ● Press [MUTE] on the remote control to switch on the sound. ● Press [PLAY/PAUSE].
The buttons on the unit doesn't work.	<ul style="list-style-type: none"> ● The unit is being interfered with static electricity etc. 	<ul style="list-style-type: none"> ● Switch off and unplug the unit. Then connect the plug to the power supply and switch it on again.
The remote control does not function.	<ul style="list-style-type: none"> ● There is no battery in the remote control. ● The batteries are out of charge. ● The remote control isn't pointed to the remote sensor. ● The remote control is out of its operating area. ● The unit is shut down. 	<ul style="list-style-type: none"> ● Install a AAA/1.5V battery in it. ● Replace the batteries with new ones. ● Make sure that the remote control is pointed to the remote control sensor. ● Make sure the remote control is within the operating area. ● Switch off the unit and disconnect it from the AC outlet. Then power on the unit again.

Specifications

Power supply		AC ~110-240V,50/60Hz
Power consumption		20W
Working environment	Temperature	-10~+35℃
	Relative humidity	5%~90%
Power output (Max)		15WX2+30W
Frequency response		± 1.5dB(20Hz~20kHz)

