

User Instructions

The HANA FLASH DRIVE product can be utilized either via a direct connection to the computer USB port, or via a USB extension cable.

CD Installation Instructions

For Windows 2000, Windows NT, Windows ME, Windows XP, Linux 2.4.0+, Mac 8.6+ and Windows CE 3.0, an installation CD is not required.

For Windows 98/SE OS users, an installation CD, included with the product, is necessary for basic installation. The CD is only required for first time installation.

1. Insert the CD into the CD-ROM Drive.
2. Connect the FLASH DRIVE into the USB port, or into the USB extension cable.
3. After the installation window appears on the screen, follow the directions as prompted.
4. Upon completion of the installation process above, begin product usage.

Special Product Features

1. Plug & Play via USB port
2. Can be used in place of a booting disk
3. Does not require additional power sources
4. Fully-compatible with existing hardware and software
5. Password protected
6. Small, Slick and Elegant Design

Notes

1. In the event your password is forgotten or lost, data cannot be retrieved. Please take special care of your password to ensure the security and accessibility of your data.
2. If the product is disconnected before the LED light stops blinking, data can be lost permanently.
3. For Windows 2000, ME, Linux2.4.0+, Mac 8.6+, Windows CE 3.0 PC users, in order to completely erase the contents of the disk, please use the deletion option, offered in the control panel.