

4. Remove the top cover by lifting the back and sliding it forward away from the chassis.



**Figure 2 – Removing Top Cover**