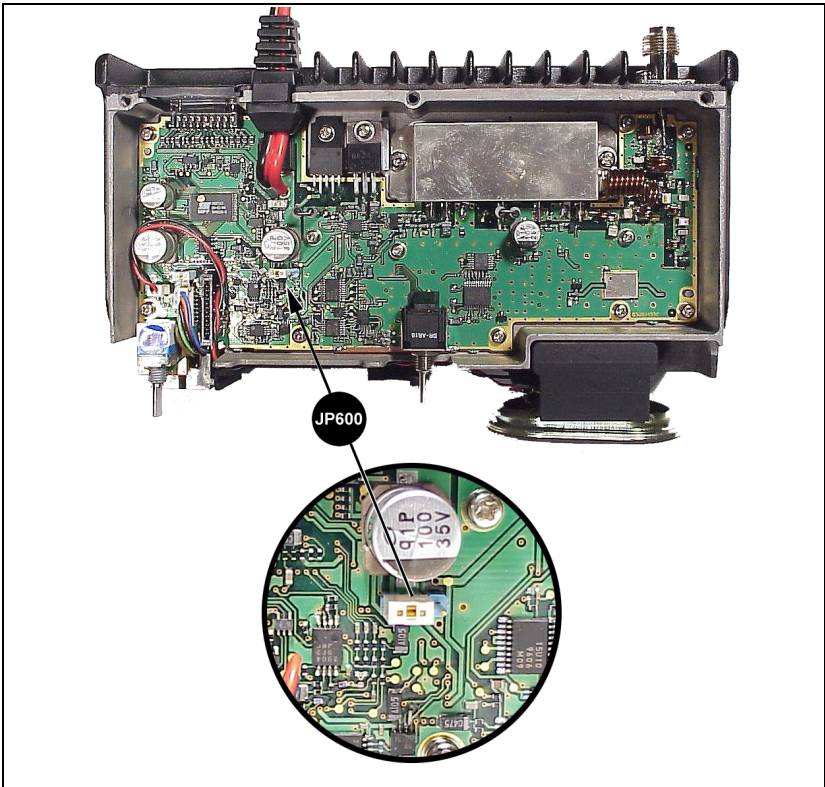


To use the Ignition Sense line in any application, the option cable must be wired accordingly, see the section **Connect To Ignition Sense** on page 18.

There are three parameters that define how the Ignition Sense feature will operate - a jumper on the radio (as described above), and two programmable parameters in the personality.

The programmable parameters enable/disable Transmission and/or Horn Alert with respect to the vehicle ignition switch. For more information on the personality parameters, see the On-Line Help in Conventional ProGammer (TQ-3389 R9A or later) or ProGammer (TQ-3385 R9A or later).



**Figure 4 – Factory Default Settings For Jumper JP600**