

Overview Manual

14221-5555-3210

July 2017



MASTR[®] V

Transceiver

HARRIS[®] TECHNOLOGY TO CONNECT,
INFORM AND PROTECT™

HARRIS.COM | [#HARRISCORP](https://twitter.com/HARRISCORP)

MANUAL REVISION HISTORY

REV	DATE	REASON FOR CHANGE
-	Jul/17	Initial release.

Harris Corporation, Public Safety and Professional Communications (PSPC) Business continually evaluates its technical publications for completeness, technical accuracy, and organization. You can assist in this process by submitting your comments and suggestions to the following

Harris Corporation
PSPC Business
Technical Publications
221 Jefferson Ridge Parkway
Lynchburg, VA 24501

fax your comments to: 1-434-455-6851
or
e-mail us at: PSPC_TechPubs@harris.com

ACKNOWLEDGEMENT

This device is made under license under one or more of the following US patents: 4,590,473; 4,636,791; 5,148,482; 5,185,796; 5,271,017; 5,377,229; 4,716,407; 4,972,460; 5,502,767; 5,146,497; 5,164,986; 5,185,795; 5,226,084; 5,247,579; 5,491,772; 5,517,511; 5,630,011; 5,649,050; 5,701,390; 5,715,365; 5,754,974; 5,826,222; 5,870,405; 6,161,089; and 6,199,037 B1. DVSI claims certain rights, including patent rights under aforementioned U.S. patents, and under other U.S. and foreign patents and patents pending. Any use of this software or technology requires a separate written license from DVSI.

CREDITS

Harris, VIDA, EDACS, NetworkFirst, and OpenSky are registered trademarks, and TECHNOLOGY TO CONNECT, INFORM AND PROTECT is a trademark of Harris Corporation. AMBE is a registered trademark and IMBE, AMBE+, and AMBE+2 are trademarks of Digital Voice Systems, Inc. All brand and product names are trademarks, registered trademarks, or service marks of their respective holders.

NOTICE!

The material contained herein is subject to U.S. export approval. No export or re-export is permitted without written approval from the U.S. Government. Rated: EAR99; in accordance with U.S. Dept. of Commerce regulations 15CFR774, Export Administration Regulations.

Information and descriptions contained herein are the property of Harris Corporation. Such information and descriptions may not be copied or reproduced by any means, or disseminated or distributed without the express prior written permission of Harris Corporation, PSPC Business, 221 Jefferson Ridge Parkway, Lynchburg, VA 24501.

Repairs to this equipment should be made only by an authorized service technician or facility designated by the supplier. Any repairs, alterations, or substitutions of recommended parts made by the user to this equipment not approved by the manufacturer could void the user's authority to operate the equipment in addition to the manufacturer's warranty.



This product conforms to the European Union WEEE Directive 2012/19/EU. Do not dispose of this product in a public landfill. Take it to a recycling center at the end of its life.

This manual is published by **Harris Corporation** without any warranty. Improvements and changes to this manual necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by **Harris Corporation** at any time and without notice. Such changes will be incorporated into new editions of this manual. No part of this manual may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, for any purpose, without the express written permission of **Harris Corporation**.

TABLE OF CONTENTS

<i>Section</i>	<i>Page</i>
1. REGULATORY AND SAFETY INFORMATION.....	6
1.1 SAFETY SYMBOL CONVENTIONS.....	6
1.2 IMPORTANT SAFETY INSTRUCTIONS.....	6
1.3 MAXIMUM PERMISSIBLE EXPOSURE LIMITS.....	8
1.4 DETERMINING MPE RADIUS.....	8
1.5 SAFETY TRAINING INFORMATION.....	8
1.6 REGULATORY APPROVALS.....	9
1.6.1 Federal Communications Commission.....	9
2. SPECIFICATIONS.....	10
3. INTRODUCTION.....	12
4. MASTR V TRANSCEIVER OVERVIEW.....	13
4.1 MULTI-CHANNEL TRANSCEIVER SHELF ASSEMBLY.....	13
4.2 MULTI-CHANNEL TRANSCEIVER SHELF.....	14
4.3 HIGH POWER AMPLIFIER/POWER SUPPLY SHELF ASSEMBLY.....	15
4.4 MASTR V MODULES.....	15
4.4.1 Ethernet Switch (E-Switch).....	15
4.4.2 Transmitter Module (TX).....	16
4.4.3 Receiver Module (RX).....	18
4.4.4 Baseband Processor Module (BBP).....	19
4.4.5 Traffic Controller Module (TC).....	22
4.4.6 AC and DC Power Distribution.....	26
4.4.7 Cross-Connect Panel.....	27
4.5 RACK AND CABINET ASSEMBLIES.....	28
4.5.1 DC-to-AC Inverter.....	29
5. PROGRAMMING, TEST, AND DIAGNOSTICS.....	30
5.1 VIDA DEVICE MANAGER.....	30
5.2 TEST AND DIAGNOSTICS.....	30
6. REFERENCE MANUALS.....	31
7. CUSTOMER SERVICE.....	32
7.1 TECHNICAL SUPPORT.....	32
7.2 TECH-LINK ONLINE SERVICES.....	32
7.3 CUSTOMER CARE.....	32
8. WARRANTY.....	33

FIGURES

Figure 3-1: MASTR V Multi-Channel Transceiver Shelf Equipped with One (1) RF Channel12

Figure 4-1: MASTR V MHz Transciever Shelf equipped with Four (4) RF Channels.....13

Figure 4-2: 14-Slot Transceiver Shelf14

Figure 4-3: MASTR V HPA/PS Shelf Assembly (Shown with HPA and PS Installed)15

Figure 4-4: Ethernet Switch Module16

Figure 4-5: TX Module17

Figure 4-6: RX Module19

Figure 4-7: Baseband Processor Module.....22

Figure 4-8: Traffic Controller Module23

Figure 4-9: Power Supply Module24

Figure 4-10: Dual input 120VAC Power Distribution Strip.....26

Figure 4-11: EA-555019-001 – -48 VDC Low Power DC Distribution Strip.....26

Figure 4-12: EA-555019-002 – -48 VDC High Power DC Distribution Strip.....26

Figure 4-13: EA-555019-003 – Enhanced -48 VDC Low Power DC Distribution Strip.....27

Figure 4-14: EA-555019-004 – Enhanced -48 VDC High Power DC Distribution Strip27

Figure 4-15: IP Simulcast Cross-Connect Board CB-555149-002.....28

Figure 4-16: 86-inch Open Rack Assembly28

Figure 4-17: 86-inch Extra Deep Cabinet.....28

Figure 4-18: Seismic Rated Open Rack Assembly.....28

Figure 4-19: DC-to-AC Inverter Used to Power the Cabinet Fan at DC-Powered Sites.....29

TABLES

Table 4-1: Typical Module Slot Assignments for MASTR V Transceiver.....13

Table 4-2: E-Switch Module Connections15

Table 4-3: Ethernet Switch – Front Panel Indicators and Controls16

Table 4-4: TX Module Connections.....17

Table 4-5: TX Module – Front Panel Indicators and Controls.....18

Table 4-6: RX Module Connections.....19

Table 4-7: RX Module – Front Panel Indicators and Controls.....19

Table 4-8: BBP Module Connections.....20

Table 4-9: BBP Module – Front Panel Indicators and Controls.....20

Table 4-10: TC Module Connections22

TABLE OF CONTENTS

<i>Section</i>	<i>Page</i>
Table 4-11: TC Module – Front Panel Indicators and Controls	23
Table 4-12: Backplane – Module DC Power Connector Pinout.....	25
Table 4-13: PS Front Panel Indicators and Switches	25
Table 6-1: Reference Manuals.....	31

1. REGULATORY AND SAFETY INFORMATION

1.1 SAFETY SYMBOL CONVENTIONS

The following conventions are used throughout this manual to alert the user to general safety precautions that must be observed during all phases of operation, service, and repair of this product. Failure to comply with these precautions or with specific warnings elsewhere violates safety standards of design, manufacture, and intended use of the product. Harris assumes no liability for the customer's failure to comply with these standards.



The **WARNING** symbol calls attention to a procedure, practice, or the like, which, if not correctly performed or adhered to, could result in personal injury. Do not proceed beyond a **WARNING** symbol until the conditions identified are fully understood or met.



The **CAUTION** symbol calls attention to an operating procedure, practice, or the like, which, if not performed correctly or adhered to, could result in damage to the equipment or severely degrade equipment performance.



The **NOTE** symbol calls attention to supplemental information, which may improve system performance or clarify a process or procedure.



The **ESD** symbol calls attention to procedures, practices, or the like, which could expose equipment to the effects of Electro-Static Discharge. Proper precautions must be taken to prevent ESD when handling circuit boards or modules.



The **electrical hazard symbol** is a **WARNING** indicating there may be an electrical shock hazard present.

1.2 IMPORTANT SAFETY INSTRUCTIONS

 
- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Where required, this equipment shall be installed in a restricted access location.

- The power socket-outlet shall be installed near the equipment and shall be easily accessible.
- Do not block any ventilation openings. Install in accordance with the manufacturer’s instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched; particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as when the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

- Warning: The lightning bolt signifies an alert to the user of the presence of un-insulated “dangerous voltage” within the product’s enclosure that may be of significant magnitude to constitute a risk of electric shock to persons.



- Warning: The exclamation point alerts the user to the presence of important operation and maintenance (service) instructions in the literature accompanying the product.
- Outdoor Use Warning: To reduce the risk of Fire or Electric Shock, Do Not Expose This Apparatus to Rain or Moisture.
- Wet Location Warning: Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
- The building installation shall provide a means for connection to the protective earthing and the equipment shall be connected to that means.
- For permanently connected equipment, a readily accessible power disconnect device shall be incorporated external to the equipment.
- A service person shall check whether or not the socket-outlet from which the equipment is to be powered provides a connection to the building protective earth. If not, the service person shall arrange for installation of a protective earthing conductor from the separate protective earthing terminal to the protective earth wire in the building.



The equipment must be connected to an earthed mains socket-outlet.

Udstyret skal tilsluttes en jordet stikkontakt.

1.3 MAXIMUM PERMISSIBLE EXPOSURE LIMITS

DO NOT TRANSMIT with this transceiver and antenna when persons are within the Maximum Permissible Exposure (MPE) Radius of the antenna. The MPE Radius is the minimum distance from the antenna axis that ALL persons should maintain in order to avoid RF exposure higher than the allowable MPE level set by the FCC.



Failure to observe these limits may allow all persons within the MPE radius to experience RF radiation absorption, which exceeds the FCC maximum permissible exposure (MPE) limit. It is the responsibility of the transceiver operator to ensure that the maximum permissible exposure limits are observed at all times during transceiver transmission. The transceiver licensee is to ensure that no bystanders are within the radius limits.

1.4 DETERMINING MPE RADIUS

The Maximum Permissible Exposure radius is unique for each site and is determined during site licensing time based on the complete installation environment (i.e., co-location, antenna type, transmit power level, etc.). Determination of the MPE distance is the responsibility of the installation licensee. Calculation of the MPE radius is required as part of the site licensing procedure with the FCC.

1.5 SAFETY TRAINING INFORMATION



Your MASTR[®]V transceiver generates RF electromagnetic energy during transmit mode. This transceiver is designed for and classified as “occupational use only” meaning it must be used only in the course of employment by individuals aware of the hazards and the ways to minimize such hazards. This transceiver is not intended for use by the “general population” in an uncontrolled environment. It is the responsibility of the transceiver licensee to ensure that the maximum permissible exposure limits determined in the previous section are observed at all times during transmission. The transceiver licensee is to ensure that no bystanders come within the radius of the maximum permissible exposure limits.

When licensed by the FCC, this transceiver complies with the FCC RF exposure limits when persons are beyond the MPE radius of the antenna. In addition, your Harris transceiver installation complies with the following Standards and Guidelines with regard to RF energy and electromagnetic energy levels and evaluation of such levels for exposure to humans:

- FCC OET Bulletin 65 Edition 97-01 Supplement C, Evaluating Compliance with FCC Guidelines for Human Exposure to Radio Frequency Electromagnetic Fields.
- American National Standards Institute (C95.1 – 1992), IEEE Standard for Safety Levels with Respect to Human Exposure to Radio Frequency Electromagnetic Fields, 3 kHz to 300 GHz.
- American National Standards Institute (C95.3 – 1992), IEEE Recommended Practice for the Measurement of Potentially Hazardous Electromagnetic Fields – RF and Microwave.



To ensure that your exposure to RF electromagnetic energy is within the FCC allowable limits for occupational use, do not operate the transceiver in a manner that would create an MPE distance in excess of that allowable by the FCC.



This equipment generates or uses radio frequency energy. Any changes or modifications to this equipment not expressly approved by Harris may cause harmful interference and could void the user's authority to operate the equipment.

1.6 REGULATORY APPROVALS

1.6.1 Federal Communications Commission

The transmitting device described within this manual has been tested and found to meet the following regulatory requirements:

FCC FILING DATA FOR MASTR V TRANSCEIVER			
FREQUENCY BAND (MHz)	POWER OUTPUT (Watts)	FCC TYPE ACCEPTANCE NUMBER	APPLICABLE FCC RULES
935 - 940	0.001	OWDTR-0155-E	Part 90

This receiver associated with this transmitting device has been tested and declared to meet the regulatory requirements defined in the following sub-sections.

1.6.1.1 FCC Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and,
2. This device must accept any interference received, including interference that may cause undesired operation.

1.6.1.2 Information to the User

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment does generate, use, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an AC outlet on a circuit different from that which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

2. SPECIFICATIONS

General Specifications¹

Duty Cycle (EIA) Continuous:	Transmit and Receive at 100%	
Operating Temperature:	-22°F to +140°F (-30°C to +60°C)	
Humidity (EIA):	90-95% at 122°F (50°C) Non-condensing	
Power Supplies:	AC Supply (EA-555011-001)	DC Supply (EA-555011-003)
Input Power Source:	90 – 240 VAC (nom.), 47–63 Hz	-48VDC (+/- 20%), 25.0 Amp
Power Supply Outputs:	+28.0 VDC± 0.2V: 25.0 Amps +12.0 VDC± 0.2V: 2.8 Amps +5.0 VDC± 0.2V: 28.0 Amps	25.0 Amps 5.0 Amps 15.0 Amps
Source Power Drain:	50 watts per channel (max.), 40 watts per channel (typical)	
Altitude:		
Operational:	Up to 13,123 ft. (4,000 m)	
Shippable:	Up to 50,000 ft. (15,250 m)	

Transmitter Specifications

Frequency Ranges:	935 - 941 MHz	
RMS RF Output Power ² :	0.001 Watts	
RF Output Impedance:	50 ohms	
Antenna Connection:	SMB JACK on TX Module	
Frequency Stability:	< 0.1 ppm external freq. std. ³	
Frequency Step Size:	6.25 kHz	
Tuning Range:	No tuning required	
Nominal TX Deviation:	2.544 to 3.111 kHz (per TIA-102)	
Modes of Modulation:	<u>MODULATION TYPE</u>	<u>EMISSION DESIGNATOR</u>
P25 Phase 1	C4FM	8K00F1D, 8K00F1E
P25 Linear Simulcast	WCQPSK	9K70D1W
P25 Phase 2	HDQPSK	9K80D7W
Modulation Emission Spectrum:	Per FCC Part 90	
Radiated and Conducted Spurious Emissions:	900 MHz Transceiver: < -70 dBc	

Receiver Specifications

Frequency Range:	896 - 902 MHz
Tuning Range:	Receiver modules (all bands), No tuning required
RF Input Impedance:	50 ohms
Antenna Connection:	SMA Female on Receiver Module

¹ Specifications listed herein are applicable only to Harris' MASTR V Transceiver RF equipment. Always refer to the manufacturer of third party equipment, such as Routers and Switches, for additional specifications. Specifications listed in this manual are intended primarily for the use of the service technician. Additional specifications may be listed on the product data sheet.

² Rated power output is measured at the transmitter's output connector. Optional items such as power measuring devices and/or duplexers will introduce loss between the transmitter output connector and the cabinet output connector. This loss will reduce the available power at the cabinet output connector.

³ Beginning with Baseband processor Rev. D, an external reference is no longer required to meet this specification.

Channel Spacing:	12.5 kHz
Sensitivity:	≥ -119 dBm (5% BER) static, -111 faded (EIA)
Selectivity:	≥ 60 dB Per TIA-102
Frequency Stability:	< 0.1 ppm external freq. std. ³
Signal Displacement Bandwidth:	± 1.0 kHz Per TIA-102
Spurious and Image Rejection:	≥ 90 dB

Weights and Dimensions⁴	WEIGHT lbs. (kg.)	DEPTH in (cm)	WIDTH in (cm)	HEIGHT⁵ in (cm) or RU
Rack, 86 in., Deep, 3-rail, 46-RU:	235 (107)	21.0 (53.3)	21.0 (53.3)	85.5 (217.0)
Cabinet, 86 in., Extra Deep, 45-RU	355 (161.0)	31.6 (80.3)	23 (58.4)	86.8 (220.5)
14-Slot Shelf Assembly (w/o modules):	16.5 (7.5)	15.0 (38.1)	19.0 (48.3)	5-RU
High Power Amplifier Shelf (Chassis only):	5.0 (2.3)		19.0 (48.3)	2-RU
Power Supply Unit (PSU):	9.0 (4.1)	13 (33.0)	8.6 (21.8)	3.5 (8.9)
Ethernet Switch:	0.8 (0.36)	12.25 (31.1)	0.625 (1.6)	4.25 (10.8)
Transmitter (TX) Module:	2.5 (1.1)	12.6 (32.0)	0.82 (2.1)	7.25 (18.4)
Receiver (RX) Module:	2.5 (1.1)	12.6 (32.0)	0.82 (2.1)	7.25 (18.4)
Traffic Controller (TC) Module:	2.5 (1.1)	12.6 (32.0)	0.82 (2.1)	7.25 (18.4)
Baseband Module (BB):	2.5 (1.1)	12.6 (32.0)	0.82 (2.1)	7.25 (18.4)

⁴ Weights and dimensions are approximate, and represent the minimum space required to install the device. In most cases, measurements include handles, brackets, knobs, controls, and other hardware that is permanently affixed to the device. Measurements do not include distances for cable bends, unless the cable is permanently affixed to the equipment.

⁵ For 19" rack mountable equipment, heights may be defined in Rack Units (RU). One (1) RU is equal to 1.75 in. (4.45 cm). For example: 2-RU equals 3.5 in. (8.9 cm), 3-RU equals 5.25 in. (13.3 cm), etc.

3. INTRODUCTION

The MASTR V Transceiver is a P25 Phase 2 capable. The MASTR V Transceiver is a digital, IP based, LMR communications transceiver operating within a compact shelf design. It supports IP-based remote software uploads and configuration. IP-based programming may be accomplished using the *VIDA® Device Manager* programming tool. Network and programming communications ports may be configured for VIDA secure shell operation to meet Information Assurance (IA) requirements. A Built-In Self Test (BIST) feature provides improved performance through remote diagnosis which minimizes down time.

The MASTR V Transceiver uses a 14-slot modular multi-channel T/R shelf assembly (refer to Figure 3-1) and a 2-slot High Power Amplifier/Power Supply (HPA/PS) shelf assembly. Modules may include Baseband Processors, Traffic Controllers, TX, and RX modules. Blank panels for the main module slots (MA-555413) and for the E-Switch slots (MA-555417) are installed in unused slots.

The TX module uses circuitry capable of generating any LMR modulation format.

The RX module includes integrated front end and IF circuitry. The RX module also uses IQ demodulation circuitry. The IQ demodulator can decode most amplitude and phase modulation characteristic, making it capable of receiving analog or digital LMR modulation format.

The Multi-Channel T/R shelf requires +12 VDC and +5 VDC. The transceiver may be equipped with a 120/240 VAC switching power supply or -48 VDC power supply. The T/R shelf occupies 5-RU spaces. The HPA/PS shelf occupies 2-RU spaces (per TX channel).

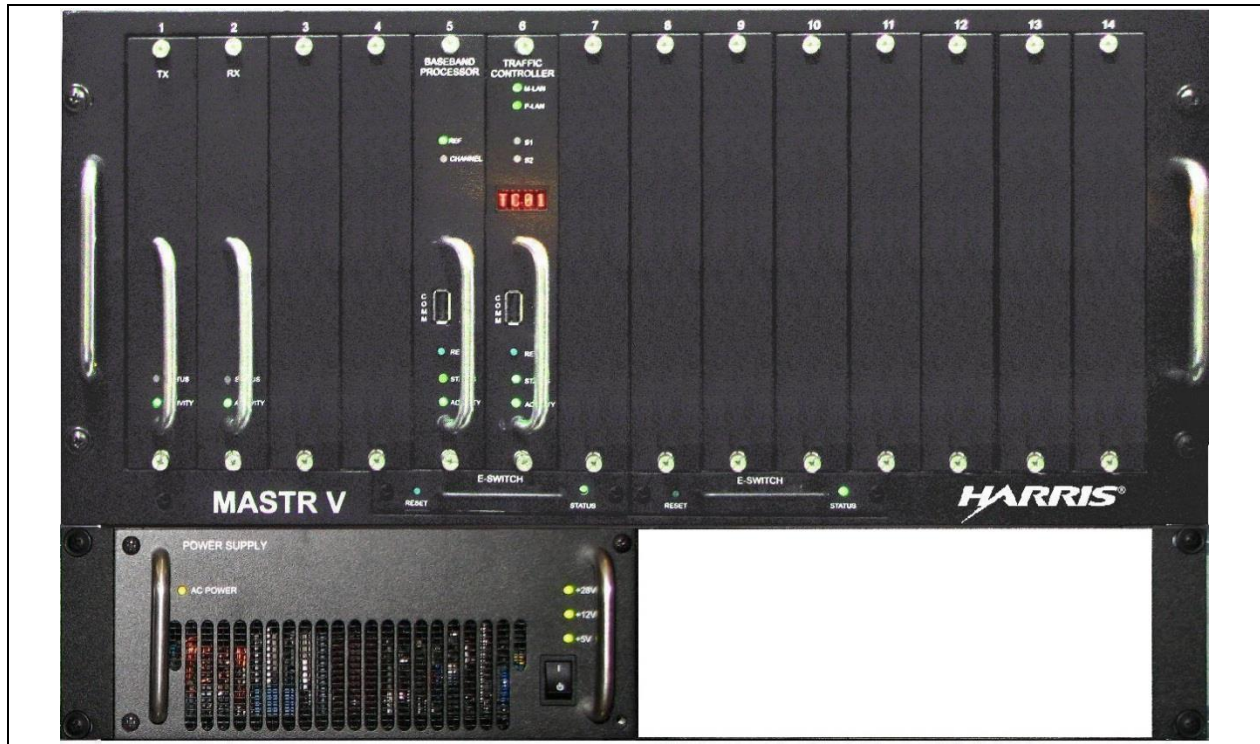


Figure 3-1: MASTR V Multi-Channel Transceiver Shelf Equipped with One (1) RF Channel

4. MASTR V TRANSCEIVER OVERVIEW

4.1 MULTI-CHANNEL TRANSCEIVER SHELF ASSEMBLY

The MASTR V multi-channel transceiver shelf assembly is a unified sub-rack design providing 14 identical vertical module slots. Also included are two (2) horizontal slots located under the 14 vertical slots, and used to connect the built-in main and redundant Ethernet Switch modules.

A backplane assembly provides data and DC power connections to each vertical slot, and the two Ethernet Switch module slots. The multi-channel transceiver shelf, and each module, is equipped with a pull handle for improved handling of the equipment.

Table 4-1: Typical Module Slot Assignments for MASTR V Transceiver

SLOT #	MODULE	SLOT #	MODULE
1	Transmitter Module (Channel 1)	8	Transmitter Module (Channel 3)
2	Receiver Module (Channel 1)	9	Receiver Module (Channel 3)
3	Transmitter Module (Channel 2)	10	Transmitter Module (Channel 4)
4	Receiver Module (Channel 2)	11	Receiver Module (Channel 4)
5	Baseband Module (Channel 1 / 2)	12	Baseband Module (Channel 3 / 4)
6	Traffic Controller (Channel 1)	13	Traffic Controller (Channel 3)
7	Traffic Controller (Channel 2)	14	Traffic Controller (Channel 4)
E1	E-Switch # 1 (Main)	E2	E-Switch #2 (Redundant)

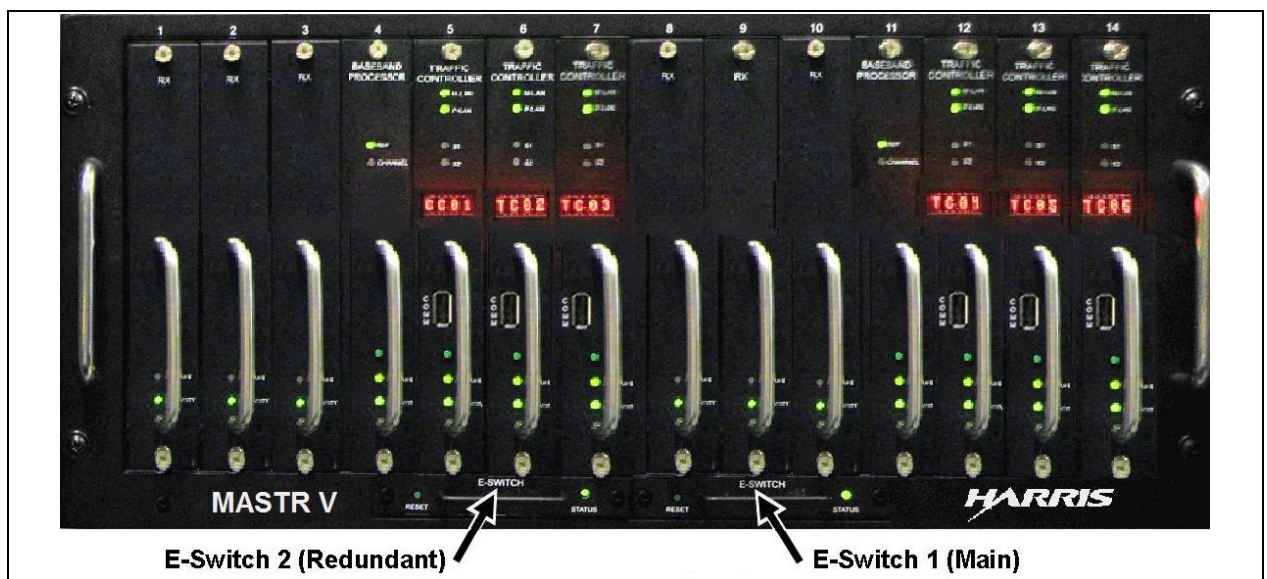


Figure 4-1: MASTR V MHz Transceiver Shelf equipped with Four (4) RF Channels

4.2 MULTI-CHANNEL TRANSCEIVER SHELF

The MASTR V Multi-Channel Transceiver shelf model EA-555002-001 is a 14-slot, 5-RU, shelf assembly. The shelf provides a modular environment supporting almost any combination of MASTR V modules.

Assembled to the rear of the shelf is a unified backplane assembly. The backplane interfaces all data, frequency reference, and DC power connections from the 14 module slots, to the two (2) horizontally positioned Ethernet switch modules.

Connectors J30 and J31 are DC inputs for the backplane. Two (2) connector assemblies are provided for each module slot; a 3-pin connector for DC power (J101 through J114) and a 95-pin connector for data/small signals (J1 through J14). Each E-Switch module slot uses a 120-pin signal connector having 40 balanced signal pairs, and each pair having an individual shield for optimal signal performance. Additionally, two (2) guide pins are used in each module slot, one at each end of every connector row.

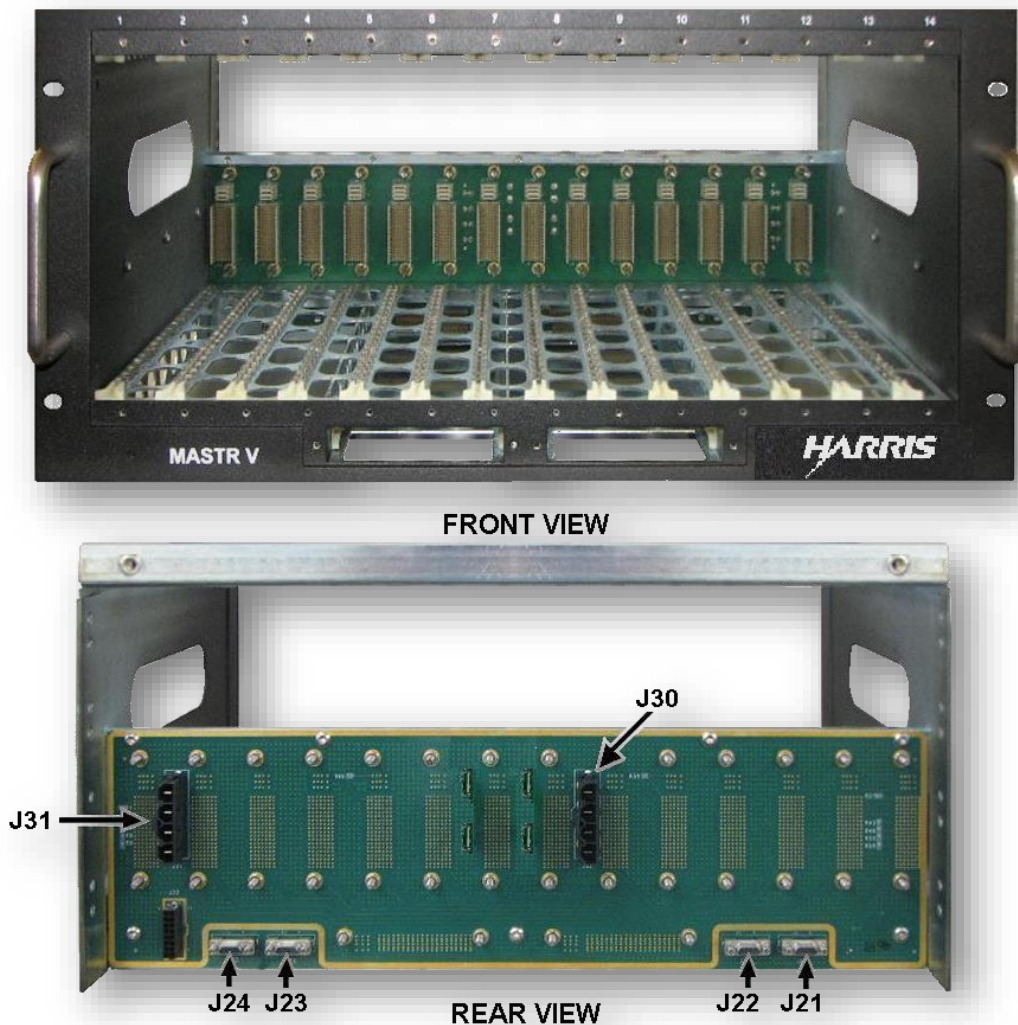


Figure 4-2: 14-Slot Transceiver Shelf

4.3 HIGH POWER AMPLIFIER/POWER SUPPLY SHELF ASSEMBLY

The Power Supply (PS) (refer to Section 4.4.5.1) are installed in a 19” rack mountable, 2-slot metal shelf, model MA-555003 (refer to Figure 4-3). The HPA/PS shelf is a mechanical-only assembly with no electrical components.



Figure 4-3: MASTR V HPA/PS Shelf Assembly (Shown with PS Installed)

4.4 MASTR V MODULES

For P25 Transceiver operation, the following modules may be installed in the MASTR V Transceiver shelf:

- TX module
- RX module
- Baseband Processor Module
- Traffic Controller Module
- Power Supply Module
- Ethernet Switch

4.4.1 Ethernet Switch (E-Switch)

Communication with the MASTR V transceiver modules is provided by a built-in Ethernet Switch module EA-555012-001 located under main module shelf. A second position is provided under the main module shelf for a redundant Ethernet Switch module.

Ethernet communications are utilized to pass voice and data transmissions, management, and control data between the Traffic Controller and supporting MASTR V modules via the Ethernet Switches.

Table 4-2: E-Switch Module Connections

LOCATION	CONNECTOR	DESCRIPTION
Circuit Board (side)	RJ-45	Factory Service Communications Port
	4-Pin	Factory Service DC Power
Rear Panel	120-Pin	Backplane Connection (40 pair w/Shield)
	3-Pin	Backplane DC Power

Table 4-3: Ethernet Switch – Front Panel Indicators and Controls

INDICATOR/CONTROL	INDICATOR COLOR	DESCRIPTION
Status LED	OFF	No Status (Power OFF)
	GREEN SOLID	Active Switch
	GREEN FLASHING	Standby Switch
	RED SOLID	Major Fault
	RED FLASHING	Minor Fault
	YELLOW SOLID	Flash Write
	YELLOW FLASHING	Program Downloading
Reset Switch	N/A	Soft Module Reset

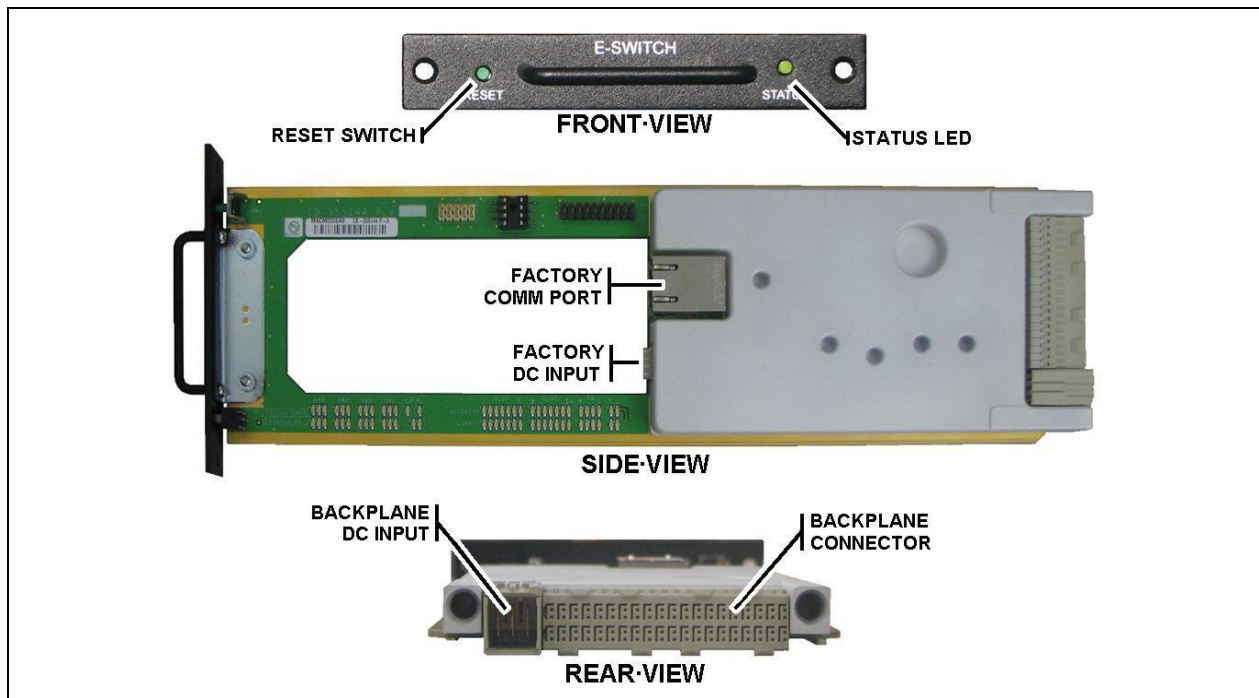


Figure 4-4: Ethernet Switch Module

4.4.2 Transmitter Module (TX)

The MASTR V TX module series EA-555008-xxx provides a highly stable 0 dBm RF output. The MASTR V TX module uses a Direct Digital Synthesizer (DSS) which optimizes the modulation characteristics of the TX module. DSS can digitally create a precision waveform or modulation scheme from a single on-board oscillator. This capability makes the MASTR V TX module one of the most versatile transmitter modules in the North American Land Mobile Radio (LMR) and European Professional Mobile Radio (PMR) marketplace. Digitized I and Q information is sent from the Baseband Processor module via the backplane Ethernet to the TX module.

All bands of MASTR V TX modules share common design features and meet stringent transmitter specifications including the following:

- High output intercept point.
- 115.2 MHz 1st IF chosen for all bands of the MASTR V.
- Built-in hardware diagnostics (voltage supplies, PLL Lock).
- IQ data is sent from the Baseband Processor module for modulation.

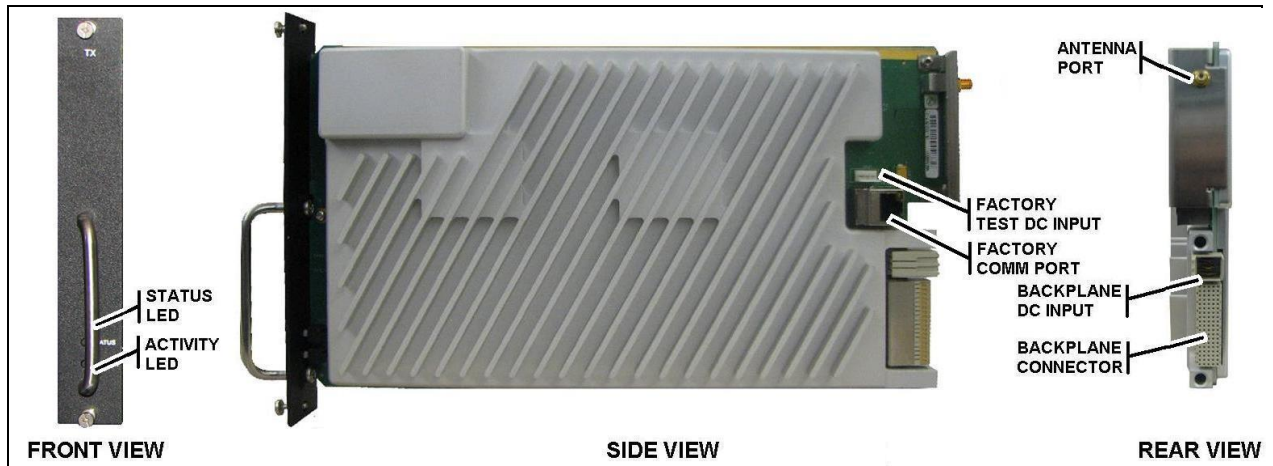












Figure 4-5: TX Module

All electrical connections used during normal operation are located on the rear panel (refer to Figure 4-5). Control, data, small signal, and DC power connections mate with the unified backplane. A TX output connector is located on the rear panel.

Table 4-4: TX Module Connections

LOCATION	CONNECTOR	DESCRIPTION
Rear Panel	SMB JACK	Transmitter Exciter Output
	95-Pin	Backplane Small Signal Connector (5X19)
	3-Pin	Backplane DC Power
Circuit Board (side)	RJ-45	Factory Service Communications Port
	4-Pin	Factory Service DC Power

Table 4-5: TX Module – Front Panel Indicators and Controls

INDICATOR/CONTROL	INDICATOR COLOR	DESCRIPTION
Status LED	OFF 	No Status
	GREEN SOLID 	Transmitting
	GREEN FLASHING 	Exciter Mode
	RED SOLID 	Major Fault
	RED FLASHING 	Minor Fault
	YELLOW SOLID 	Flash Write (during program modes) Alternately, No Linearizer Power Loop Packets
	YELLOW FLASHING 	Program Downloading
Activity LED (Ethernet)	OFF 	No Activity
	GREEN SOLID 	Ethernet Activity
	RED SOLID 	Loss of Ethernet Activity

4.4.3 Receiver Module (RX)

The MASTR V Receiver (RX) modules, model EA-555007-xxx, are dual-IF conversion receivers. The receiver uses a Sigma-Delta analog to digital converter to process the incoming IF signal. The output of the analog-to-digital converter is a complex pair of I/Q baseband digital signals. The MASTR V RX module supports a wide range of modulation waveforms required for current and next generation public safety two-way radio communications.

After IF filtering and down-conversion, received signals are digitized into I and Q information and sent to the Baseband Processor module via the backplane Ethernet. The Baseband Processor module provides the narrow channel filtering and demodulation. The narrow channel filters and digital demodulation is performed by the system DSP, giving the MASTR V receiver the flexibility needed in current and future LMR communications systems.

All bands of MASTR V RX modules share common design features and meet stringent receiver specifications including the following:

- High intercept point.
- Low noise figure.
- 110.2 MHz IF chosen for all bands of the MASTR V.
- Automatic Level Control.
- Low side LO injection for superior noise performance.
- Built-in hardware diagnostics (voltage supplies, PLL Lock).
- Analog FM audio test jack (for factory use only).
- Raw IQ data is sent to the Baseband Processor module for demodulation.

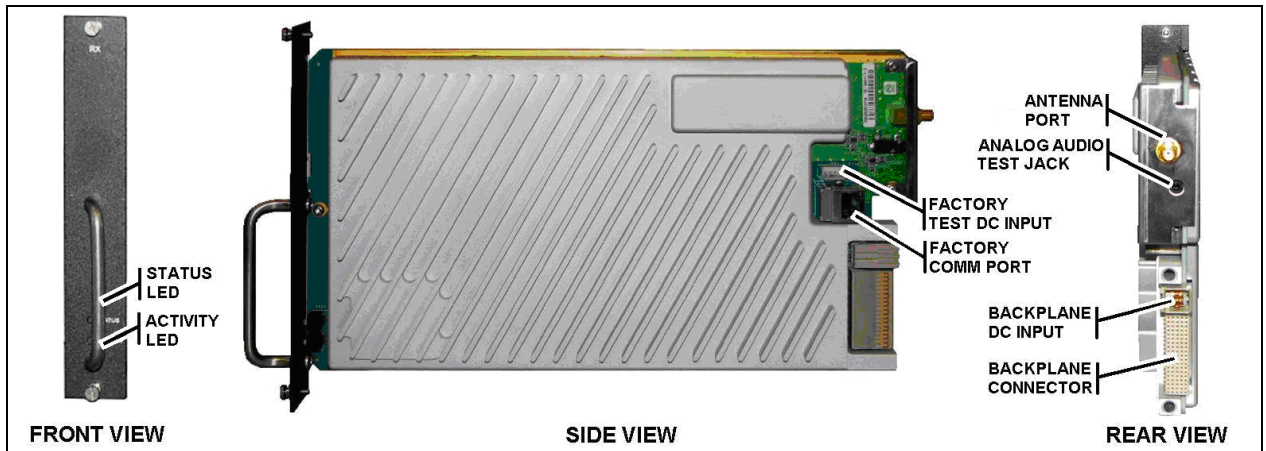


Figure 4-6: RX Module

Table 4-6: RX Module Connections

LOCATION	CONNECTOR	DESCRIPTION
Rear Panel	SMA	Receiver Antenna Input
	3.5 mm Stereo Phone Jack	Analog Receiver Audio (Test mode only)
	95-Pin	Backplane Small Signal Connector (5X19)
	3-Pin	Backplane DC Power
Circuit Board (side)	RJ-45	Factory Service Communications Port
	4-Pin	Factory Service Port (DC Power)

Table 4-7: RX Module – Front Panel Indicators and Controls

INDICATOR/CONTROL	INDICATOR COLOR	DESCRIPTION
Status LED	Off	● No Status
	Green Solid	● Receiving
	Red Solid	● Major Fault
	Red Flashing	● Minor Fault
	Yellow Solid	● Flash Write
	Yellow Flashing	● Program Downloading
Activity LED (Ethernet)	Off	● No Activity
	Green Solid	● Ethernet Activity
	Red Solid	● Loss of Ethernet Activity

4.4.4 **Baseband Processor Module (BBP)**

The Baseband Processor (BBP) module model EA-555005-001 provides several functions within the MASTR V P25 Transceiver:

- Generates all RX, TX, and Control Processing for one or more RF channels.
- Provides a data interface between the Traffic Controller the TX and RX modules.
- Generates a heartbeat message used to monitor the health of the transceiver modules.

When a MASTR V Transceiver is powered up, the TX, and RX modules will perform a discovery period where they await a software request message from the BBP module assigned to manage that slot. When the message is received, the module will respond with a software response message that prompts the BBP to send the modules a personality message. The personality message will contain all personality data (default initialization parameters). The modules respond with an acknowledgement for the personality message, and then initialize themselves according to the personality data in the personality message. The BBP module sends the modules a message to go operational. Once operational, the discovery and initialization phase is complete. The BBP module periodically monitors the modules through heartbeat messages. The BBP module also performs other vital roles, especially during a P25 Simulcast.

























Heartbeat messaging is used to monitor the condition of the TX, and RX modules. Once operational, the BBP module sends out *heartbeat* messages to each module. When a heartbeat message is received by a module, the receiving module then sends a heartbeat message back to the BBP module. The heartbeat monitor task keeps track of the time-stamps of the received heartbeat messages. A fault is registered if a heartbeat message is not received within a predetermined time-frame. The heartbeat monitor also keeps track of certain fault conditions.

Table 4-8: BBP Module Connections

LOCATION	CONNECTOR	DESCRIPTION
Rear Panel	SMA	10 MHz Time Base Input
	DB-15HD	Simulcast Channel 1
	DB-15-HD	Simulcast Channel 2
	RJ-45	Ethernet MLAN
	95-Pin	Backplane Small Signal Connector (5X19)
	3-Pin	Backplane DC Power
Circuit Board (side)	RJ-45	Factory Service Port (Signaling)
	4-Pin	Factory Service Port (DC Power)
Front Panel	USB	Field Service Communications Port

Table 4-9: BBP Module – Front Panel Indicators and Controls

INDICATOR/CONTROL	INDICATOR COLOR	DESCRIPTION			
		MUX Delay Controller	BBP Clock Controller	GPS 10 MHz Signal	
Reference LED					
The BBP's Reference LED uses each color to denote the current status of several functions. This is unlike LED patterns used by other MASTR V modules where each LED color	Off		No Power		
	Red Solid		In Standby Mode	In Standby Mode	No Input from GPS Receiver
	Green Flashing		In Standby Mode	In Standby Mode	10 MHz OK
	Red Flashing		In Standby Mode	Providing Clock Signal to Shelf	No Input from GPS Receiver

INDICATOR/CONTROL	INDICATOR COLOR	DESCRIPTION
indicates the status of only on	Green Solid 	In Standby Mode Providing Clock Signal to Shelf 10 MHz OK
	Yellow Flashing 	Provide MUX Delay Signaling to Shelf In Standby Mode No Input from GPS Receiver
	Yellow/Green Flashing 	Provide MUX Delay Signaling to Shelf In Standby Mode 10 MHz OK
	Yellow/Red Flashing 	Provide MUX Delay Signaling to Shelf Providing Clock Signal to Shelf No Input from GPS Receiver
	Yellow Solid 	Provide MUX Delay Signaling to Shelf Providing Clock Signal to Shelf 10 MHz OK
Channel LED	Off 	No Activity
	Green Solid 	Channel Inactive (no batch clock)
	Green Flashing 	Channel Active (batch clock present, 3 second blink)
Status LED	Off 	No Status
	Green Solid 	OK Status
	Green Flashing 	Running Loader Application
	Red Solid 	Major Fault
	Red Flashing 	Minor Fault
	Yellow Solid 	Flash Write
	Yellow Flashing 	Program Downloading
	Yellow/Green Flashing 	USB Command Success
	Yellow/Red Flashing 	USB Command Fail
	Activity LED	Off 
Green Solid 		Ethernet Activity
Green Flashing 		Undefined (future use)
Red Solid 		Major Fault (Missing heartbeat from a board controlled by this BB)
Red Flashing 		Minor Fault
Yellow/Green Flashing 		USB Command Success
Yellow/Red Flashing 		USB Command Fail
Reset Switch*		N/A

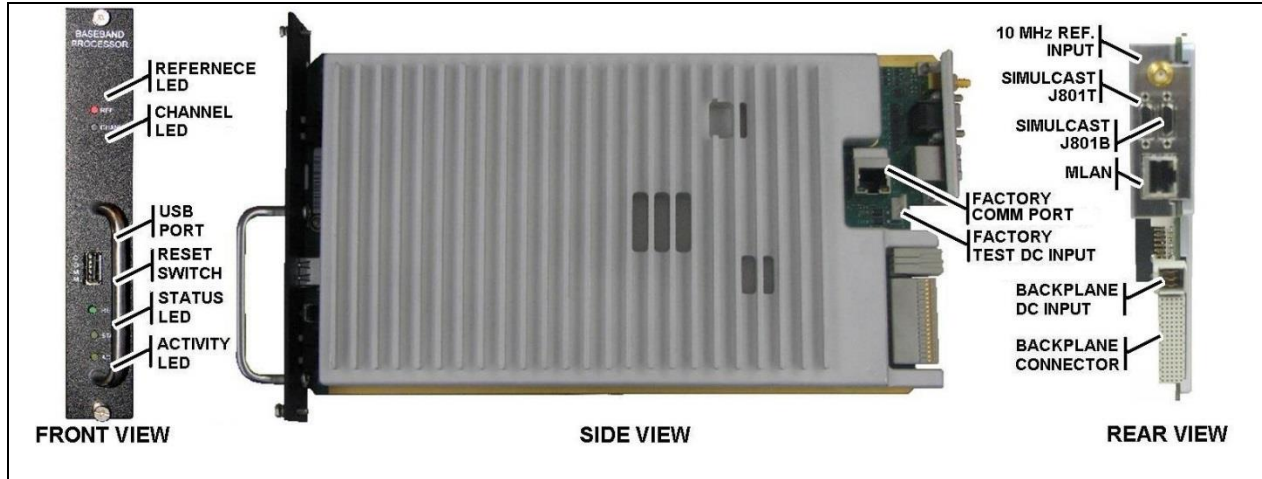


Figure 4-7: Baseband Processor Module

4.4.5 Traffic Controller Module (TC)

The Traffic Controller (TC) module model EA-555004-001 performs interfacing for one (1) MASTR V P25 RF channel. The TC module provides the following services:

- Data and control information for one (1) TX module.
- Data and control information for one (1) RX module.
- Generates the P25-formatted TX messages for over-the-air transmission.
- Provides VoIP interfacing to other P25 sites.

The TC module manages data and control information for one (1) TX and one (1) RX channel module. Incoming data from dispatch points is processed into over-the-air P25-formatted TX messages. The TC module processes decoded radio information received from the BBP module, and handles all aspects of trunking (subscriber unit validation, assigned channels, queuing, etc.).

During P25 operation, the TC module interprets and directs inbound calls. It issues appropriate control commands to and from the TX and RX modules, including how to handle data between the transceiver and the Control Point.















The TC module also handles VoIP interfacing to other P25 sites. Receiver packets are formatted into a VoIP-capable protocol and sent to other predefined P25 sites for retransmission.

Table 4-10: TC Module Connections

LABEL	CONNECTOR	DESCRIPTION
Rear Panel	RJ-45	Ethernet MLAN
	RJ-45	Ethernet PLAN
	95-Pin	Backplane Small Signal Connector (5X19)
	3-Pin	Backplane DC Power
Circuit Board (side)	RJ-45	Factory Service Communications Port
	4-Pin	Factory Service DC Power

Front Panel	USB	Service Communications Port
-------------	-----	-----------------------------

Table 4-11: TC Module – Front Panel Indicators and Controls

INDICATOR/CONTROL	INDICATOR COLOR	DESCRIPTION
Status LED	Off	 No Status
	Green Solid	 RX/TX C-LAN
	Green Flashing	 Undefined (future use)
	Red Solid	 Major Fault
	Red Flashing	 Minor Fault
	Yellow Solid	 Flash Write
	Yellow Flashing	 Program Downloading
Activity LED	Off	 No Activity
	Green Solid	 Ethernet Activity
	Green Flashing	 Undefined (future use)
	Red Solid	 Major Fault
	Red Flashing	 Minor Fault
	Yellow Solid	 Undefined (future use)
	Yellow Flashing	 Undefined (future use)
S1 and S2 LED	Undefined	Undefined (future use)

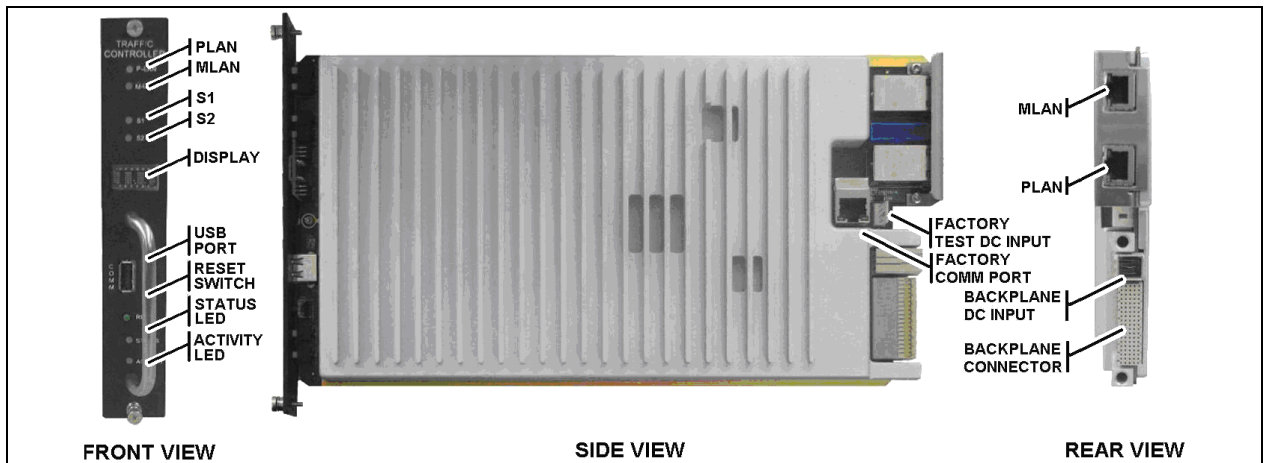


Figure 4-8: Traffic Controller Module

4.4.5.1 Power Supply Module (PS)

The MASTR V AC Power Supply (PS) module EA-555011-001 (refer to Figure 4-9) and DC Power Supply module EA-555001-003 (not shown) are continuous duty switching power supplies. The AC supply operates from an input of 85 VAC to 265 VAC at 47 Hz to 63 Hz (1000 Watts maximum). The DC supply operates from a -48VDC input and can operate from an input of -38 VDC to -57 VDC. Each PSU provides a maximum of 865 Watts total output power divided among the following three (3) DC outputs:

EA-555011-001 (AC PS)

- +28 VDC at 25 Amps
- +12 VDC at 2.8 Amps
- +5.0 VDC at 28 Amps

EA-555011-003 (DC PS)

- +28 VDC at 25 Amps
- +12 VDC at 5.0 Amps
- +5.0 VDC at 15 Amps

Each MASTR V PS includes front panel LED status indicators for each DC output and power input. A front panel ON/OFF switch used to disable the power supply and built-in cooling fan.

Three (3) DC power output connections are provided: one (1) to provide DC current to the MASTR V multi-channel shelf, another to provide DC current to the HPA module⁶, and a spare DC connection.

The MASTR V PS is a negative ground power supply (the negative lead of each DC output is tied to chassis ground). Over voltage, under voltage, and over current protection is built-into the AC input, and each DC output. In the event one of the protection circuits is triggered, only the affected DC output is shut down until the protection circuit is reset.

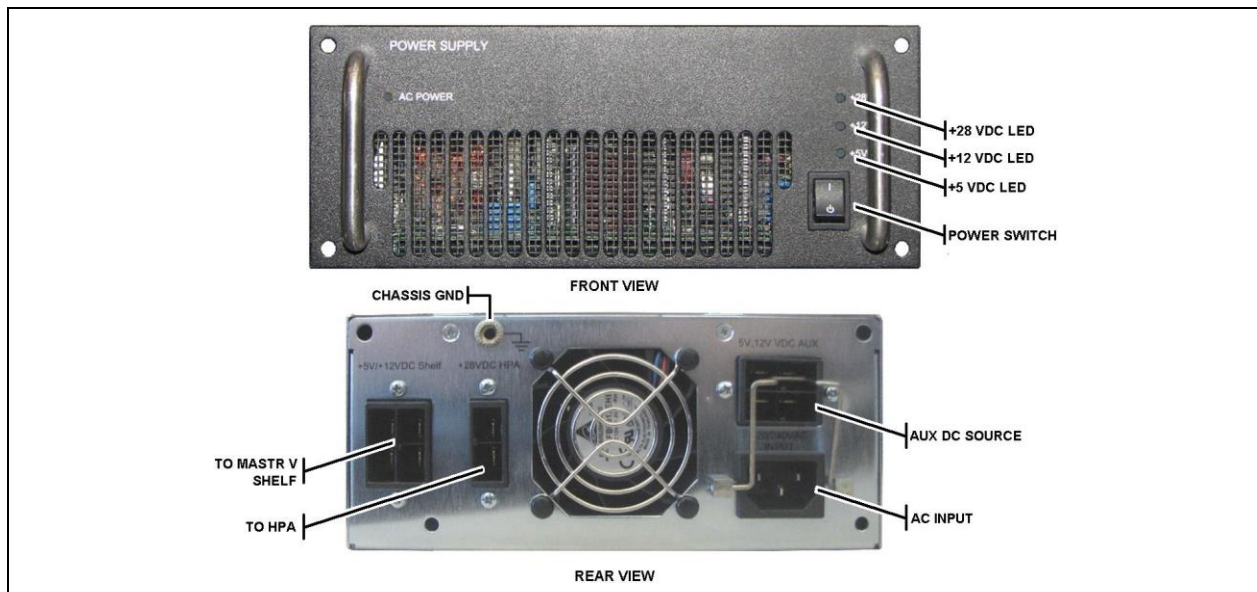


Figure 4-9: Power Supply Module

⁶ Not used in MASTR V Transceiver configuration.

Table 4-12: Backplane – Module DC Power Connector Pinout

CONNECTOR LABEL	DESCRIPTION	DIAGRAM (As viewed when facing the rear of the PS)
+5V/+12VDC Shelf	To MASTR V T/R Shelf	<p>The diagram shows a connector with four pins. The top-left pin is labeled +12 VDC, the top-right pin is labeled +5 VDC, the bottom-left pin is labeled GND, and the bottom-right pin is labeled GND. The connector is labeled +5V/+12VDC Shelf at the top.</p>
+28VDC HPA ⁶	To HPA Module	<p>The diagram shows a connector with two pins. The top pin is labeled +28 VDC and the bottom pin is labeled GND. The connector is labeled +28VDC HPA at the top.</p>
5V,12V VDC AUX	Auxiliary/Spare	<p>The diagram shows a connector with four pins. The top-left pin is labeled +5 VDC, the top-right pin is labeled GND, the bottom-left pin is labeled +12 VDC, and the bottom-right pin is labeled GND. The connector is labeled 5V,12V VDC AUX at the top.</p>

Table 4-13: PS Front Panel Indicators and Switches

INDICATOR/CONTROL	INDICATOR COLOR	DESCRIPTION
+28 VDC LED	Off	● OFF or not operational
	Green Solid	● Operational
+12 VDC LED	Off	● OFF or not operational
	Green Solid	● Operational
+5 VDC LED	Off	● OFF or not operational
	Green Solid	● Operational
AC Power LED	Off	● OFF or not operational
	Green Solid	● Operational
ON/OFF Switch	N/A	AC Power ON/OFF

4.4.6 AC and DC Power Distribution

AC powered sites use specially designed dual input AC power distribution strips, model DP-016706-001 (for 120VAC applications, shown in Figure 4-10) and DP-016706-002 (for 220VAC applications, not shown). Each AC power strip has two (2) circuit protected high current inputs (110 VAC, 20 Amp and 220VAC, 15 Amp, respectively). Each high-power input is distributed to three (3) AC outlets for a total of 6 outlets per power strip. The housing around two outlets on each circuit are silk screened with red as an indication of where to connect the high current MASTR V power supplies used at transceiver rack-ups. The red only designates use, not rating.



Figure 4-10: Dual input 120VAC Power Distribution Strip

DC powered sites use DC Power Distribution Blocks, models EA-555019-001 (low power) and EA-555019-002 (high power). Each DC Distribution Block is designed to distribute -48 VDC from two (2) DC input circuits. Like the AC model, distribution across two circuits reduces the area on the rack's rear rails required to mount multiple power strips and distributes the load across multiple circuits which minimizes the number of hardware devices which fail when circuit protections trips.



Figure 4-11: EA-555019-001 – -48 VDC Low Power DC Distribution Strip



Figure 4-12: EA-555019-002 – -48 VDC High Power DC Distribution Strip

DC-powered MASTR V sites may use the enhanced DC Power Distribution Blocks, models EA-555019-003 (low power) and EA-555019-004 (high power). Similar in function to the DC Power Distribution blocks shown in Figure 4-11 and Figure 4-12, the enhanced versions include connector assemblies for the DC input connections. The addition of DC input connectors provides ease of installation and improves performance of the MASTR V DC distribution. An external DC power disconnect device shall be provided and installed as part of the DC system supplying power to the MASTR V rack.



NOTE

For permanently connected equipment, a readily accessible disconnect device shall be incorporated external to the equipment.



Figure 4-13: EA-555019-003 – Enhanced -48 VDC Low Power DC Distribution Strip



Figure 4-14: EA-555019-004 – Enhanced -48 VDC High Power DC Distribution Strip

4.4.7 Cross-Connect Panel

The MASTR V IP Cross-connect panel, model number EA-555016-002, includes printed circuit board CB-555149-002 and a 2-RU high metal frame for accommodating 19-inch rack mounting the board. One or more Cross-connect panels are installed at all MASTR V P25 sites. Additional cabling at the Cross-connect panel is installed when a site is setup to support Phase 2.



NOTE

- - - P25 Trunked Phase 2 Operation - - -

- Cross-connect panels are installed at all MASTR V P25 Phase 2 equipped trunked sites which use two (2) or more Baseband modules.
- Additional cabling is installed at the Cross-connect panel to support P25 Phase 2.

The Cross-connect board provides distribution of timing signals between two (2) or more Baseband modules at a site. It also provides distribution of timing signals between two (2) or more racks or cabinets containing MASTR V transceiver shelves.

The timing signals passing through the Cross-connect board to each Baseband module are used to synchronize operations between each RF channel and ensure smooth transition between Control Channel, Working Channel, and timeslot operations.

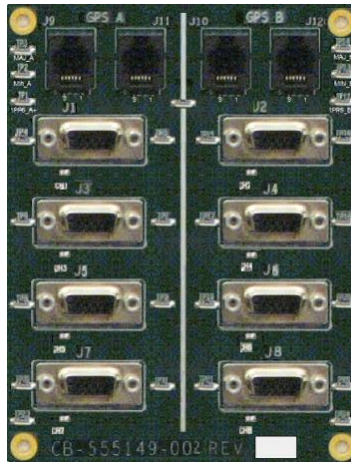


Figure 4-15: IP Simulcast Cross-Connect Board CB-555149-002

4.5 RACK AND CABINET ASSEMBLIES

This MASTR V transceiver configuration is available in an extra deep 86-inch x 46-RU open rack, part number BAT 150 196/22 (refer to Figure 4-16), an extra deep 86-inch x 45-RU cabinet, part number MA-555025 series (refer to Figure 4-17), and a seismic rated open rack, part number BAT150196/24 (refer to Figure 4-18). Each model supports installation of 19-inch rack mountable equipment. Cabinet, part number 14002-1000-11 (not shown), supports installations where CE/ETSI requirements apply.



Figure 4-16: 86-inch Open Rack Assembly



Figure 4-17: 86-inch Extra Deep Cabinet

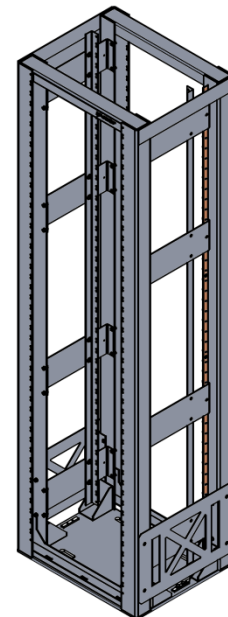


Figure 4-18: Seismic Rated Open Rack Assembly

4.5.1 DC-to-AC Inverter

DC-powered sites using the Harris Extra Deep Cabinet may require a DC-to-AC Inverter, part number A10-0326-001, to power the cabinet fan. Initial releases of the 86-inch Extra Deep Cabinet use an AC-powered cabinet fan for forced ventilation. The inverter is required to power this fan at DC-powered sites. Later models of the cabinet may include an optional DC-powered fan which would eliminate the inverter.



Figure 4-19: DC-to-AC Inverter Used to Power the Cabinet Fan at DC-Powered Sites

5. PROGRAMMING, TEST, AND DIAGNOSTICS

5.1 VIDA DEVICE MANAGER

Setup, configuration, and programming of a MASTR V P25 Trunked transceiver is accomplished through the use of the VIDA Device Manager programming software tool. VIDA Device Manager is an easy-to-use programming tool designed around a Windows-based file management system that permits users to configure and manage devices within their system. The user can save/open personalities using the Windows file system.

The user interface, known as the Device Management Console (DMC), allows users to configure and manage IP-accessible devices in their MASTR V radio system. It allows users to edit device Personalities and permits users to perform actions such as the following:

- Reset
- Read Version
- Load Code
- Read Personality
- Write Personality

The DMC stores device connection information and all personalities (by default) for the supported devices within the radio system. The information stored includes device definitions, device plug-ins, device Client plug-ins, device personalities, device code, device connections, and device details. The Repository provides an interface to access, modify, and create the information.

5.2 TEST AND DIAGNOSTICS

The MASTR V transceiver has built-in self diagnostics and fault reporting. Transceiver faults may be remotely monitored via fault reporting from one or more of the following resources:

- Via the VIDA network through the Regional Network Manager.
- By telnet session while connected locally to a MASTR V transceiver.

The TC module and BBP modules are capable of reporting fault information via the VIDA Network to the Regional Network Manager (RNM). The RNM has the ability to “Poll” the status of certain equipment, and “Trap” responses to log files. For more information regarding RNM *polling* and *trapping*, refer to the Regional Network Manager User Manual: MM1000018633.

6. REFERENCE MANUALS

The following table provides a listing of individual manuals that may be useful when installing and maintaining a MASTR V P25 Transceiver:

Table 6-1: Reference Manuals

REFERENCE MANUALS	MANUAL NUMBER
Standard For Site Grounding and Protection Manual	AE/LZT 123 4618/1
Electrostatic Discharge Protection Manual	LBI-38737
Specification, Guidelines & Practices Manual	LBI-39185
Antenna Systems Manual	LBI-38983
MASTR V P25 Base Station Installation Manual	MM-015040-001
MASTR V P25 Base Station Application/Assembly Diagrams Manual	MM-015041-001
VIDA Device Manager User's Manual	MM-016371-001
VIDA Network Regional Network Manager User's Manual	MM1000018633

7. CUSTOMER SERVICE

7.1 TECHNICAL SUPPORT

The Technical Assistance Center's (TAC) resources are available to help with overall system operation, maintenance, upgrades and product support. TAC is the point of contact when answers are needed to technical questions.

Product specialists, with detailed knowledge of product operation, maintenance and repair provide technical support via a toll-free (in North America) telephone number. Support is also available through mail, fax and e-mail.

For more information about technical assistance services, contact your sales representative, or contact the Technical Assistance Center at the following:

North America:	1-800-528-7711
International:	1-434-385-2400
Fax:	1-434-455-6712
E-mail:	PSPC_tac@harris.com

7.2 TECH-LINK ONLINE SERVICES

For more information about this and other Harris PSPC products, check out our Tech-Link service at:

<https://premier.pspc.harris.com/>

Tech-Link is a one stop link to Technical Documentation (downloadable PDFs) - Software Revisions - Feature Encryption - pictorials of parts and accessories - and other information pertaining to our products. Information that will enhance your service efforts -- 24 hours a day, 7 days a week.

7.3 CUSTOMER CARE

If any part of the system equipment is damaged on arrival, contact the shipper to conduct an inspection and prepare a damage report. Save the shipping container and all packing materials until the inspection and the damage report are completed. In addition, contact the Customer Care center to make arrangements for replacement equipment. Do not return any part of the shipment until you receive detailed instructions from a Harris representative.

Contact the Customer Care center at <https://www.harris.com//solution/pspc-customer-service> or:

North America:

Phone Number:	1-800-368-3277
Fax Number:	1-321-409-4393
E-mail:	PSPC_CustomerFocus@harris.com

International:

Phone Number:	1-434-455-6403
Fax Number:	1-321-409-4394
E-mail:	PSPC_InternationalCustomerFocus@harris.com

8. WARRANTY

Please register this product within 10 days of purchase. Registration validates the warranty coverage, and enables Harris to contact you in case of any safety notifications issued for this product.

Registration can be made on-line at the Customer Care center webpage:

<https://www.harris.com/solution/pspc-customer-service>

While on the webpage, please review the applicable battery and/or product warranty literature.

About Harris Corporation

Harris Corporation is a leading technology innovator, solving customers' toughest mission-critical challenges by providing solutions that connect, inform and protect. Harris supports government and commercial customers in more than 100 countries and has approximately \$6 billion in annual revenue. The company is organized into three business segments: Communication Systems, Space and Intelligence Systems and Electronic Systems. Learn more at harris.com.

FLORIDA

NEW YORK

VIRGINIA

BRAZIL

UNITED KINGDOM

UAE

SINGAPORE

