



2.2 Safety Notes Regarding Operation

⇨ **Warning to our Users :**

In accordance to the rules and regulations of the FCC, any changes or modifications made to our transmitter or receiver by you without the express written consent of HBC-radiomatic, Inc. could void your authority to operate the equipment under FCC's rule 15.21 !

- ⇨ Before using the radio control system for the first time, read these operating instructions completely and carefully.
- ⇨ In case of a defect, an emergency situation and whenever a malfunction occurs in the working area of the radio system, it is required to de-energize the radio equipment immediately until the cause of the fault has been located and repaired !
 - Switch OFF the transmitter via the EMERGENCY-STOP pushbutton.
 - Disconnect the connecting cable from the receiver.
- ⇨ During breaks and at the end of work, disconnect the transmitter by means of the key switch or the EMERGENCY-STOP pushbutton.
- ⇨ Be cautious when working with the radio control. – When using the radio control, choose a stable location from which you can see the entire working area.
- ⇨ Usage of radio remote control systems outside of manufacturer's guidelines (section 3) may result in invalidity of the guarantee.



2.3 Safety Notes when Operating the Transmitter

- ⇨ Before you start working, always verify the operation of the EMERGENCY-STOP pushbutton.
- ⇨ It is not allowed to leave a connected transmitter and not supervise it.
- ⇨ In case of an emergency and in case of all sorts of problems in the working range of the machinery or in case of a technical failure of the radio control, you must stop the crane or machine by pressing the EMERGENCY-STOP pushbutton !
- ⇨ During breaks and at the end of work, disconnect the transmitter by means of the "ON / OFF" toggle switch.
- ⇨ The operation of the transmitter is permissible only with the carrying set included with the transmitter (possibility of mixing up the controls) !