

Chrome Remote Control

How to use the remote control

You can use the remote control that comes with your Chrome system from any direction, when the remote control is within 20 feet of the receiver.

The unique pairing of the remote control with the receiver allows more than one Chrome system to be used in the vicinity of other Chrome systems. The provided remote control and receiver are paired before delivery.

The remote control is powered by a small battery. The battery will last for approximately one year under normal daily operation. When the battery has depleted, instructions are provided in this guide to replace the battery.

The following table describes the most common functions of the buttons on the remote control provided with your Chrome system. Some buttons have more than one function, depending on what is displayed on the display at the time you press the button.

Remote Control navigation



Press the Mute button to mute your microphone



Press the Hang-Up button to end the meeting or call



Press the Menu Key to display the toolbar buttons (only available within a call)



Press the Select button (in the middle of the D-Pad) to select the currently highlighted display element. Press the Left, Right, Up, or Down buttons of the D-Pad to highlight an on-display element.

Keyboard navigation



Pressing a keyboard key provides for entry of one of three options: a lower case character, an upper case character, or a special character

Press a keyboard key to enter a lower-case character.



Press and hold the Shift key and press a keyboard key to enter an upper-case character



Press and hold the Function key and press a keyboard key to enter a special character, as denoted by the green color character found on that key



Press the Backspace key to delete the previous character entry



Press the Enter key to signal completion of a text entry, or select the currently highlighted on-display element.



Press the Up, Down, Left or Right arrow keys to highlight an on-display elements



Press the Menu key to display the toolbar buttons (only available within a call)

Replace Remote Control Battery

Follow these steps to remove and replace the battery of the remote control:

1. Locate the narrow end of the remote control with the battery compartment. It will be the end that has an open slot to fit a screwdriver.
2. Place a small flat head screwdriver in the slot of the battery compartment and slowly lift the screwdriver toward the front of the remote control (away from the keyboard side).
3. The battery holder will pop-out just enough to easily extract the holder with fingers.
4. Remove the depleted battery from the battery holder.
5. Replace with a new CR2032 battery. Minus (-) side of the battery will be up. There is only one way for the battery to easily fit into the battery holder.
6. Align the battery holder with the battery compartment of the remote control and push into place. Battery holder will be fully contained within the remote control when correctly in position.

FEDERAL COMMUNICATION COMMISSION INTERFERENCE STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Safety battery statement:

⚠ WARNING

DO NOT INGEST BATTERY. CHEMICAL BURN HAZARD

OR

⚠ WARNING

DO NOT INGEST BATTERY. CHEMICAL BURN HAZARD

[The remote control supplied with] This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.

Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children.

If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.