

Setting Up the Remote Control

 
Setup Remote to Control the Digital Adapter

RF Remote Pairing Process:

When multiple remotes work in a shared space, interference can result. To avoid this problem, the remote must be paired with the Digital Adapter.

Step 1

Turn on your TV using the buttons on the TV or the TV remote. Make sure power is connected to your Digital Adapter and it is plugged into the TV.

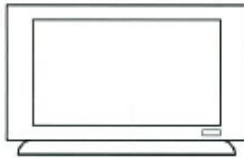

Note: Your TV must always be set to the proper channel (Ch 3 or Ch 4) or HDMI Input to match the output channel on the back of your Digital Adapter.

Step 2

 
Install the batteries (included in your kit) in your new remote control.

Step 3

Make certain no other Digital Adapter remote is in the area. Make sure power is connected to your Digital Adapter. Turn on your TV using the buttons on the TV or the TV remote (not a digital adapter remote in this instance).


Step 4

Press and hold both DTA POWER and SELECT keys at the same time. Once the red light on the remote turns on, then release both keys. Wait 10 seconds, a 3 digit validation code will display on the TV.

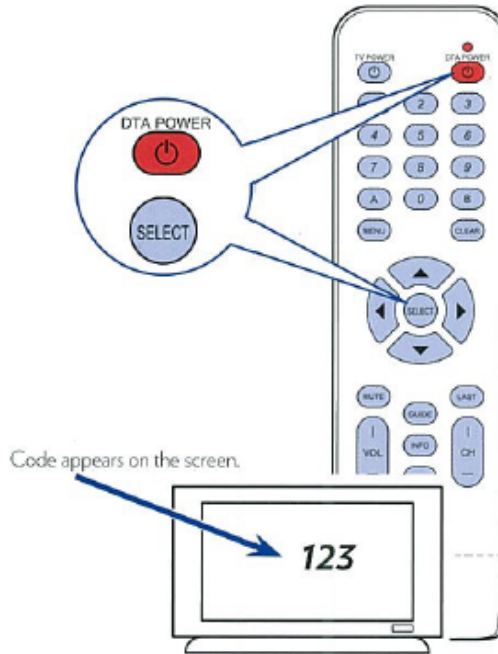

Step 5

 Enter the 3 digit code using the Digital Adapter remote. When remote is successfully paired with the Digital Adapter, the remote's red light will blink twice.

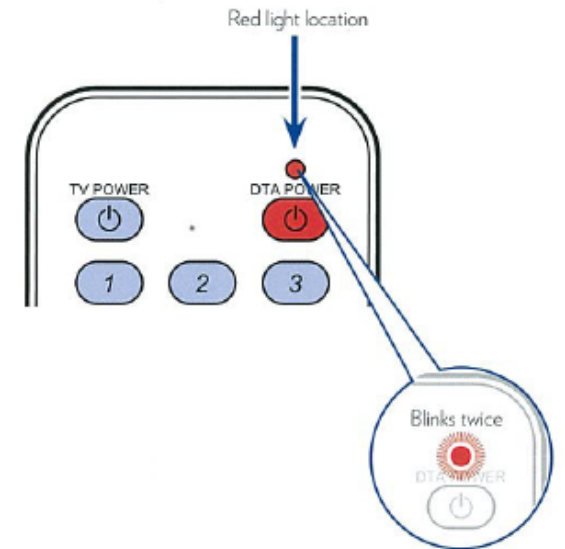


Proceed to back of this page to setup the Remote Control with your television.



Setup Remote to Control the Television

Step 6

 Press and hold both Digit **1** and Digit **3** keys together until the red light turns on.
Release both keys.
Keep your eyes on the Remote so you can watch the red light.

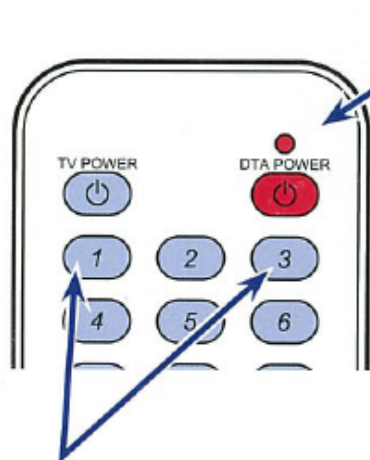


Keep your eyes on the remote so you can watch the red light.

Press and hold both buttons at the same time

Note: Your TV must always be set to the proper channel (Ch **3** or Ch **4**) or HDMI Input to match the output channel on the back of your Digital Adapter.

Step 7

 Point the new remote at the TV.
Press and hold the **TV POWER** key.
The remote will start searching for the right code while you are holding this key.
When the TV turns off, release the key within 2 seconds to lock in the code.

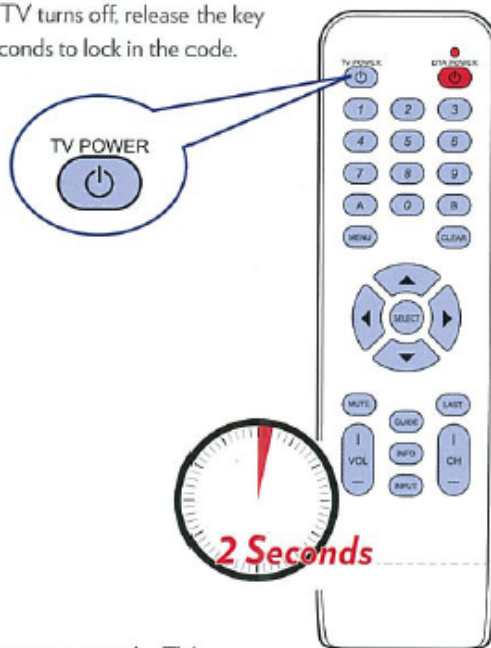

Step 8

Point the new remote at the TV.
Press **TV POWER** on your Remote to turn on your TV.
If your TV responds (*turns on*), then you have successfully programmed your Remote.

The setup of the Remote is now complete.

If you are not successful the first time, try again.

Two Remotes

If you were unable to program your remote, you will need to use two remotes to operate your TV:
the Digital Adapter Remote
and
the one that came with your TV.

Setting the Remote Volume

1. Use the remote control that came with your TV to adjust the volume to a comfortable level. This should be the last time you'll use this remote for volume control.
2. Going forward use only your Digital Adapter Remote to adjust volume up or down.

Caution:

Don't use your TV remote to change channels.
Your TV must always be set to the proper HDMI Input, Ch **3** or Ch **4** or you will see a snowy or blank screen.

Using your new remote control

Program your remote control

- A** Turn on your TV and tune it to the output channel you chose during installation (Ch. 3 or 4), or to the proper HDMI input.
- B** Install the batteries that were included in this kit in the remote.
- C** Press and hold the 1 and 3 buttons until the red light turns on, then release the buttons.
- D** Point the remote at the TV and press and hold the TV POWER button. When the TV turns off, release the button within 2 seconds.
- E** Try turning your TV back on with your new remote. If your TV responds, then you have successfully programmed your remote. If not, try repeating the above steps again.

Remote control functions

- 1** TV POWER: Turns TV On and Off once the Remote has been programmed.
- 2** VOLUME: Use VOLUME UP to raise volume and VOLUME DOWN to lower it.
- 3** CHANNEL: Use CHANNEL UP to advance one channel and CHANNEL DOWN to go back one channel.
- 4** MENU: Press to display Menu screen.
- 5** CLEAR: Erases the last digit entered.
- 6** MUTE: Press to turn sound on or off.
- 7** SELECT: Press to select the item the cursor is pointing to.
- 8** NAVIGATION KEYS: Press to move cursor UP, DOWN, LEFT and RIGHT.
- 9** INFO: Press to display current channel information.
- 10** INPUT: Press to toggle among TV Input signals.
- 11** LAST: Press to return to the last previously viewed channel.

For more info, please refer to the Programming Guide included with your remote, or visit us at twc.com/pyr

IMPORTANT NOTES: You may need to keep your original TV remote to perform advanced functions and to adjust Picture and Audio Settings. The Digital Adapter will remain on at all times, so there's no need to press the DTA POWER button. The GUIDE button is currently inactive.



FCC Compliance Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device is intended to be attached to a receiver that is not used to receive over-the-air broadcast signals. Connection of this device in any other fashion may cause harmful interference to radio communications and is in violation of the FCC Rules, part 15.

FEDERAL COMMUNICATIONS COMMISSION INTERFERENCE STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.