



ELAIO18501

Quick Start Guide All-in-One PC



**Thank you for purchasing this EPIK Learning™ product.
For more information, or to learn about other EPIK Learning products,
please visit us at: www.epiklearning.com.**

Introduction and Table of Contents

1 INTRODUCTION

This Quick Start Guide will help you get started with your new EPIK All-in-One PC. For additional assistance please email us at support@epiklearning.com, visit us at www.epiklearninglearning.com/support, or call us at (888) 999-1244.

This Quick Start Guide is intended to help you quickly become familiar with key features and functionality of your new All-in-One PC. For more information, or to learn about other EPIK products, please visit us at www.epiklearning.com

1.1 TABLE OF CONTENTS	Page
1.0 Overview.....	2
2.0 Precautions Before Use.....	2
3.0 Key Layout and Definitions.....	3
4.0 Keyboard.....	3
5.0 Introduction to Desktop.....	4
6.0 Intro to PC Interface	4
7.0 Start Menu	6
8.0 Multitasking Operating Interface.....	8
9.0 Basic Operations.....	8

Overview and Notes

1.0 OVERVIEW

Thank you for purchasing the EPIK All-in-One PC—all the style you want and the power you need in an elegant and efficiently designed Windows desktop featuring an 18.5" 1366 x 768 panel display, sleek keyboard and mouse and Intel® Bay Trail Quad Core Processor. You can store all your important documents, pictures and movies with 32GB of memory and 2GB of storage [Note: The storage capacity can also be expanded to up to 160 GB using the Micro Card Reader slot.] The EPIK All-in-One PC is your answer for a stylish, full-featured PC for home, work and play!

2.0 Precautions Before Use

 
In order to prevent injury or damage to your new PC, please read the following:

- The EPIK All-in-One PC is a high-density electronic product. DO NOT attempt disassemble the device.
- Please do not drop or bang the device.
- Avoid using this product in conditions with extreme high or low temperatures, high humidity, excessive dust, strong magnetic or static environments, and avoid long-term exposure to the sun.
- The product may be cleaned with a damp cotton cloth; the use of any chemical cleaning fluid is prohibited. Please keep the product away from water at all times.
- If water or other liquid is spilled onto the product, close it immediately and do not use until the product is completely dry.
- Please use approved power chord and accessories only. The use of any other type of products would be a breach of warranty and may be dangerous.
- If you have any questions regarding the use of this product, please contact your local dealer or contact the Epik Learning Customer Service Center via email at support@epiklearning.com or call us directly at (888) 999-1244.
- Epik Learning will not be held responsible for any files lost due to product damage, repair or other causes. Please be sure to follow instructions in the User Guide and backup your files in a timely manner.


Appearance and Buttons

3.0 Key Layout and Definitions

Front view

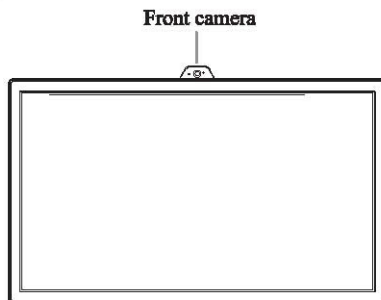

Rear view

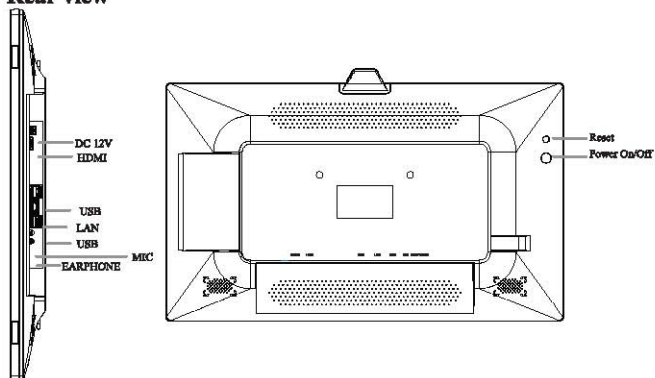 

4.0 Keyboard

The All-in-One PC includes a keyboard but can be configured to accommodate other manufacturer's keyboards as well.

Introduction to Desktop

5.0 Introduction to Desktop

Windows 10 start screen: When powered on, you will see a variety of programs and apps appearing on your screen (see image below). You will need to log on to your Microsoft account before you can run the programs. Once you log on, simply click on a box to launch the program.



6.0 Introduction to PC Interface

In addition to the programs included on the start screen, you can start other programs on your All-in-One PC



Introduction to PC Interface (Cont'd)

If you would like to add additional programs to the start interface or taskbar see figure below) you can do so by: (1) Clicking the properties icon, (2) Right-Clicking the application (3) Clicking the Pin to start or pin to taskbar as shown in the figure on the below.



Conversely, if you would like to remove certain programs in the start screen or taskbar, you can do so by: (1) Right-Clicking the application, (2) Clicking the "Unpin from Start" or "Unpin this program from taskbar"



Start Menu



7.0 Start Menu

Under PC mode, press the Start icon and the Start Menu will display (including: Start, Device, Setup, Share, and Search Program).



File Explorer, Settings, Power, and All Apps should all be viewable.



Power ON to begin usage, or Power OFF to Sleep,
Shut down or Restart your PC.

Start Menu (Cont'd)

File Explorer

File Explorer allows you to search the files and programs on your PC.



Settings

Settings allows you to customize your setup on your PC.



 
All apps

All Apps allows you to add additional programs to your PC.

Search Menu



Action Center

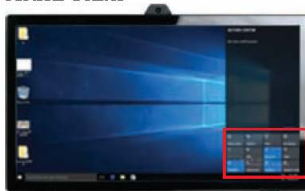

Setup Menu

 


The Action Center is a notification center allowing you to make quick changes to settings (e.g., Wi-Fi, settings, Bluetooth settings, etc.).

Multi-tasking & Basic Operations



8.0 Multi-tasking Operating interface

If you click the Task View, all running applications will be displayed on your screen. At this point, applications can easily be launched or deleted.

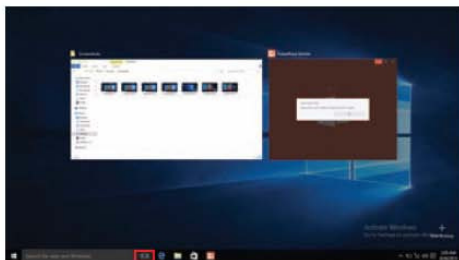

9.0 Basic Operations

  1. Sleep, Shut down and Restart

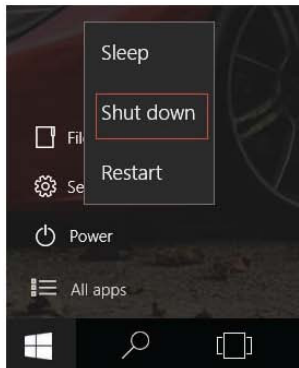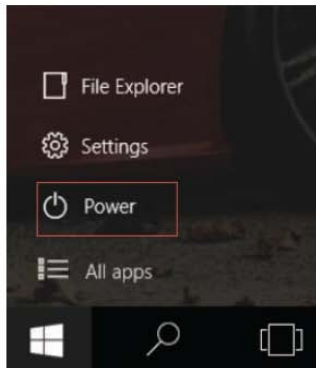

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.



For additional assistance please email us at
support@epiklearning.com or call us at (888) 999-1244.